


ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

800319 Bookcase

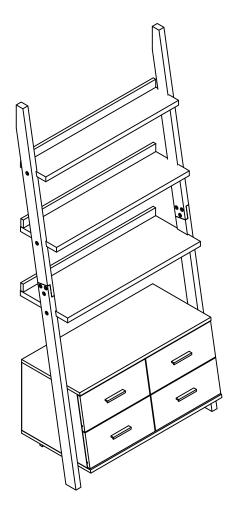

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

- 1.Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3.Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



Warning!!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishment.






ASSEMBLY TIME

30 MINUTES

PARTS IDENTIFICATION

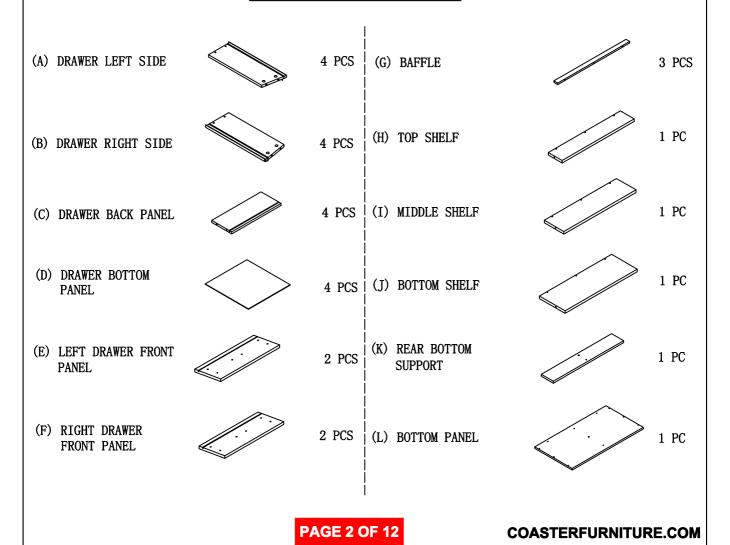




PARTS IDENTIFICATION

(M) BOTTOM SLAT



 (R) BACK PANEL



1 PC

(N) LEFT SIDE PANEL



1 PC

1 PC

(S) LEFT BOTTOM LEG



1 PC

(0) DRAWER DIVIDER



(T) LEFT TOP LEG 1 PC

 


1 PC

(P) RIGHT SIDE PANEL



1 PC



1 PC

(Q) TOP



(V) RIGHT TOP LEG



1 PC



HARDWARE IDENTIFICATION


				
1	LARGE SCREW	ø 4×30mm	(x)xxxxx>	16pcs
2	SMALL CAM BOLT	L20mm		16pcs
3	SMALL CAM LOCK	ø12mm		16pcs
4	HANDLE	64#		4pcs
5	DOOR-HANDLE SCREW	ø4×22mm		8pcs
6	DOWEL	ø8×25mm		19pcs
7	LARGE CAM BOLT	L29mm		7pcs
8	LARGE CAM LOCK	ø15mm		7pcs
9	NAIL		0	24pcs
10	CONNECTION IRON 1	70×24×3mm	[00 00]	2pcs
11	SHORT MACHINE SCREW	M6×12mm		8pcs
12	HAMMER BOLT	M6×55mm		6pcs
13	HAMMER NUT	ø10×15mm		6pcs
14	ALLEN WRENCH	M4mm		1pc
15	STICKER	ø22mm	0000	18pcs
16	LARGE MACHINE SCREW	M6×25mm		8pcs
17	STICKER	Ø13mm		6pcs
18	INTERNAL THREAD SCREW	M6mm		6pcs
19	LARGE FLAT HEADED SCREW	M6x20mm		6pcs
20	LARGEST SCREW	ø4×35mm	*) xxxxxxx >	9pcs
21	WASHER Ø	8xø16x2mm		6pcs
22	THE RESTRAINT STRAP	197×5×1mm	<u>minimuminum</u>	1pc
23	BRACKET	12×12×1mm		2pcs
24	SMALL SCREW	ø4x25mm	()	1pc
25	WALL SCREW	ø5x40mm	()	1pc
26	PLASTIC ANCHOR	Ø8x40mm		1pc
27	GLUE			1pc

PAGE 4 OF 12


ASSEMBLY INSTRUCTIONS

STEP 1



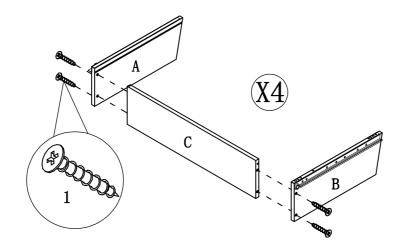

STEP 2

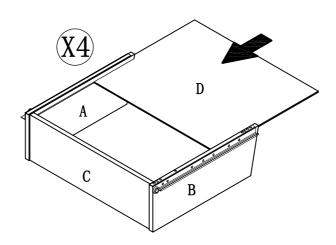


PAGE 5 OF 12


ASSEMBLY INSTRUCTIONS

COASTER

STEP 3

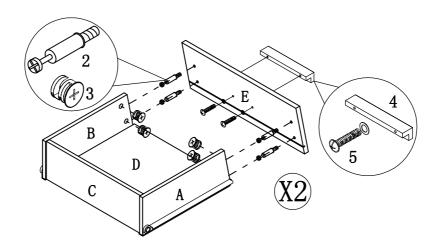

STEP 4

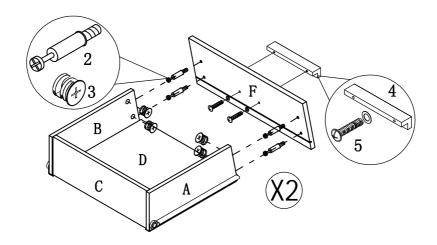


PAGE 6 OF 12


ASSEMBLY INSTRUCTIONS

STEP 5



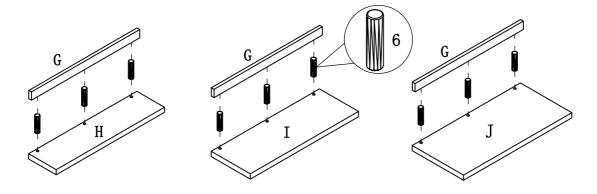


STEP 6

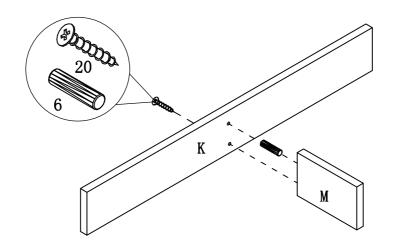


PAGE 7 OF 12

ASSEMBLY INSTRUCTIONS

STEP 7

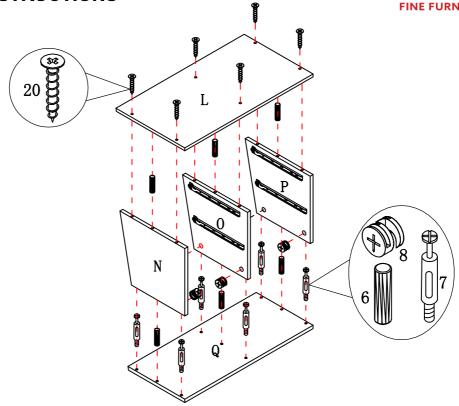

STEP 8

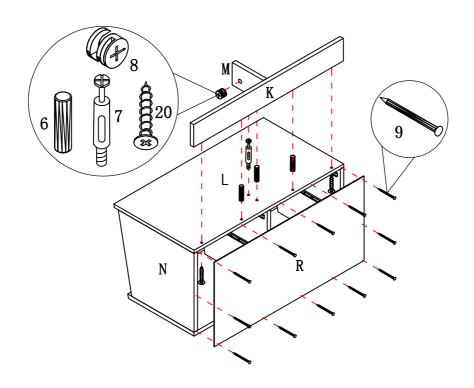


PAGE 8 OF 12

ASSEMBLY INSTRUCTIONS


AGOEMBET MOTROGROM

STEP 9



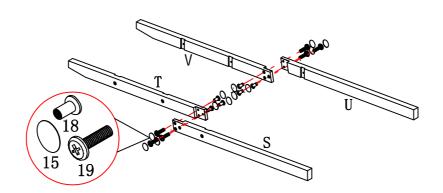

STEP 10

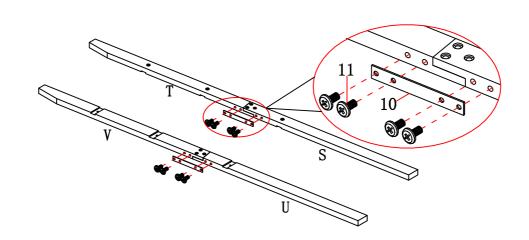


PAGE 9 OF 12

ASSEMBLY INSTRUCTIONS


COASTER


TED 44

STEP 11

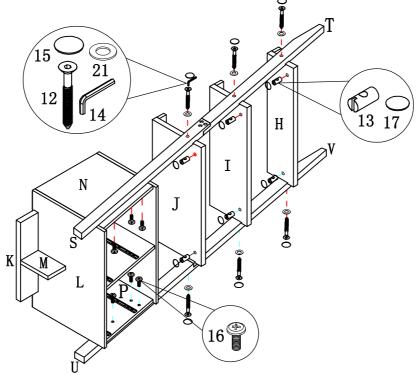

STEP 12

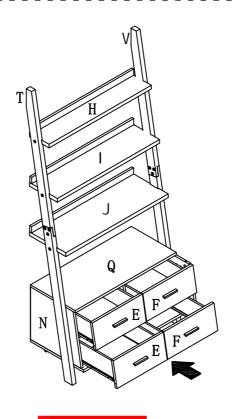


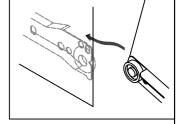

PAGE 10 OF 12

DIMENSION



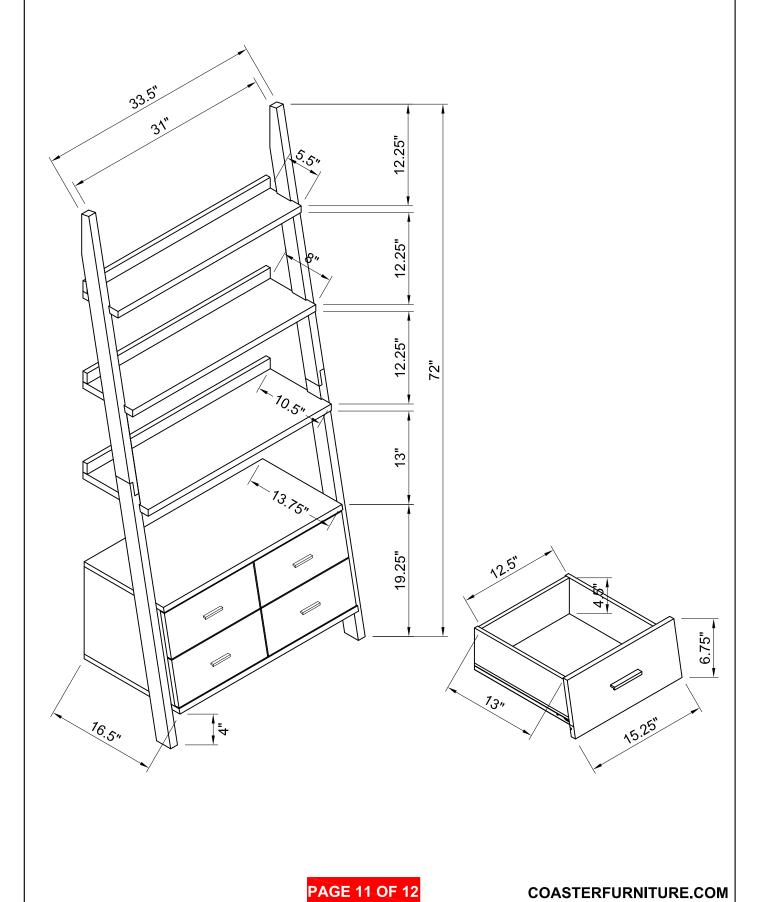



ANTI-TIPPING INSTALLMENT INSTRUCTIONS FURNITURE TIPPING RESTRAINT

WARNING

Injury may result from tipping furniture.

This restraint may protect against tipping furniture.

Do not allow children to climb on furniture.


This restraint is not a substitute for proper adult supervision.

Failure to detach this restraint before moving the furnituremay result in injury and damage.

This tip restraint must be attached to a wall stud using long screw enclosed.


STEP 1

Attach a bracket securely to the back top rail to the furniture using short screw provided, through the smaller hole.

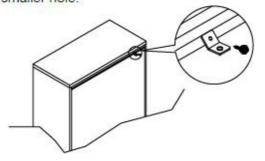

STEP 2

Locate the other bracket on the wall over a wall stud and two inches below the mounting bracket secured to the back of the furniture. Attach the wall stud using the long screw provided, through the smaller hole.

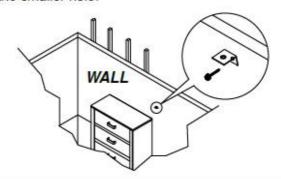

COASTERFURNITURE.COM

STEP 3

Place the furniture into position so both mounting brackets are vertically in line. Lace the end of the restraint strap through the larger hole in each mounting bracket. Bring both ends together and slide the flat end through the locking and draw it until all slack is removed. Confirm that the strap is securely laced and locked.

PAGE 12 OF 12

