


ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

800338 Ladder Bookcase

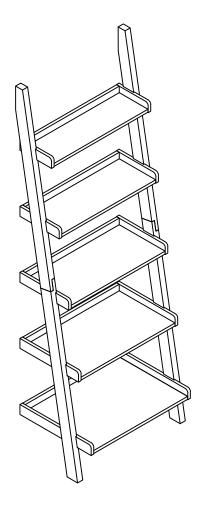

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

- 1.Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3.Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



Warning!!


- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishment.





ASSEMBLY TIME

30 MINUTES

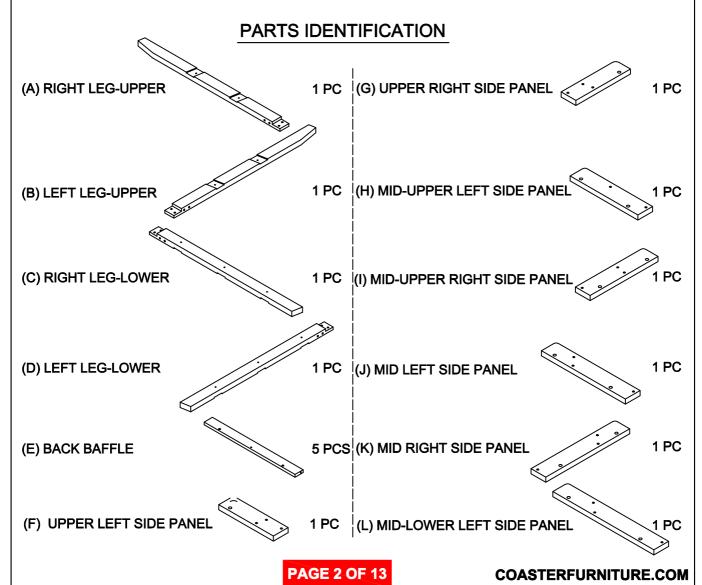

ITEM:800338 **COASTER** PARTS IDENTIFICATION (Q) MID-UPPER SHELF (M) MID-LOWER RIGHT SIDE PANEL 1 PC (R) MID SHELF (N) LOWER LEFT SIDE PANEL (S) MID-LOWER SHELF (O) LOWER RIGHT SIDE PANEL 1 PC (T) LOWER SHELF (P) UPPER SHELF 1 PC **PAGE 3 OF 13 COASTERFURNITURE.COM**




HARDWARE IDENTIFICATION


1	SELF-TAPPING SCREW	Ø4x35mm	AMMANANA.	15pcs
2	CHAMFER SELF-TAPPING SC	CREW Ø4.2×65mm	⊗ >	10pcs
3	SMALL FLAT SCREW	Ø6×12mm		8pcs
4	LARGE FLAT SCREW	Ø6 × 20mm		4pcs
5	CAP SCREW	$M6 \times 11$ mm		4pcs
6	CONNECTION PLATE	$170 \times 24 \times 3$ mm		2pcs
7	WOODEN DOWEL	Ø8 × 25mm		28pcs
8	LARGE STICKER	Ø22mm	0000	8pcs
9	SMALL STICKER	Ø13mm	0000	30pcs
10	SELF-TAPPING SCREW	Ø4x30mm	«CCCCCCC(%)	10pcs
11	THE RESTRAINT STRAP	$197{ imes}5{ imes}1$ mm	<u></u>	1pc
12	BRACKET	$12 \times 12 \times 1$ mm		2pcs
13	SMALL SCREW	Ø 4x25mm	()	1pc
14	WALL SCREW	Ø 5x40mm	()	1pc
15	PLASTIC ANCHOR	Ø 8x40mm	(TABLET	1pc
16	GLUE			1pc

ASSEMBLY INSTRUCTIONS

FINE FURNITURE


STEP 1

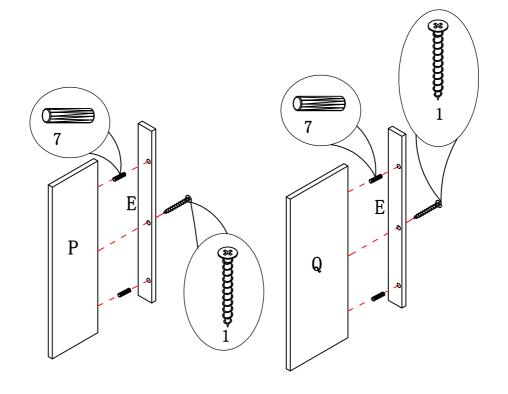


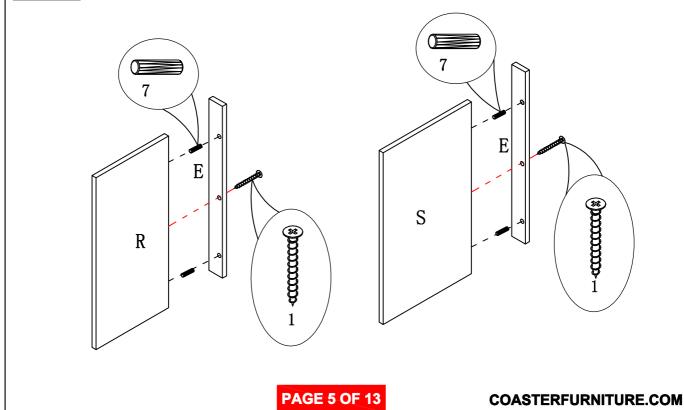

ASSEMBLY INSTRUCTIONS

FINE FURNITURE

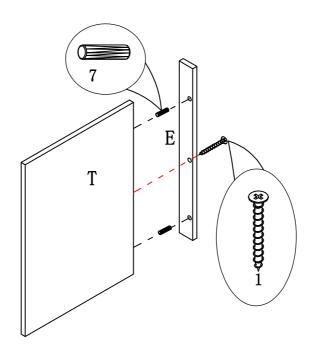


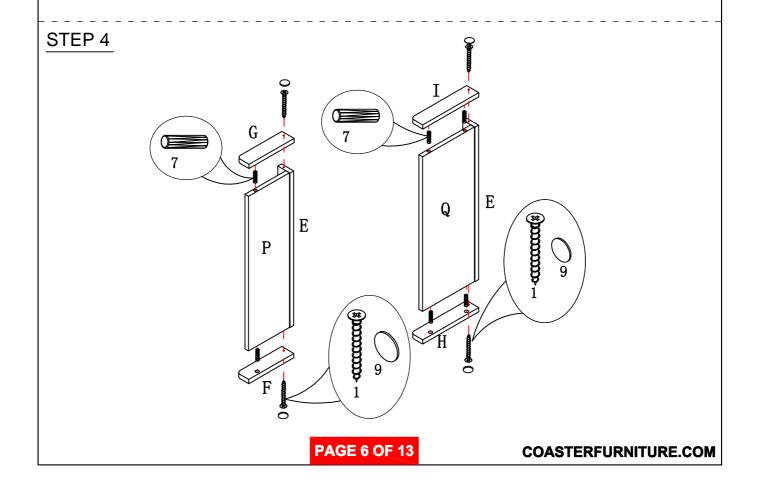


ASSEMBLY INSTRUCTIONS

STEP 5



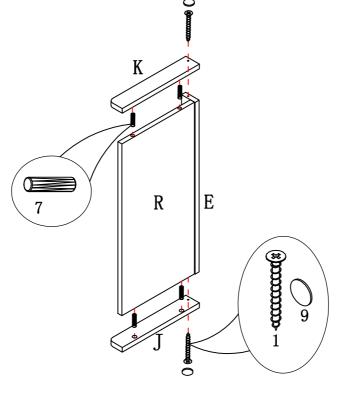



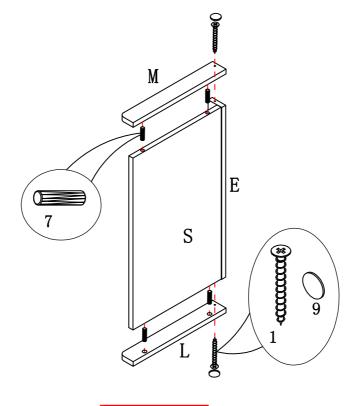

PAGE 7 OF 13


COASTERFURNITURE.COM

ASSEMBLY INSTRUCTIONS


STEP 7



COASTERFURNITURE.COM

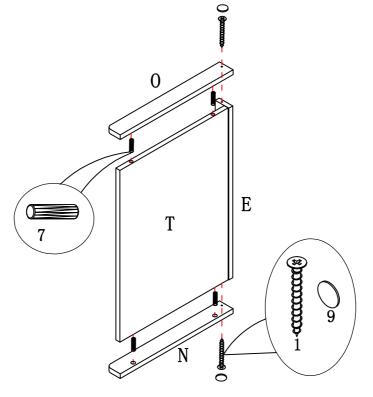

STEP 8

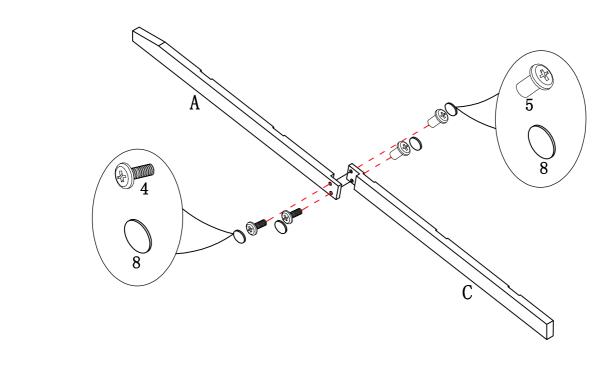


PAGE 8 OF 13


ASSEMBLY INSTRUCTIONS

COASTER

STEP 9

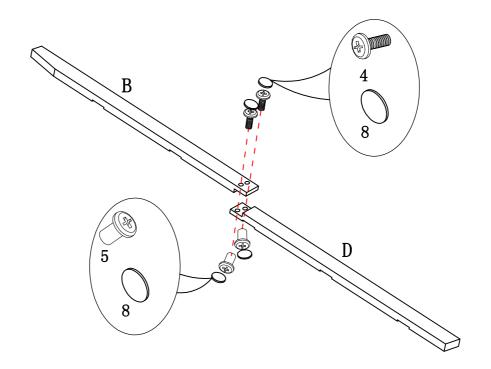

STEP 10

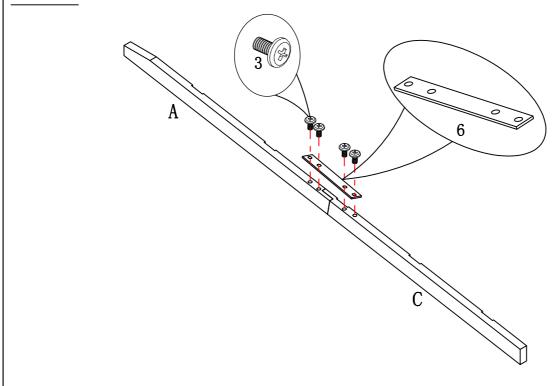



PAGE 9 OF 13

COASTERFURNITURE.COM

ASSEMBLY INSTRUCTIONS




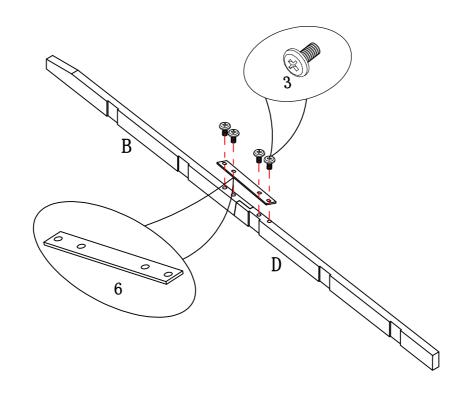

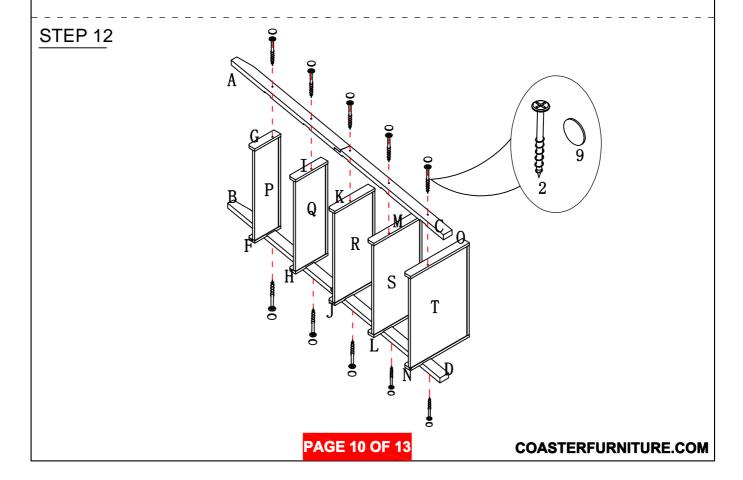

ASSEMBLY INSTRUCTIONS STEP 13



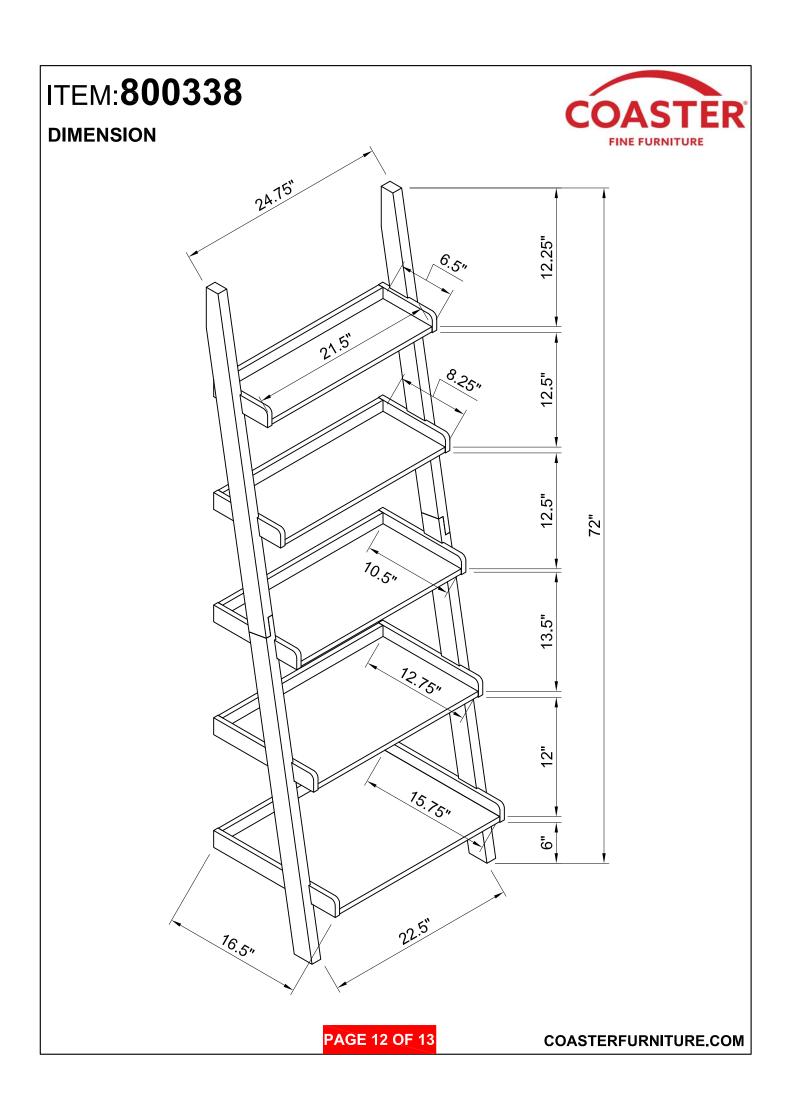



ANTI-TIPPING INSTALLMENT INSTRUCTIONS FURNITURE TIPPING RESTRAINT

WARNING

Injury may result from tipping furniture.

This restraint may protect against tipping furniture.

Do not allow children to climb on furniture.


This restraint is not a substitute for proper adult supervision.

Failure to detach this restraint before moving the furnituremay result in injury and damage.

This tip restraint must be attached to a wall stud using long screw enclosed.


STEP 1

Attach a bracket securely to the back top rail to the furniture using short screw provided, through the smaller hole.

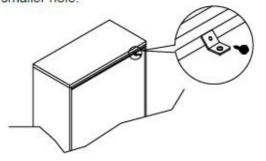

STEP 2

Locate the other bracket on the wall over a wall stud and two inches below the mounting bracket secured to the back of the furniture. Attach the wall stud using the long screw provided, through the smaller hole.

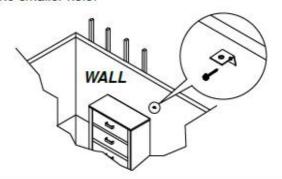

COASTERFURNITURE.COM

STEP 3

Place the furniture into position so both mounting brackets are vertically in line. Lace the end of the restraint strap through the larger hole in each mounting bracket. Bring both ends together and slide the flat end through the locking and draw it until all slack is removed. Confirm that the strap is securely laced and locked.

PAGE 13 OF 13

