

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

182082 WINE CABINET

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

Remove hardware from box and sort by size.
 Please check to see that all hardware and parts are present prior to start of assembly.
 Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.

WARNING!

Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
 This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

90 MINUTES

PARTS IDENTIFICATION

Α	LEFT SIDE PANEL	1 PC	G	LOWER BACK PANEL	2 PCS
В	RIGHT SIDE PANEL	1 PC	н	LEFT DOOR	1 PC
С	MIDDLE DIVIDER PANEL	1 PC	I	RIGHT DOOR	1 PC
D	BOTTOM PANEL	1 PC	J	UPPER LEFT SIDE PANEL	1 PC
E	LOWER CROSS PANEL	2 PCS	ĸ	UPPER RIGHT SIDE PANEL	1 PC
F	TOP PANEL	1 PC	L	UPPER DIVIDER PANEL	1 PC

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.



M	UPPER SMALL DIVIDER PANEL	2 PCS	R	UPPER BACK PANEL	1 PC
N	UPPER CROSS PANEL	1 PC	S	LEG FRAME	2 PCS
0	UPPER SMALL CROSS PANEL	6 PCS	Т	UPPER CROSSBAR	2 PCS
Р	UPPER SMALL TOP PANEL	1 PC	U	LOWER CROSSBAR	1 PC
Q	MIDDLE BACK PANEL	1 PC	V	GLASS HOLDER	1 PC

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.




HARDWARE IDENTIFICATION


Z							
NO	DESCRIPTION	FIGURE	Q'TY	NO	DESCRIPTION	FIGURE	Q'TY
1	GLUE 40g		1 PC	12	BOLT M6x43mm BLK		6 PCS
2	WOODEN DOWEL Ø8x30mm		48 PCS	13	BOLT Ø7x32mm BLK		4 PCS
3	CAM BOLT Ø7x35.5mm SR		22 PCS	14	SCREW Ø5x35mm BLK		4 PCS
4	CAM LOCK Ø15x12mm SR		26 PCS	15	FLOOR PROTECTOR 20x20mm		4 PCS
5	SCREW Ø4.5x42mm SR	ATTITUTE (M)	8 PCS	16	ALLEN WRENCH 4mm SR		1 PC
6	WOODEN DOWEL Ø8x50mm		10 PCS	17	FIXER		6 PCS
7	CAM BOLT Ø7x63mm SR	022	2 PCS	18	FIXER SCREW Ø3x19mm SR		6 PCS
8	HANDLE BLK		2 PCS	19	SCREW Ø4x18mm SR		4 PCS
9	HANDLE BOLT BLK		2 PCS	20	STICKER Ø20mm		5 PCS
10	HINGE Ø35mm SR		4 PCS	21	SCREW DRIVER		1 PC
11	HINGE SCREW Ø4x15mm SR	attitut (f)	16 PCS				


Z10 not included in blister packaging.


NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

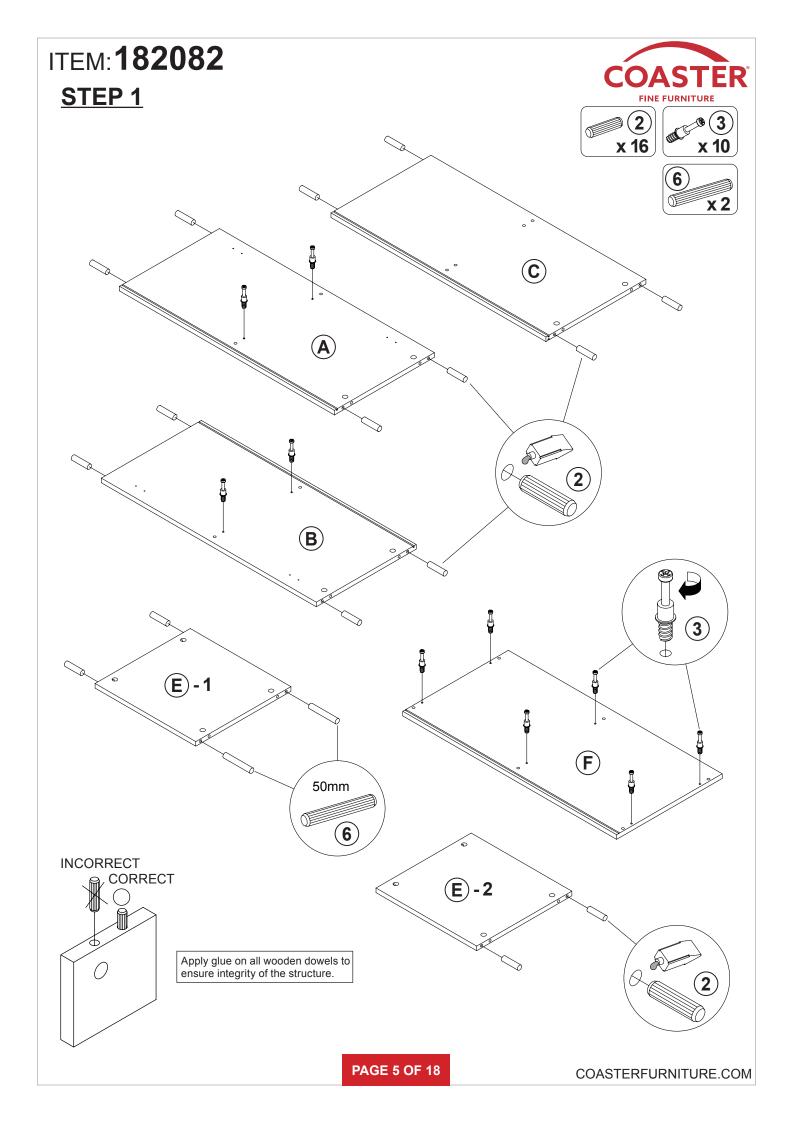


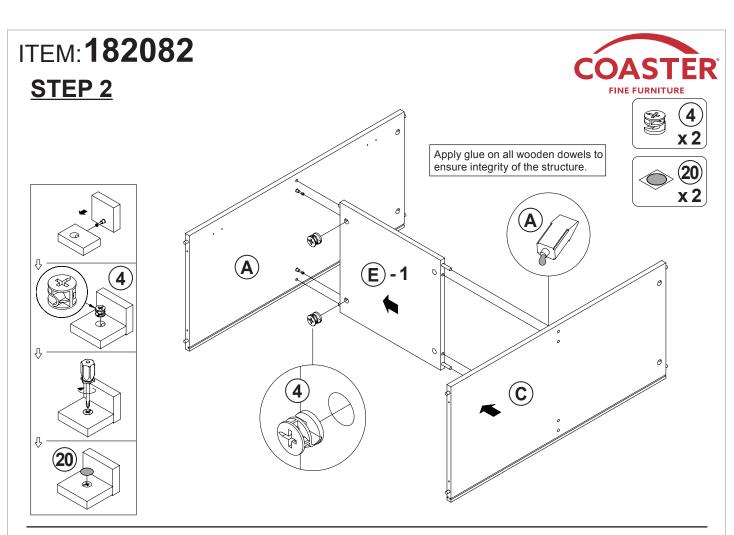

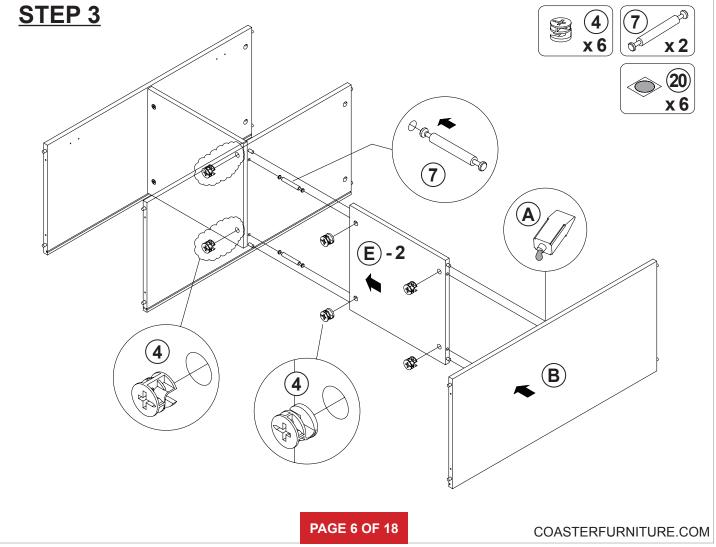


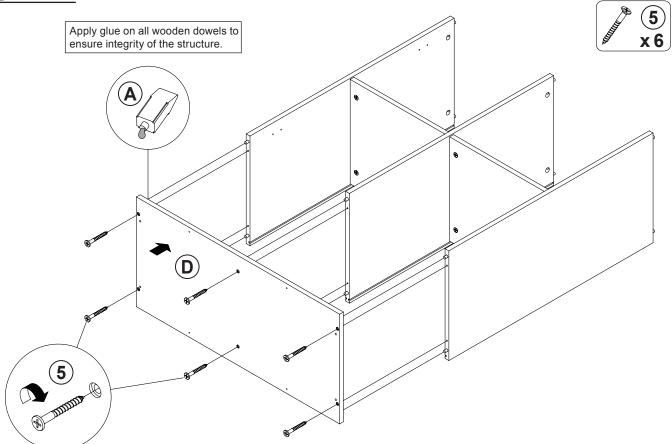

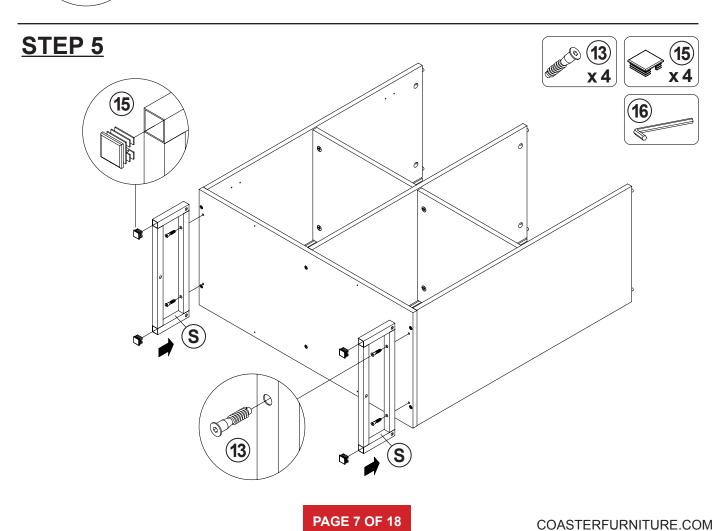

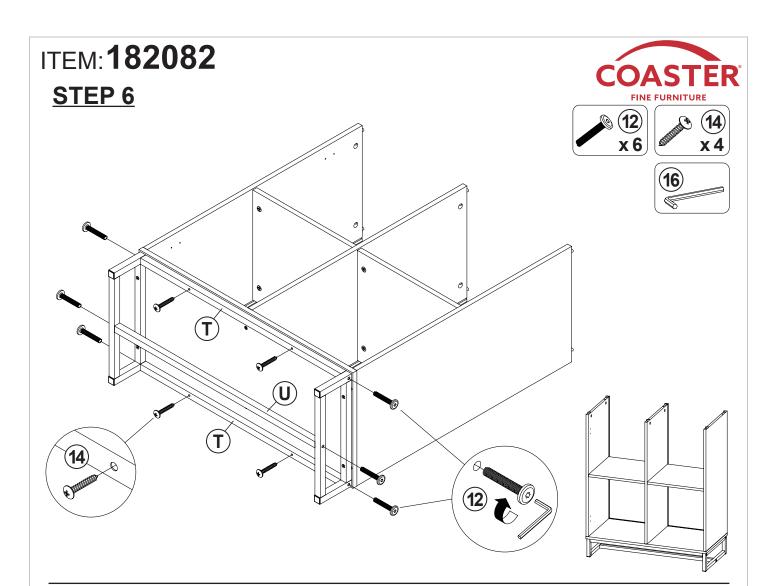



STEP 7

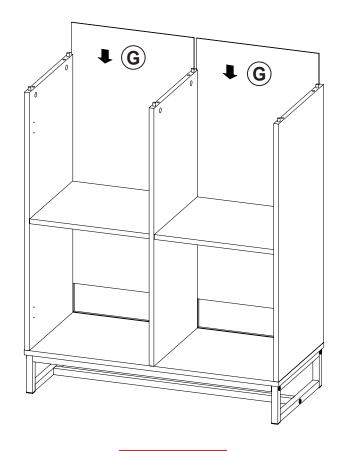


PAGE 8 OF 18

COASTERFURNITURE.COM

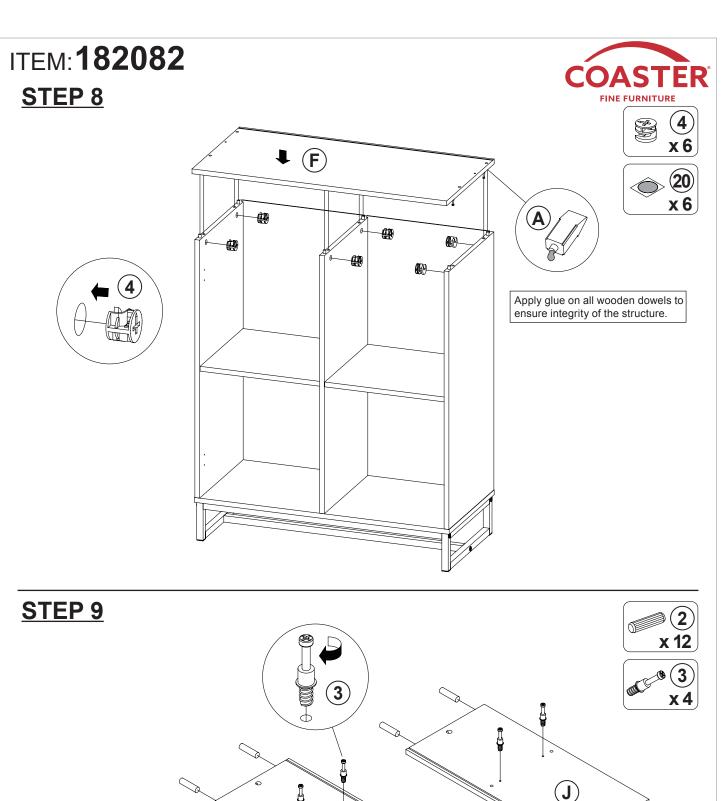

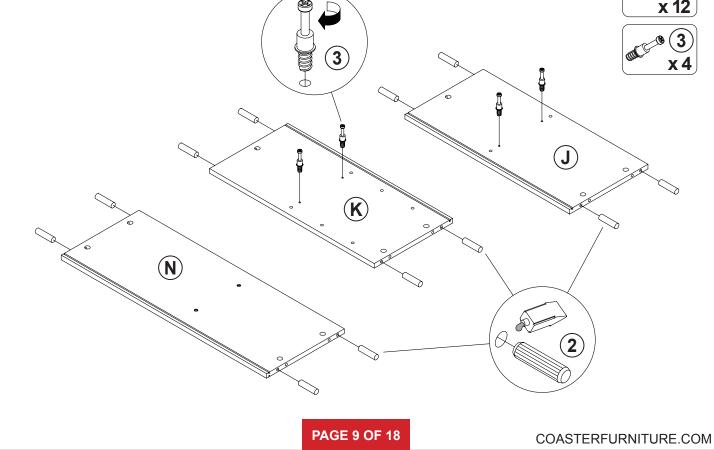

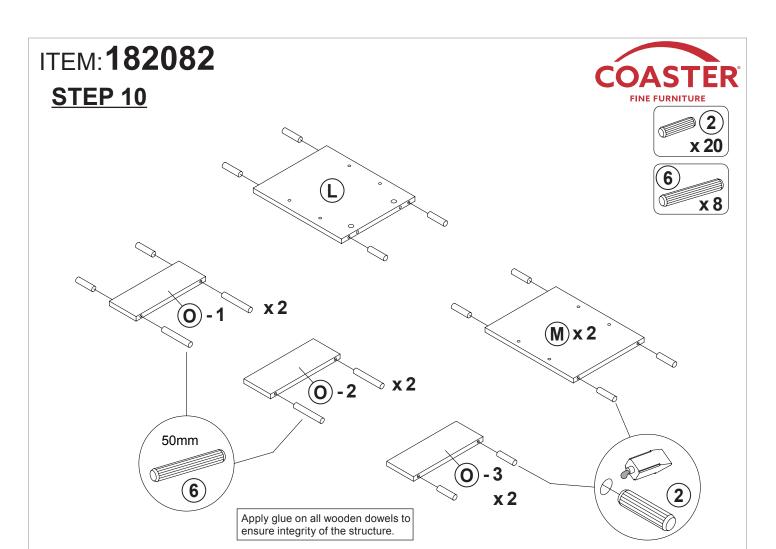











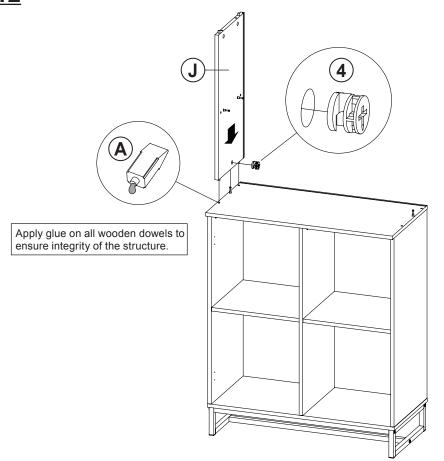

STEP 13

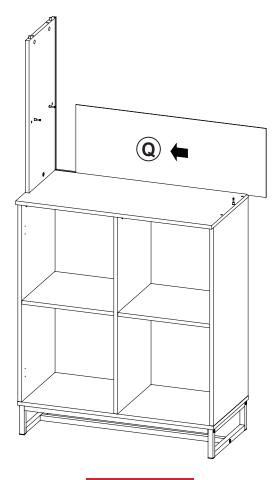


PAGE 11 OF 18


COASTERFURNITURE.COM








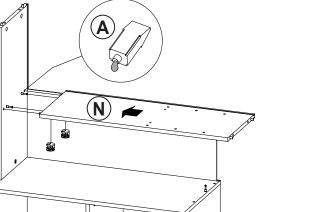

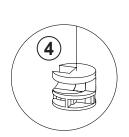

STEP 15

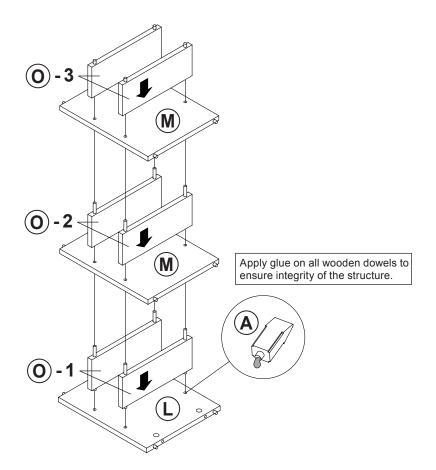


STEP 16



COASTERFURNITURE.COM





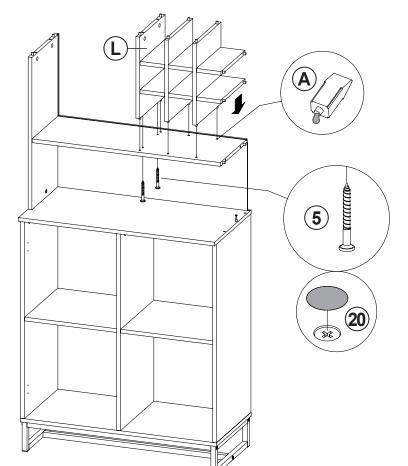

STEP 17




PAGE 13 OF 18







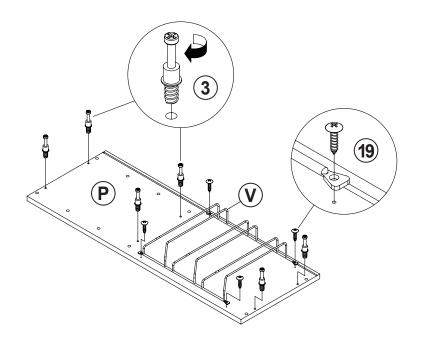


STEP 19











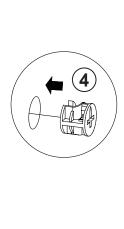

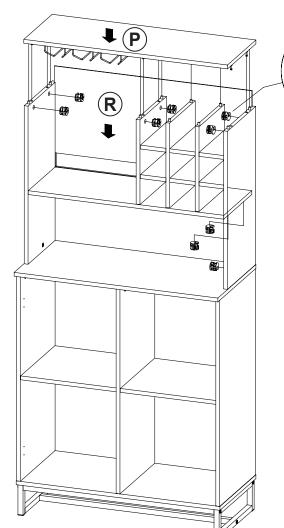



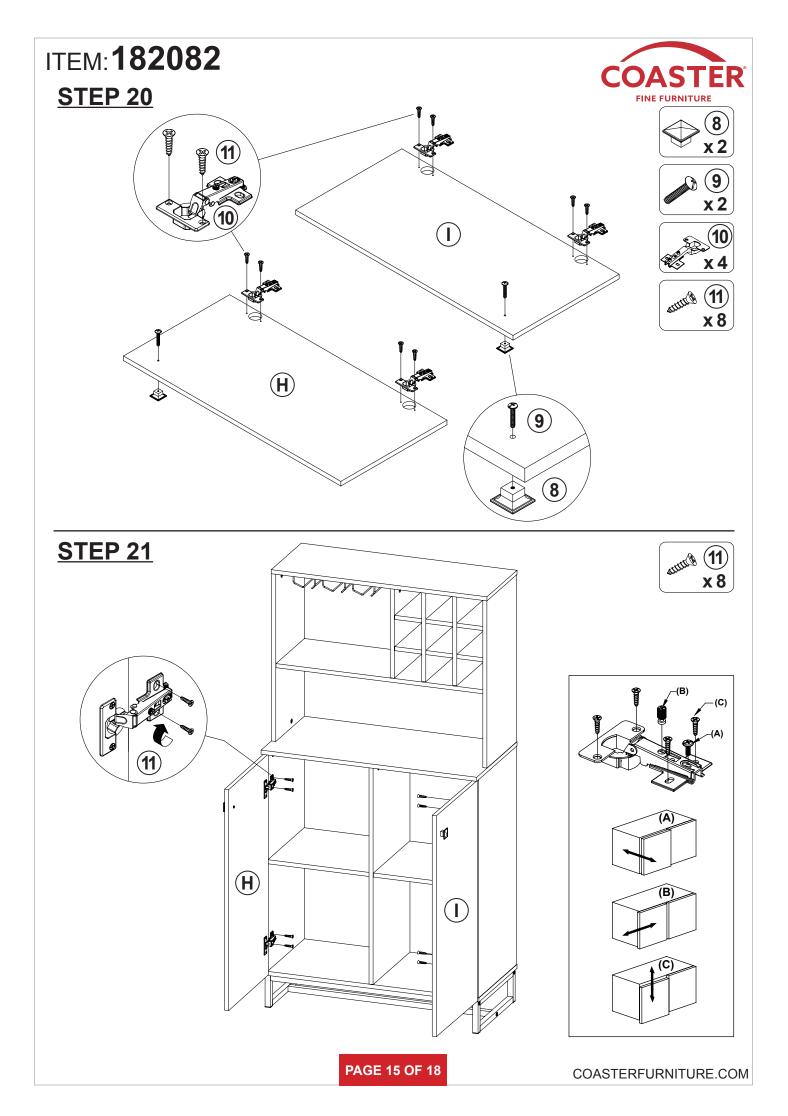


STEP 22








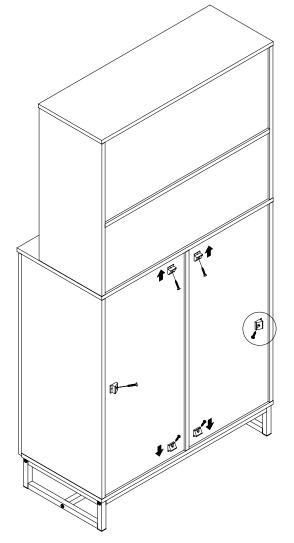




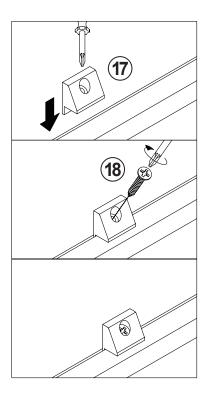

STEP 23


COMPLETE

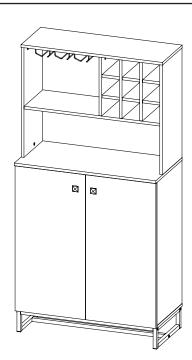







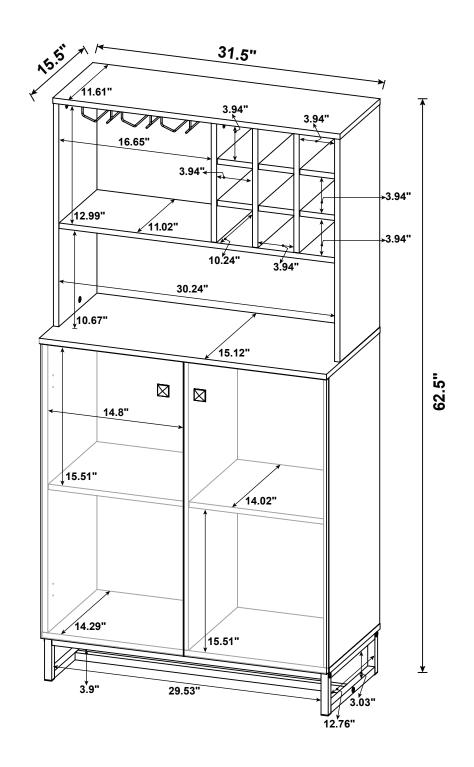

Note: Dimension tolerance ±5%

ANTI-TIPPING INSTALLMENT INSTRUCTIONS

FURNITURE TIPPING RESTRAINT

WARNING

Injury may result from tipping furniture.

This restraint may protect against tipping furniture.

Do not allow children to climb on furniture.

This restraint is not a substitute for proper adult supervision.

Failure to detach this restraint before moving the furniture may result in injury and damage.

- 1. To attach the anti-tip strap, securely mount one end to the top of the case piece with the 5/8" screw.
- 2. Position the case piece against the wall in the desired location.
- 3. Pull the anti-tip strap taut and mark the position of where you will secure the other end on the wall.
- 4. Drill a 1-1/4" hole in the spot you marked.
- 5. Tap in plastic wall plug.
- 6. Fasten anti-tip strap with wall screw provided.

(Please install the anti-tiping kit in the middle of the case piece if only have one set of anti-tipping kit.)

