




## ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE

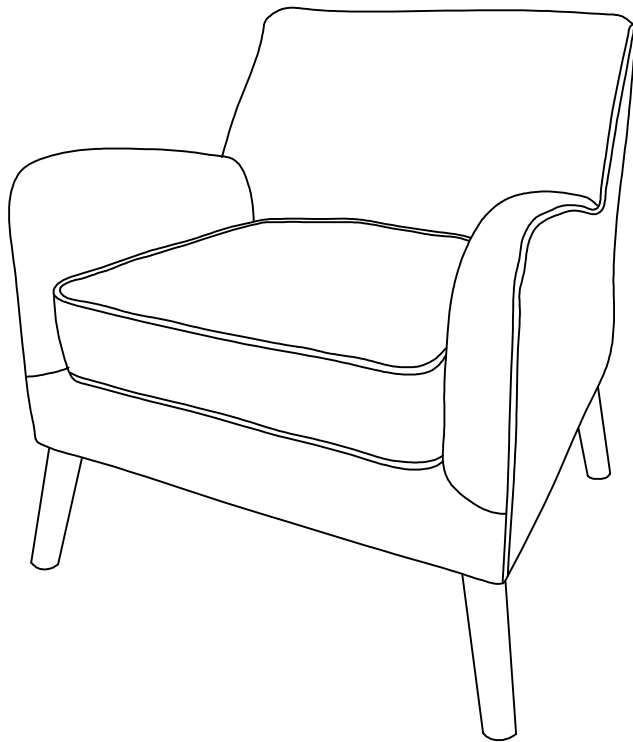

*Fine Furniture for every stage of life*

909474  
***Accent Chair***

REVISION 0 : 05/28/2021  
REVISION 1: 07/18/2022

ITEM:909474



# ASSEMBLY INSTRUCTIONS

## ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



## WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishment.

ASSEMBLY TIME

10 MINUTES

 
## PARTS IDENTIFICATION

A CHAIR



1PC

B LEG




4PCS

## Z HARDWARE IDENTIFICATION

| NO | DESCRIPTION        | FIGURE | Q' TY |
|----|--------------------|--------|-------|
| 1  | ØLOCK WASHER 5/16" |        | 8PCS  |
| 2  | ØFLAT WASHER 5/16" |        | 8PCS  |
| 3  | ØBOLT 5/16X2-1/4"  |        | 8PCS  |
| 4  | ØALLEN KEY 5mm     |        | 1PC   |


## STEP: 1

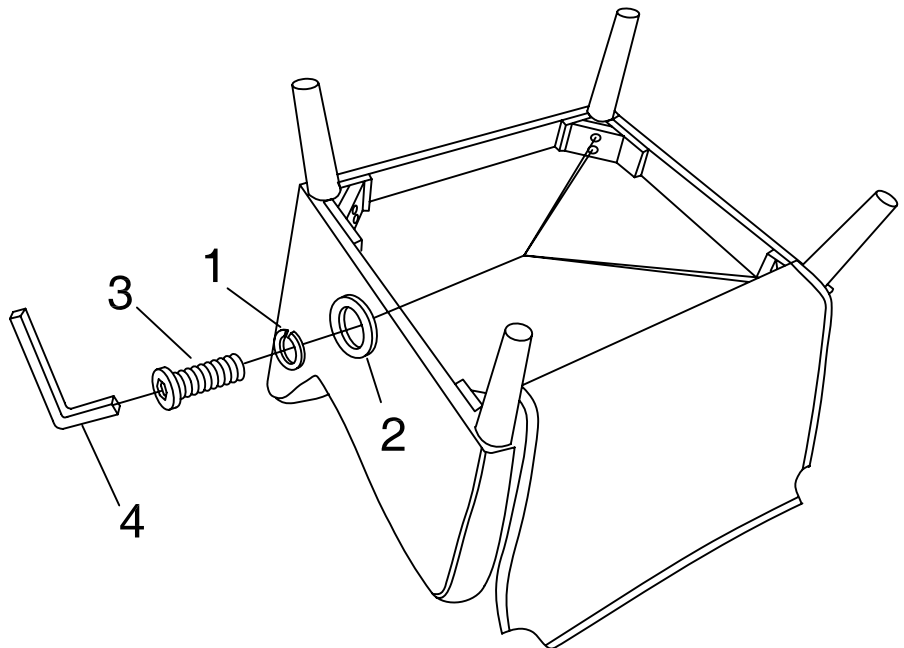

ITEM:909474



# ASSEMBLY INSTRUCTIONS

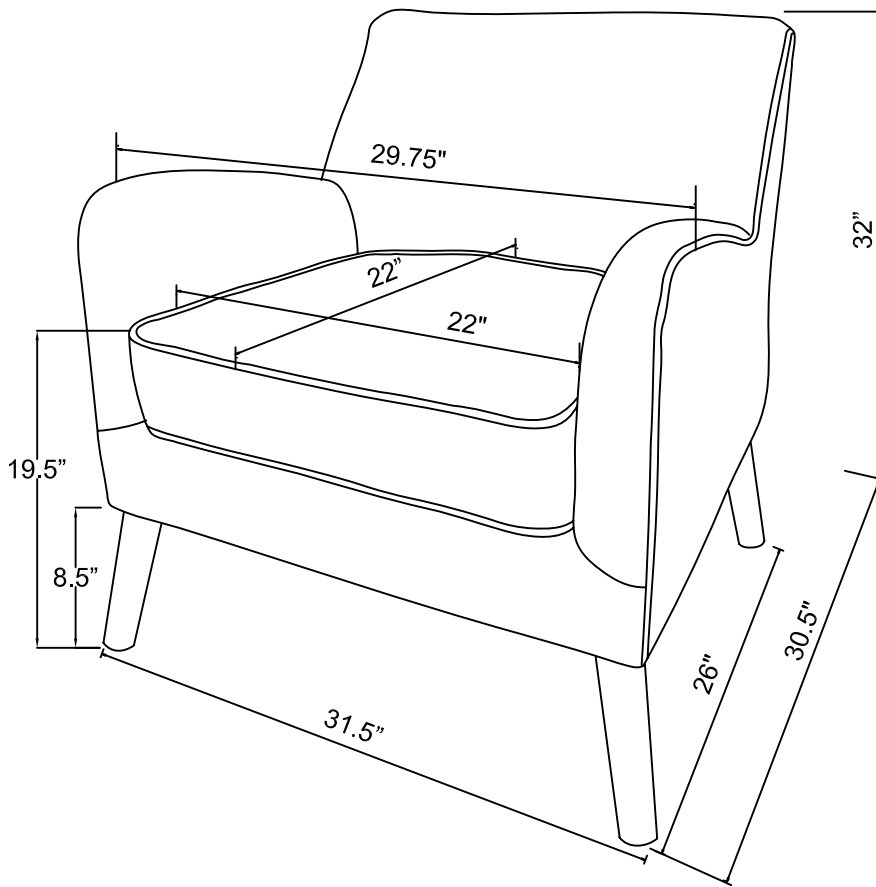

Note: Dimension tolerance  $\pm 5\%$