


ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE

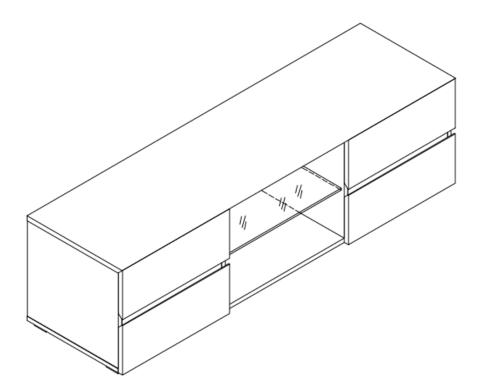

Fine Furniture for every stage of life

700825 TV CONSOLE

REVISION 0: 12/21/2018 REVISION 1: 07/02/2019 REVISION 2: 08/04/2022

PAGE 10F 7

COASTERFURNITURE.COM

1700825

ASSEMBLY INSTRUCTIONS



- ASSEMBLY TIPS:

 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.


2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

90 MINUTES

PARTS IDENTIFICATION

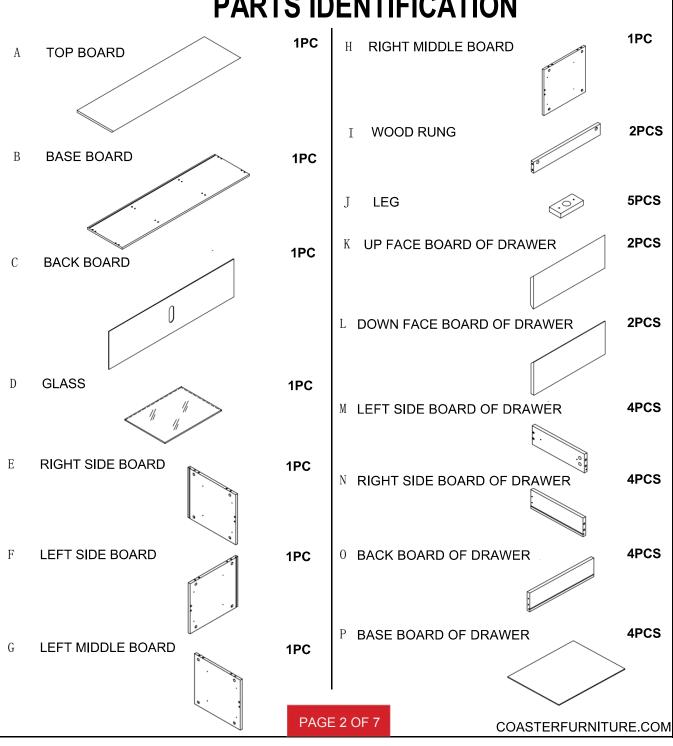

ASSEMBLY INSTRUCTIONS



Z HARDWARE IDENTIFICATION

1 BOLT

M6*32

36PCS 5 SCREW

Trimmer 16PCS

2 BOLT CAP

(1)

6 SLIDE RAIL

8PCS

3 WOOD PLUG

Ø8*30

20PCS

36PCS

7 SCREW

48PCS

M3.5*12

M4*35

4 SCREW

M4*25

10PCS


8 SHELF PIN

PIN


9

4SET


STEP 1

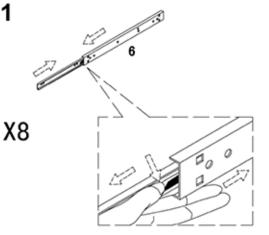


STEP 2

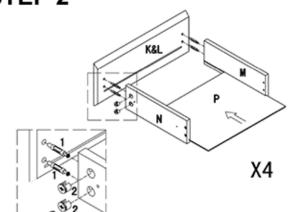

STEP 3

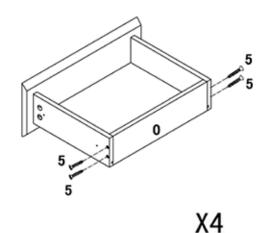

STEP 4

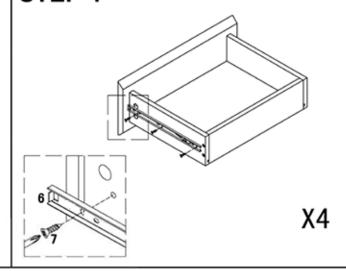


PAGE 3 OF 7

COASTERFURNITURE.COM


ASSEMBLY INSTRUCTIONS






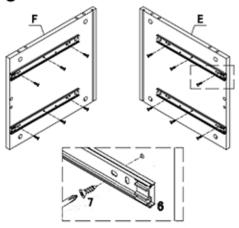




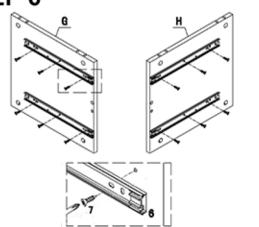


STEP 7

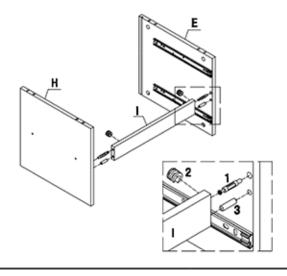

STEP 8

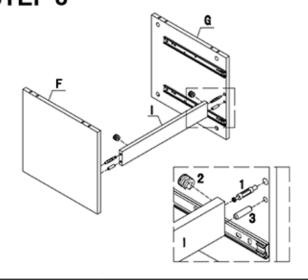


STEP 9

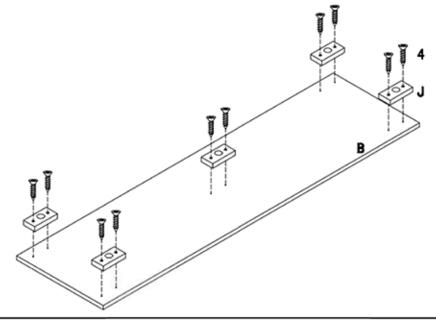


ASSEMBLY INSTRUCTIONS



COASTERFURNITURE.COM

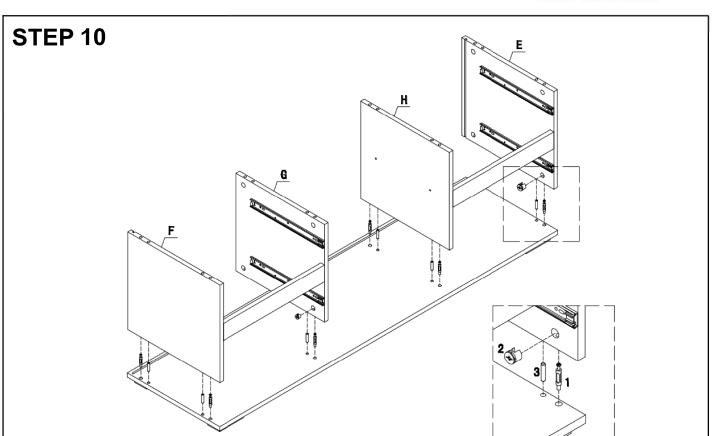

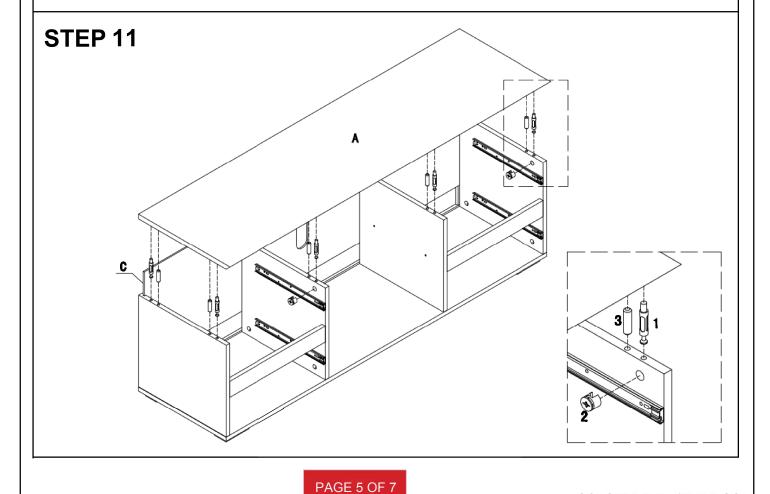


ТЕМ: 700825


ASSEMBLY INSTRUCTIONS




STEP 12

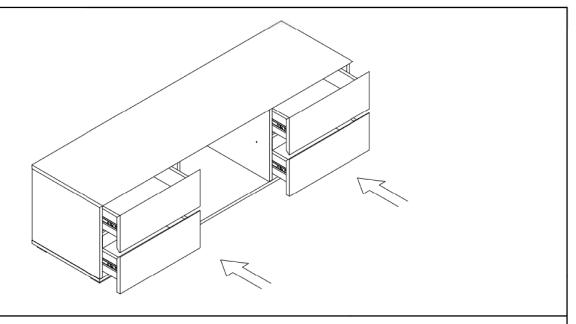


STEP 13

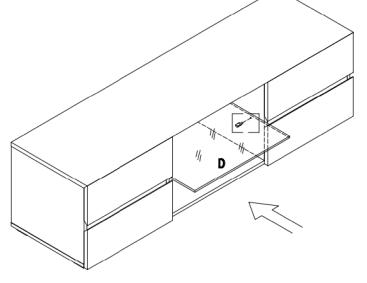

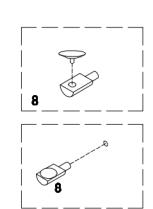


STEP 14

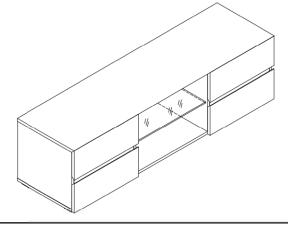

ASSEMBLY INSTRUCTIONS



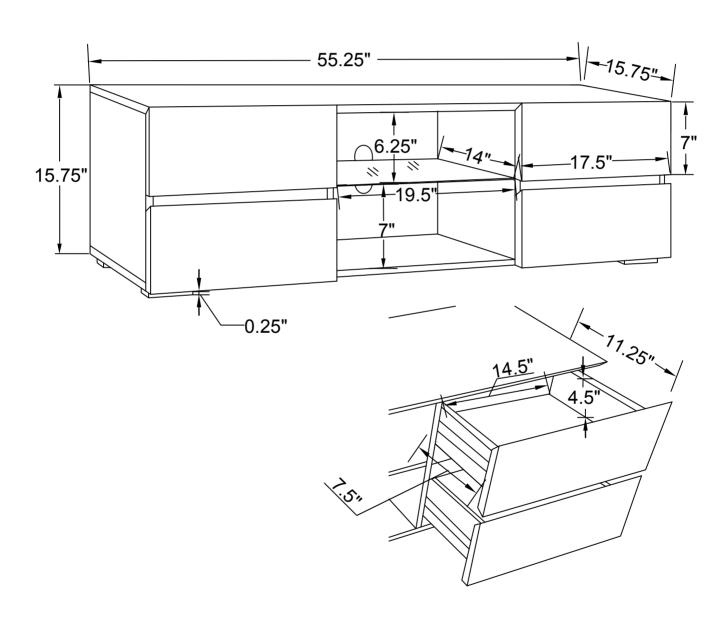

Note:Dimension tolerance±5%