

# ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

193498(B1&B2) Counter Height Table

### ITEM: 193498(B1&B2)

#### **ASSEMBLY INSTRUCTIONS**



#### **ASSEMBLY TIPS:**

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



#### **WARNING!**

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

20 MINUTES

#### **PARTS IDENTIFICATION**

#### **B1 (BOX 1)**

A TOP 1PC

B CROSSBAR 2PCS

B2 (BOX 2)

C LEG FRAME 2PCS


#### **HARDWARE IDENTIFICATION**

#### Z-B1 (BOX 1) - HARDWARE PACK IS LOCATED IN 193498 (B1)

1	ALLEN WRENCH (M5 - BLK)		1PC
2	BOLT (M6 x 90mm - RBW)		8PCS
3	LOCK WASHER (M6 x RBW)		8PCS
4	PLASTIC DOWEL (M8 x 30mm - BLK)		4PCS
5	WAFER HEAD SCREW (M4 x 25mm - BLK)		16PCS
6	WOOD PLUG	$\bigcirc$	8PCS
7	LEVELER (23mm - BLK)		4PCS


#### NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

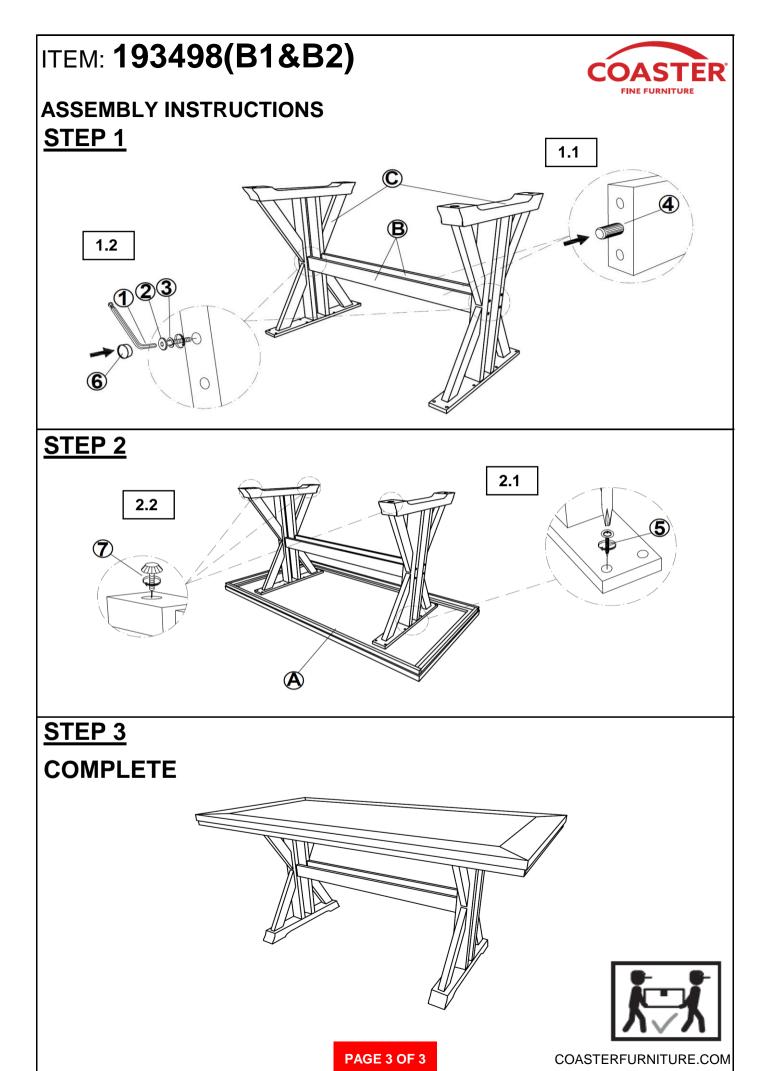

## ITEM: 193498(B1&B2)



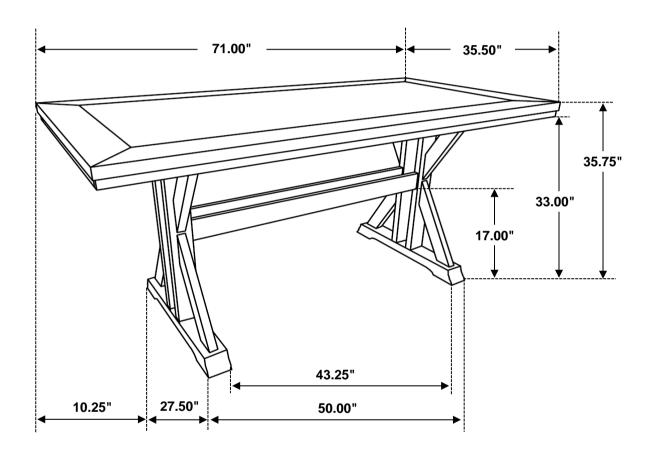

Note: Dimension tolerance ±5%