

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

753517 End Table

REVISION 0: 12/08/2021

ITEM: **753517**



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

15 MINUTES

PARTS IDENTIFICATION

A TOP 1PC

B LEG 4PCS

HARDWARE IDENTIFICATION

1 BOLT (JCBB M8 X 70mm) 8PCS


2 ALLEN WRENCH 1PC

3 LOCK WASHER (M8 - BLK) 8PCS


ITEM:**753517**



ASSEMBLY INSTRUCTIONS STEP 1

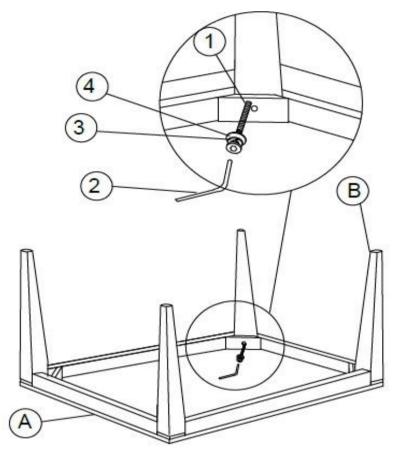


STEP 2 COMPLETE

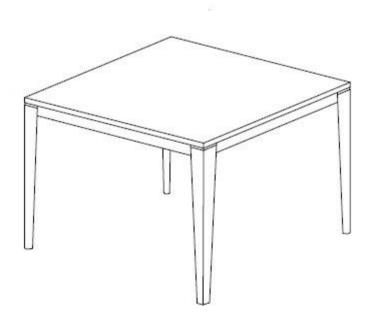



ITEM:**753517**



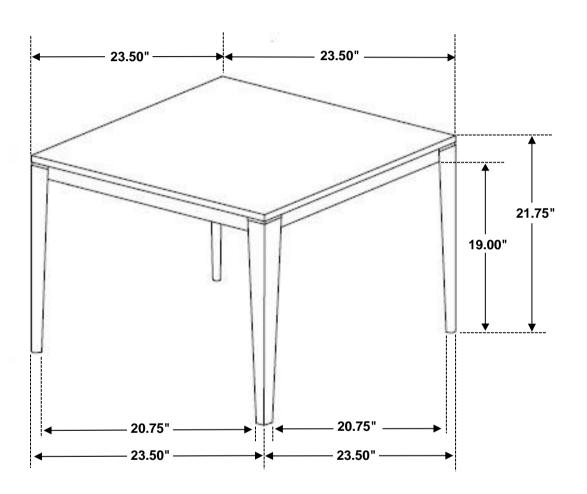

Note: Dimension tolerance ±5%