

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

700881
TV CONSOLE

ITEM:700881

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

 
 
 
 
 
 
 
 
 
 
 
 
 
 
 


ASSEMBLY TIME

60 MINUTES

MAX TV SIZE: 65"

 
 


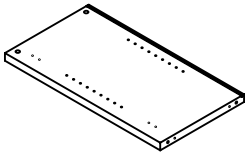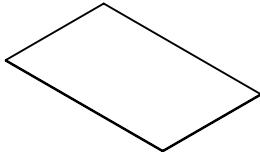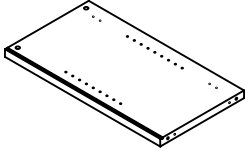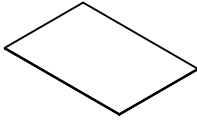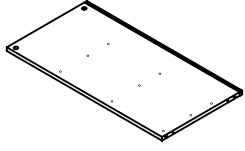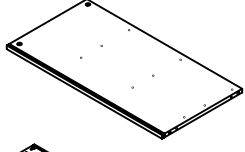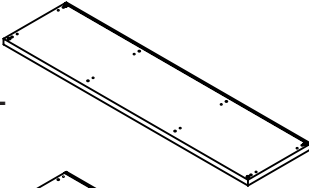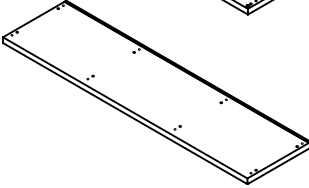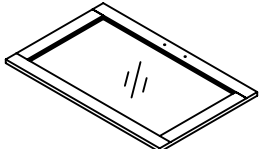




 








PARTS IDENTIFICATION

A	LEFT SIDE PANEL		1 PC	I	BACK PANEL		2 PCS
B	RIGHT SIDE PANEL		1 PC	J	MIDDLE BACK PANEL		2 PCS
C	LEFT DIVIDER PANEL		1 PC	K	DRAWER FRONT PANEL		3 PCS
D	RIGHT DIVIDER PANEL		1 PC	L	DRAWER BACK PANEL		3 PCS
E	BOTTOM PANEL		1 PC	M	LEFT DRAWER SIDE PANEL		3 PCS
F	TOP PANEL		1 PC	N	RIGHT DRAWER SIDE PANEL		3 PCS
G	ADJUSTABLE SHELF		4 PCS	O	DRAWER BOTTOM PANEL		3 PCS
H	DOOR		2 PCS				

 NOTE:

 Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM:700881

Z				HARDWARE IDENTIFICATION			
NO	DESCRIPTION	FIGURE	Q'TY	NO	DESCRIPTION	FIGURE	Q'TY
1	GLUE 40g		1 PC	10	HINGE		4 PCS
2	WOODEN DOWEL Ø 8x30mm		28 PCS	11	SCREW Ø 4x15mm FOR HINGE		16 PCS
3	CAM BOLT Ø 7x35.5mm		14 PCS	12	HANDLE L=120mm		5 PCS
4	CAM LOCK Ø 15x12mm		14 PCS	13	HANDLE BOLT Ø 4x28mm		10 PCS
5	BOLT Ø 9.5x55mm FOR BOTTOM PANEL		8 PCS	14	SIDE FOOT 50x50x70mm		4 PCS
6	SCREW Ø 4.3x35mm FOR DRAWER		12 PCS	15	MIDDLE FOOT Ø 37x70mm		2 PCS
7	RAIL L = 350mm		3 SET	16	BOLT Ø 6.35x41mm FOR SIDE FOOT		4 PCS
8	SCREW FOR RAIL Ø 3x12mm		36 PCS	17	STICKER Ø 20mm		3 PCS
9	PIN Ø 4.9x8mm		16 PCS	18	I BAR L=527mm		1 PC

Z7,Z10,Z12,Z13,Z14,Z15,Z18 not included in blister packaging.

 
 
 
 
 
 
NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.



ITEM: 700881

STEP 1



COASTER
FINE FURNITURE

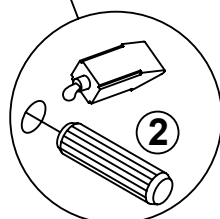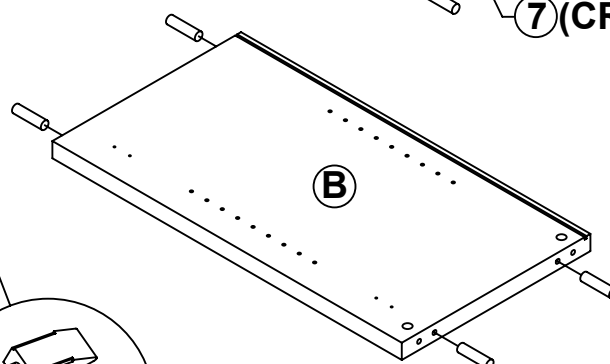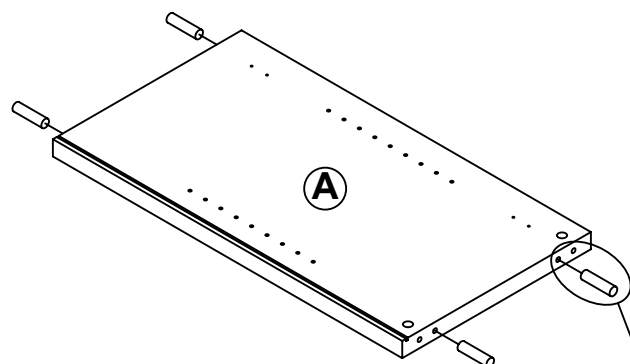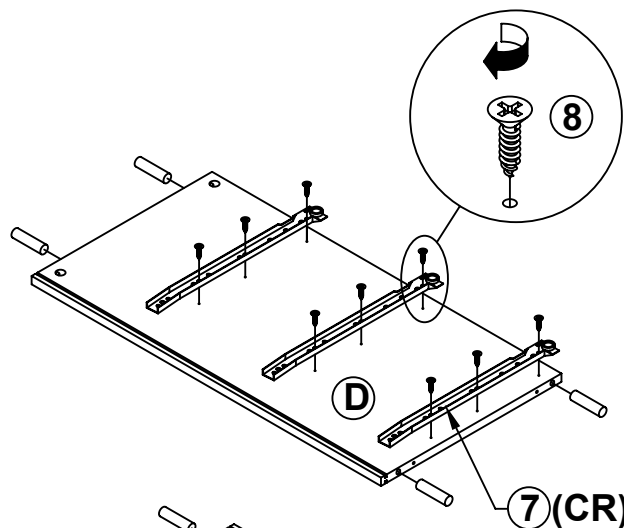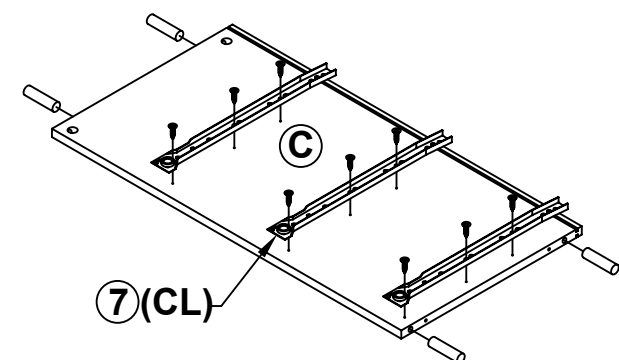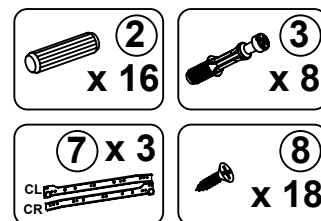

  Apply glue on all wooden dowels to ensure integrity of the structure.

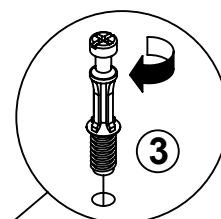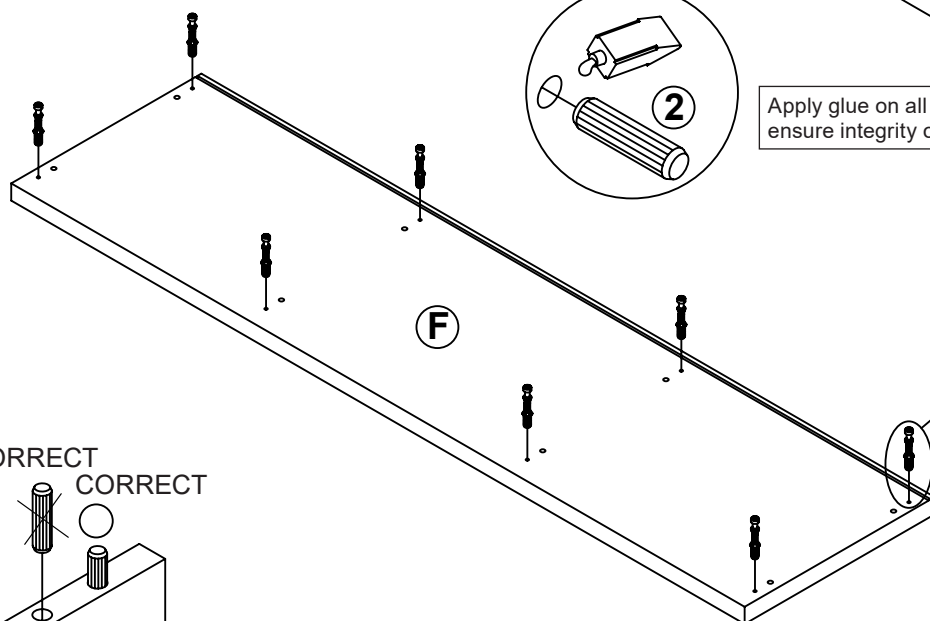




INCORRECT
CORRECT

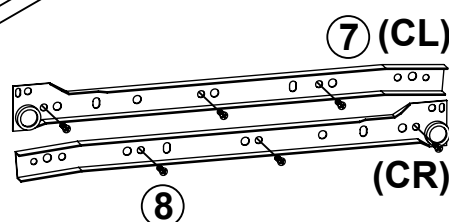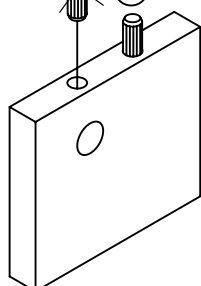  




ITEM: 700881

COASTER
FINE FURNITURE

   STEP 2

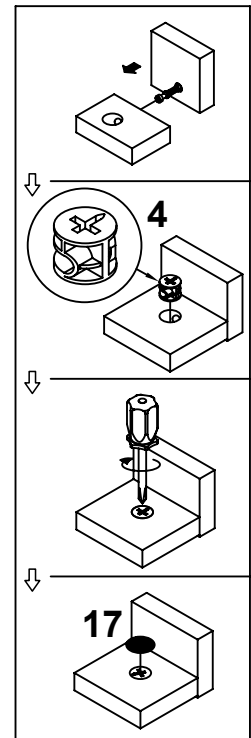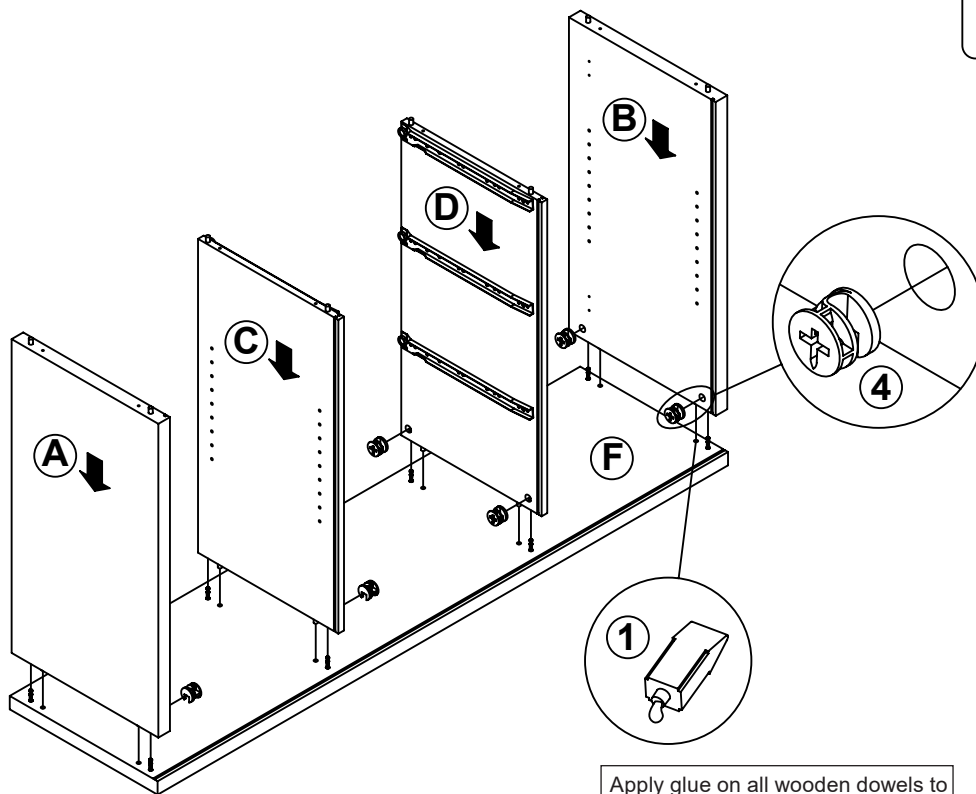

 
 
 
STEP 3

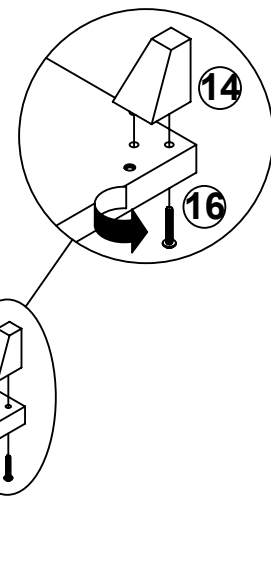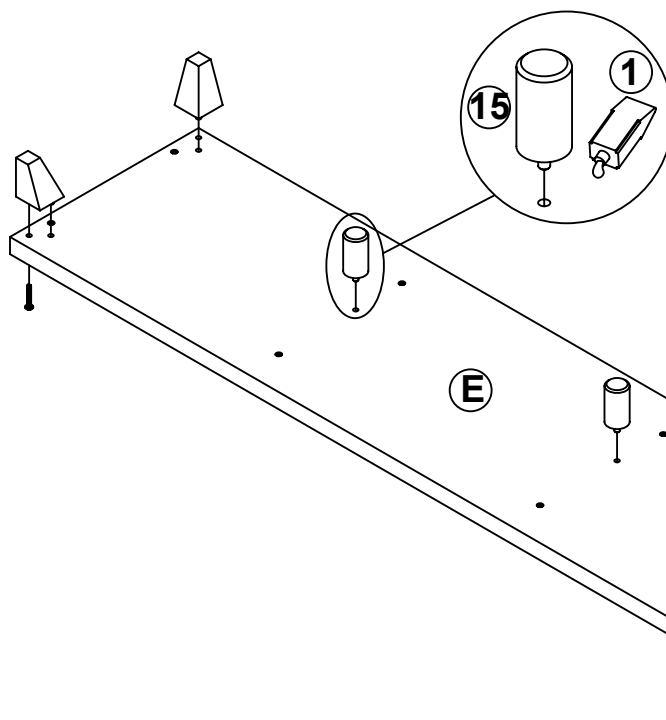


ITEM: **700881**

STEP 4

 
 
 
COASTER
FINE FURNITURE

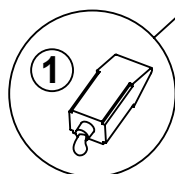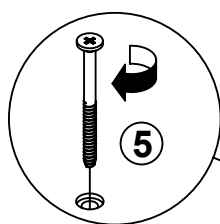

 Apply glue on all wooden dowels to ensure integrity of the structure.


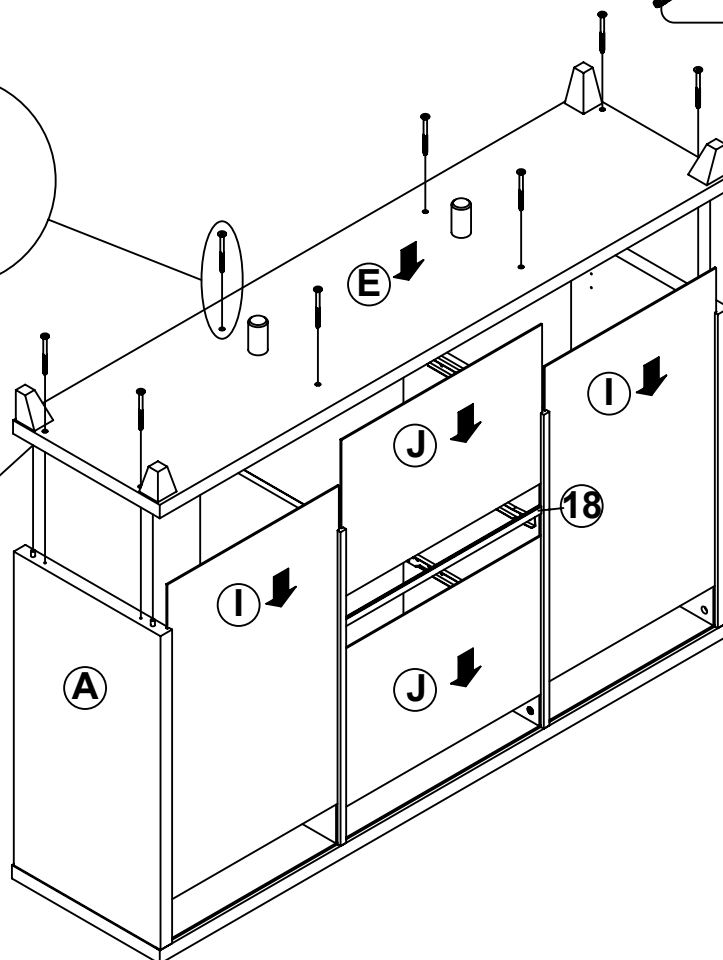


   STEP 5

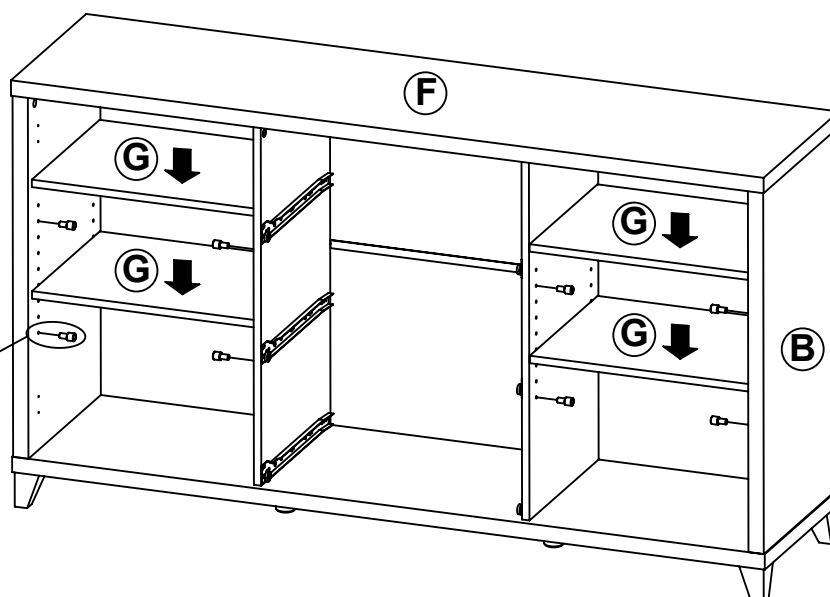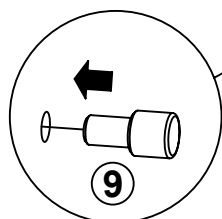


ITEM: 700881

  STEP 6

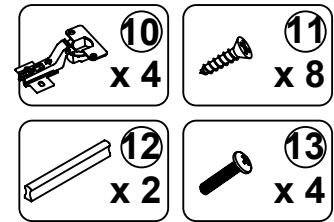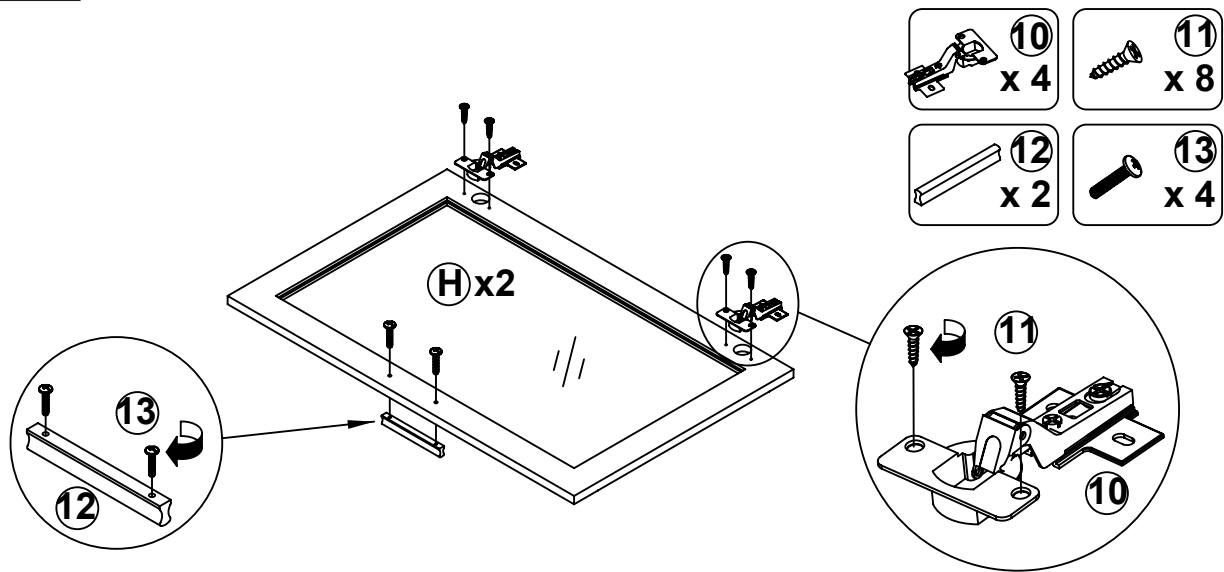






 
STEP 7

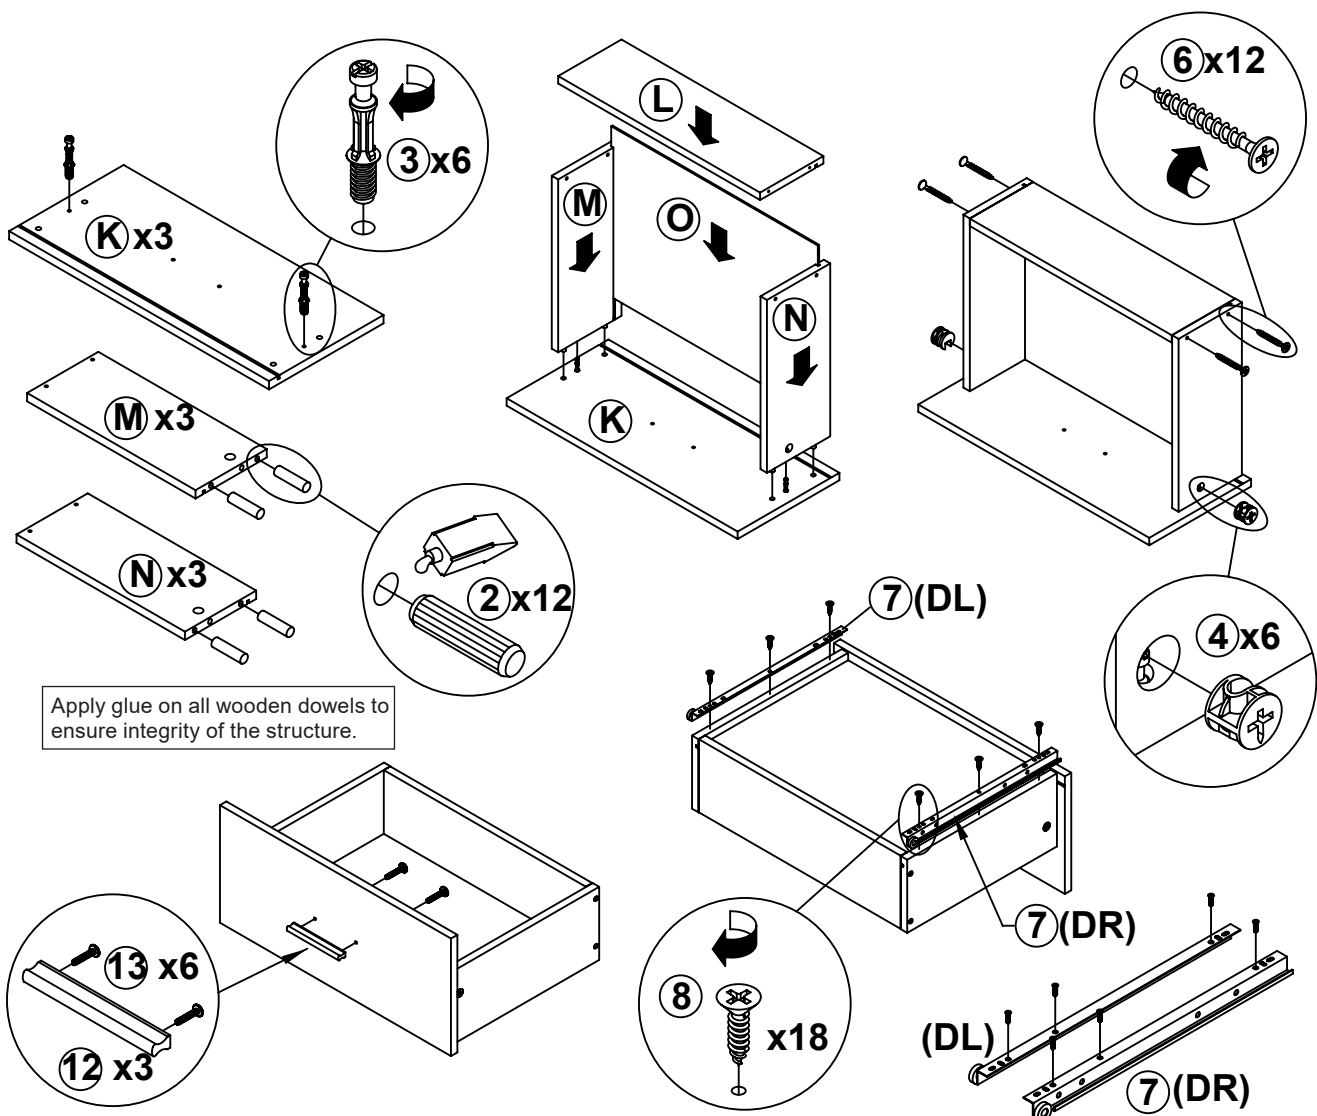

ITEM: 700881



STEP 8

      COASTER
FINE FURNITURE

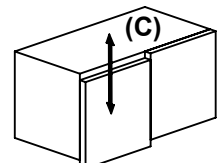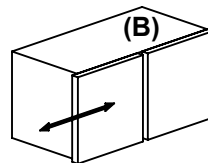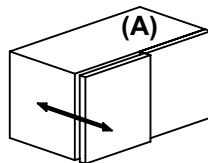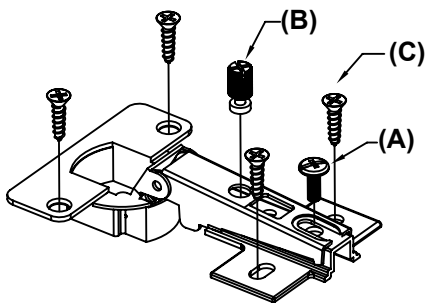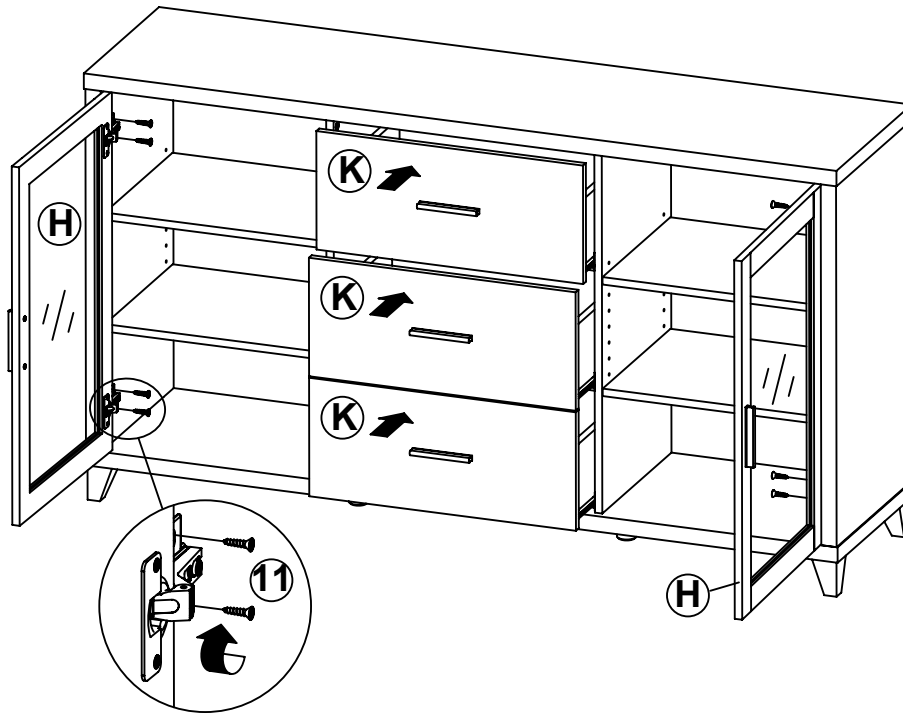



STEP 9

  COMPLETE

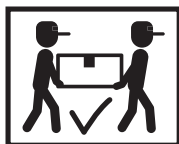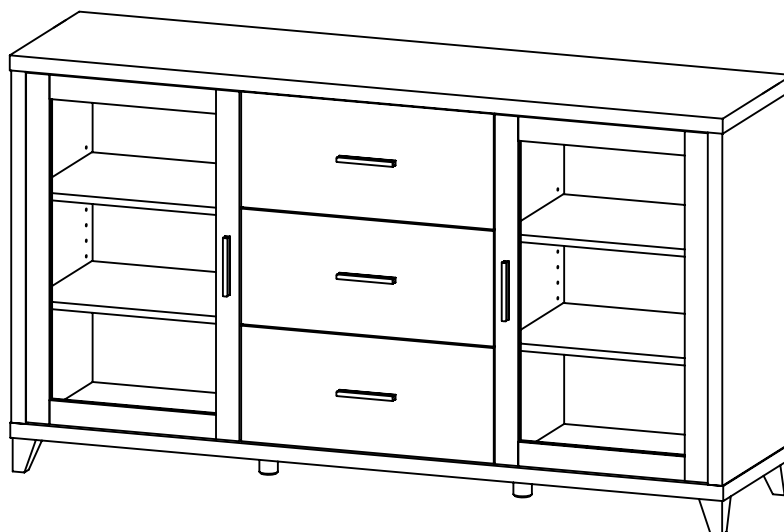

ITEM: 700881

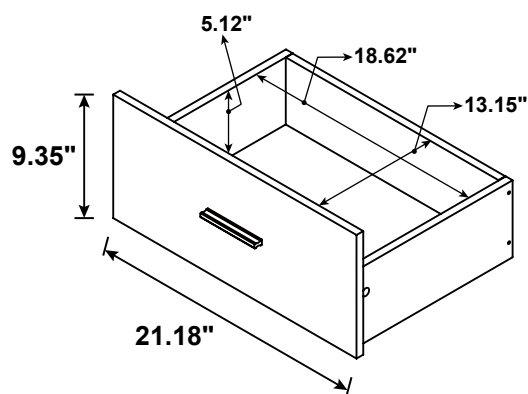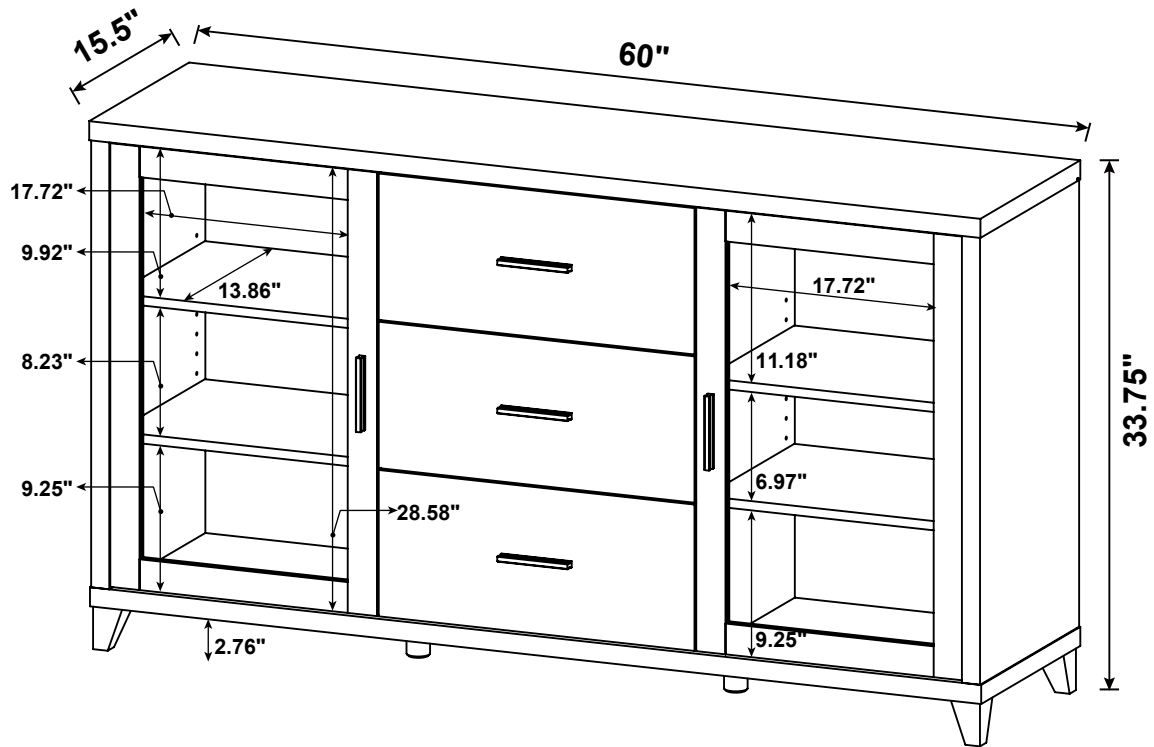  

Note : Dimension tolerance $\pm 5\%$

ANTI-TIPPING INSTALLMENT INSTRUCTIONS

FURNITURE TIPPING RESTRAINT

WARNING

Injury may result from tipping furniture.
This restraint may protect against tipping furniture.
Do not allow children to climb on furniture.
This restraint is not a substitute for proper adult supervision.
Failure to detach this restraint before moving the furniture
may result in injury and damage.

1. To attach the anti-tip strap, securely mount one end to the top of the case piece with the 5/8" screw.
2. Position the case piece against the wall in the desired location.
3. Pull the anti-tip strap taut and mark the position of where you will secure the other end on the wall.
4. Drill a 1-1/4" hole in the spot you marked.
5. Tap in plastic wall plug.
6. Fasten anti-tip strap with wall screw provided.

(Please install the anti-tipping kit in the middle of the case piece if only have one set of anti-tipping kit.)

