

### ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

724118 Coffee Table

#### ITEM:724118

#### **ASSEMBLY INSTRUCTIONS**



1PC

4PCS

#### **ASSEMBLY TIPS:**

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



#### WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



В

ASSEMBLY TIME

**TOP** 

**LEG FRAME** 

15 MINUTES

#### PARTS IDENTIFICATION


HARDWARE IDENTIFICATION **BOLT** 4PCS (M8 x 40mm - BLK) **FLAT WASHER** 2 12PCS (M10 x 25mm - BLK) **HEX NUT** 8PCS 3 (16mm - BLK) **WRENCH** 1PC (15mm - SILVER) **ALLEN WRENCH** 5 1PC (5mm - BLK)

### ITEM:**724118**


# COASTER

#### **ASSEMBLY INSTRUCTIONS**


### STEP 1

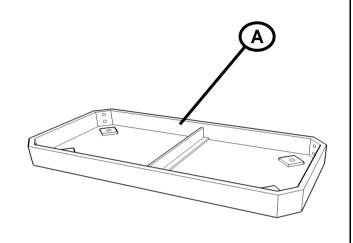


# STEP 2

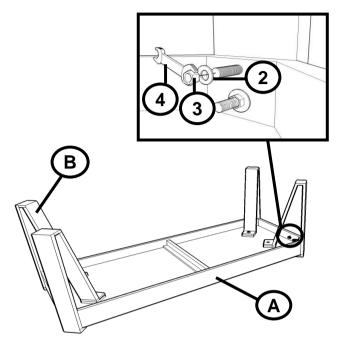

STEP 3

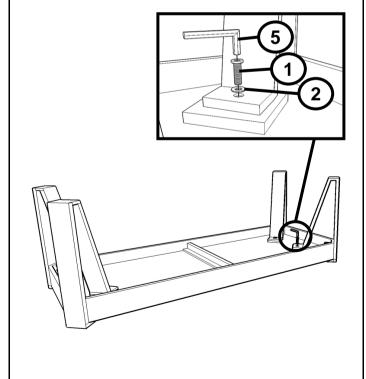

STEP 4
COMPLETE

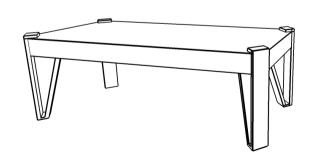




PAGE 3 OF 3

## ITEM:**724118**



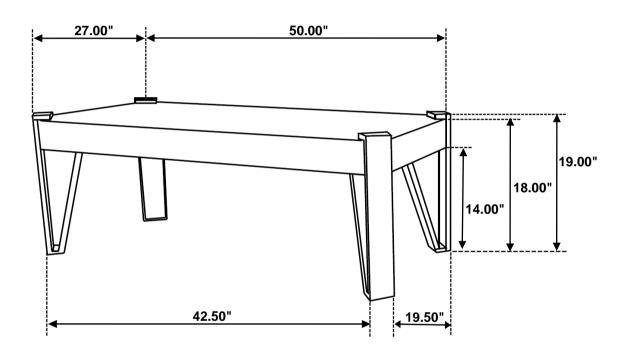

Note: Dimension tolerance ±5%