


ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE

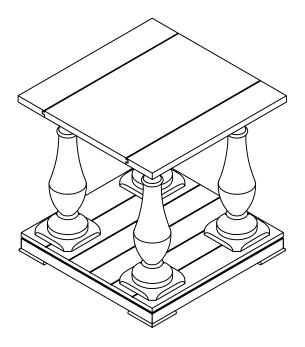

Fine Furniture for every stage of life

753377 End Table

REVISION 0: 02/11/2022

PAGE 1 OF 3

COASTERFURNITURE.COM

ITEM: **753377**

ASSEMBLY INSTRUCTIONS



ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.

 


ASSEMBLY TIME

15 MINUTES

PARTS IDENTIFICATION

A TOP



1PC

B PEDESTAL COLUMN



4PCS

C BASE

POI T

ALLEN WRENCH

(4MM - RBW)



1PC

HARDWARE IDENTIFICATION

1	(5/16" x 2 1/2" - RBW)	4PCS
2	LOCK WASHER (5/16" - RBW)	4PCS
3	FLAT WASHER (5/16" - RBW)	4PCS

1PC


ITEM: **753377**

ASSEMBLY INSTRUCTIONS




2.2

STEP 1

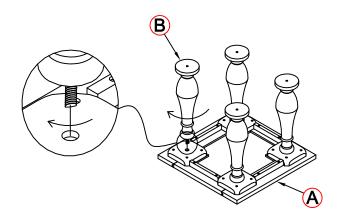


STEP 2



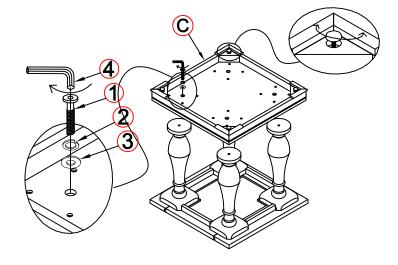


STEP 3 COMPLETE

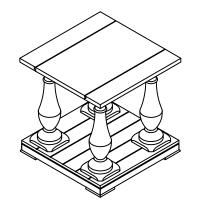



ITEM: **753377**



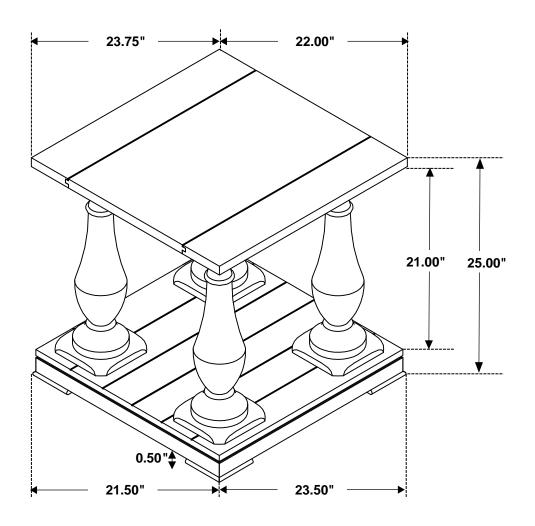

Note: Dimension tolerance ±5%