



ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE



Fine Furniture for every stage of life

508461
SOFA

ITEM : 508461



ASSEMBLY INSTRUCTIONS


ASSEMBLY TIPS:

- 1.Remove hardware from box and sort by size.
- 2.Please check to see that all hardware and parts are present prior to start of assembly.
- 3.Please follow attached instruction in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1.Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2.This product is for home use only and not intended for commercial establishment.

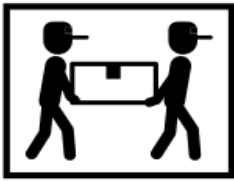


ASSEMBLY TIME

15 MINUTES

PARTS IDENTIFICATION

A SEAT
1PC

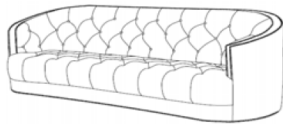

B LEG
4PC



C MIDDLE LEG
1PC




D PILLOW
2PCS




ITEM : 508461

ASSEMBLY INSTRUCTIONS



STEP 1

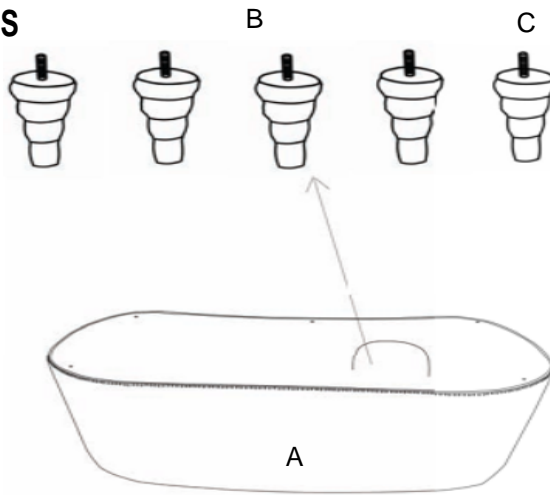


STEP 2

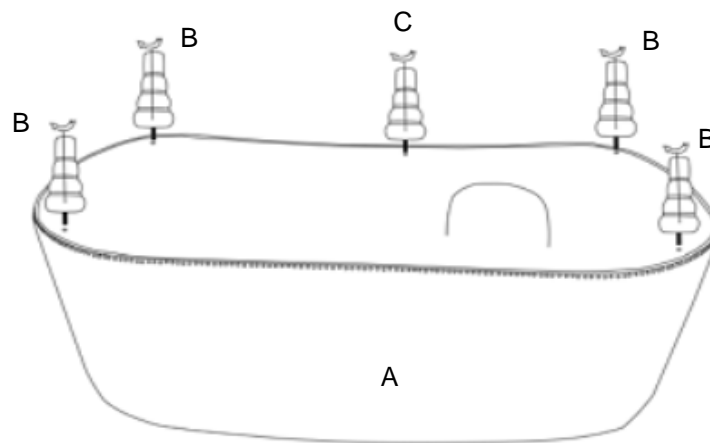

STEP 3

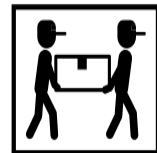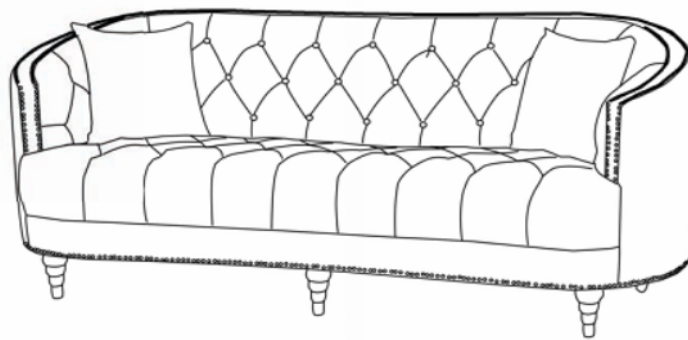

PRODUCT/PART DIMENSIONS

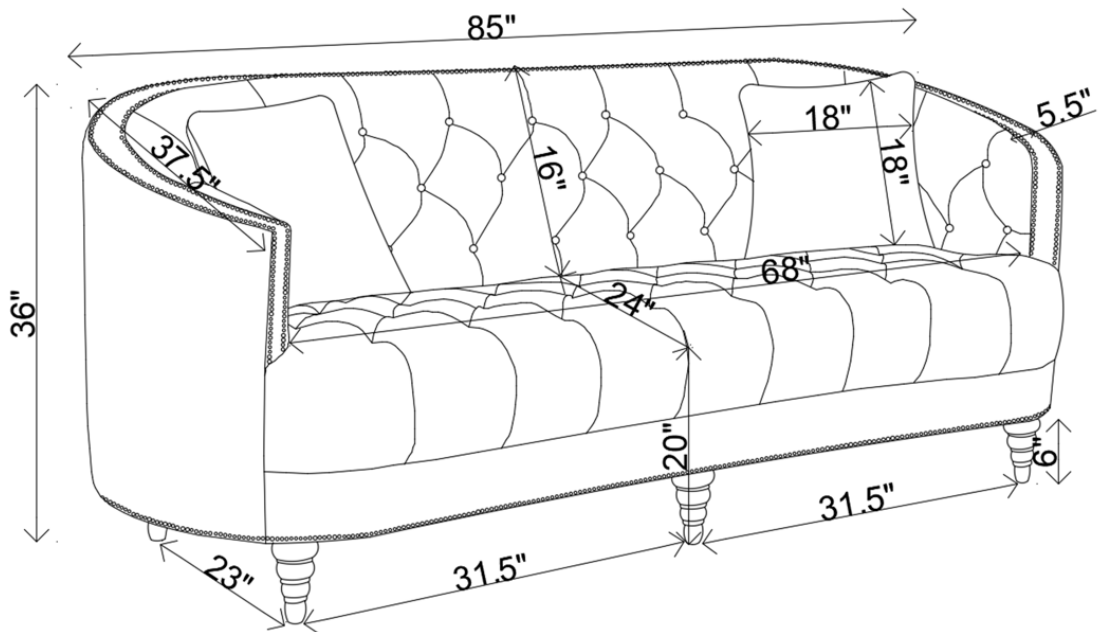

Note: Dimension tolerance $\pm 5\%$