

ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE



Fine Furniture for every stage of life

720339
SOFA TABLE

REVISION 0 : 09/12/2017
REVISION 1 : 11/14/2022

ITEM: 720339



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.

 
 

 


WARNING!





1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

ASSEMBLY TIME 30 MINUTES

PARTS IDENTIFICATION

A	GLASS		1PC
B	TOP FRAME		1PC
C	SIDE FRAME		2PCS
D	BOTTOM FRAME		1PC

HARDWARE IDENTIFICATION

1	BOLT (1/4" x 12mm SR)		16PCS	3	LEVELER (1/4" x 12mm BLK)		4PCS
2	SUCTION CUP (Ø12mm)		6PCS	4	ALLEN WRENCH (4mm)		1PC


ITEM: 720339

ASSEMBLY INSTRUCTIONS




STEP 1


Do not tighten until each step is completed or instructed.

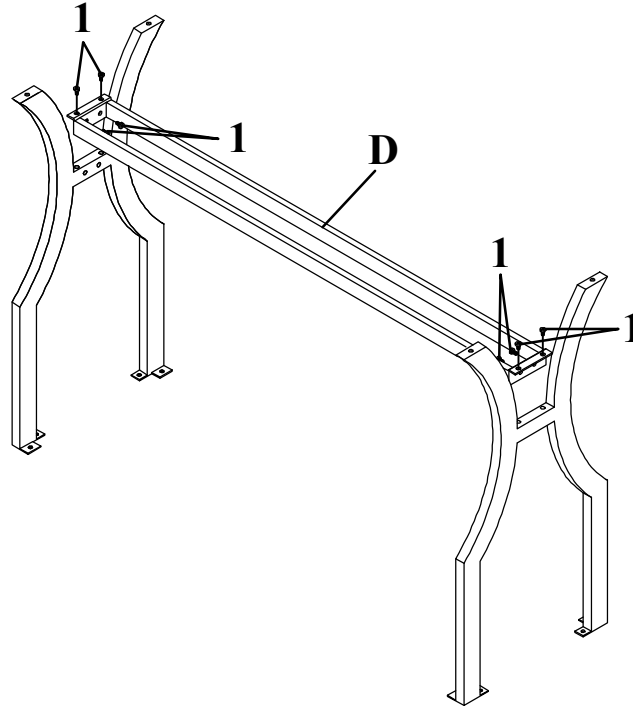


STEP 2

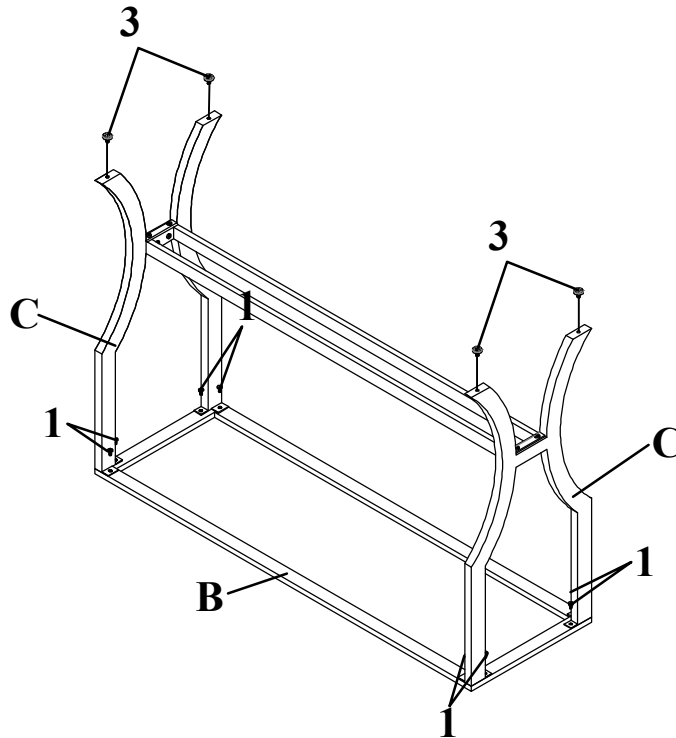

ITEM: 720339
ASSEMBLY INSTRUCTIONS
STEP 3

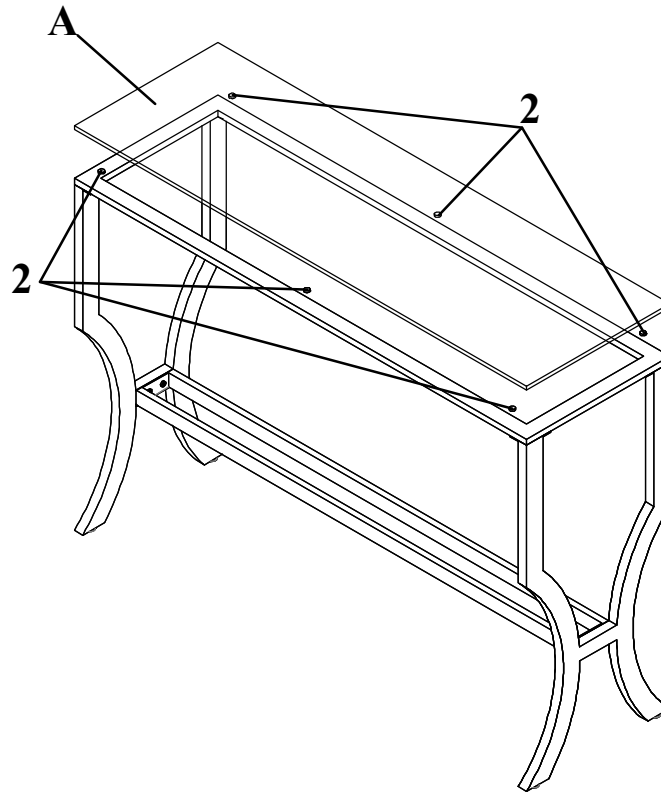

STEP 4
COMPLETE

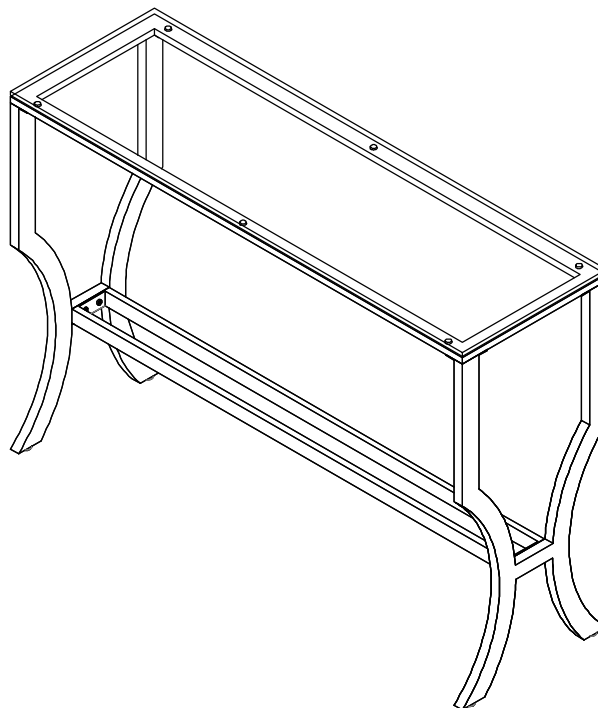


ITEM: 720339
ASSEMBLY INSTRUCTIONS



Product Size : 1105 X 349 X 762 H (MM)

Product Size : 43 1/2" X 13 3/4" X 30"

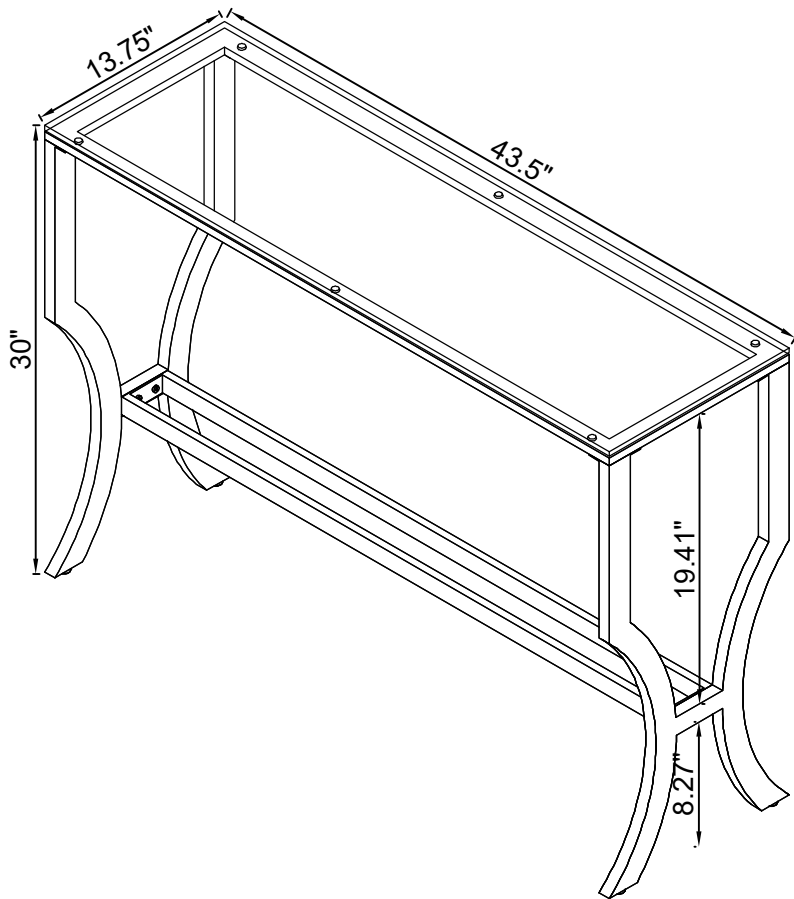

Note : Dimension tolerance ±5%