

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

723605 3Pcs Occasional Set

REVISION 0: 03/05/2021

COASTERFURNITURE.COM

ITEM:723605



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

15 MINUTES

PARTS IDENTIFICATION

Α	END TABLE TOP	2PCS
В	COFFEE TABLE TOP	1PC
С	END TABLE LEG	8PCS
D	COFFEE TABLE LEG	4PCS

HARDWARE IDENTIFICATION


1	BOLT (M6 x 50mm - BLK)	12PCS
2	LOCK WASHER (1/4" - BLK)	12PCS
3	FLAT WASHER (1/4"ID x 19mm - BLK)	12PCS
4	ALLEN WRENCH (M4 x 60mm - BLK)	1PC

ITEM:**723605**


COASTER

ASSEMBLY INSTRUCTIONS

STEP 1

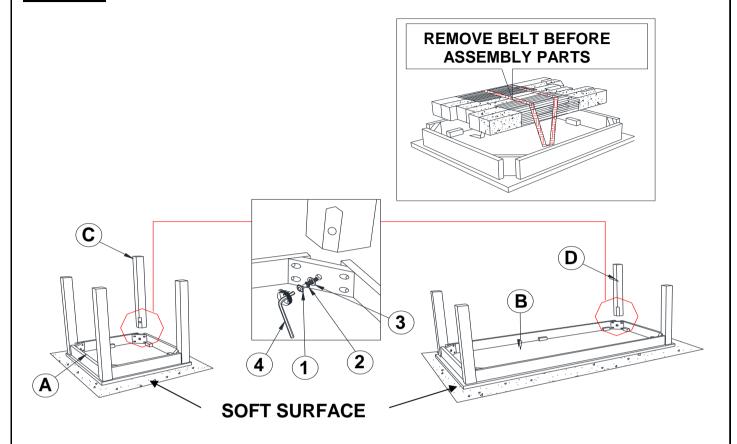


STEP 2 COMPLETE

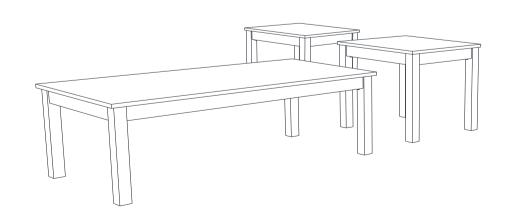




ITEM:**723605**



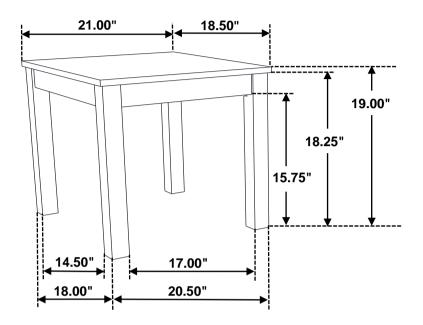

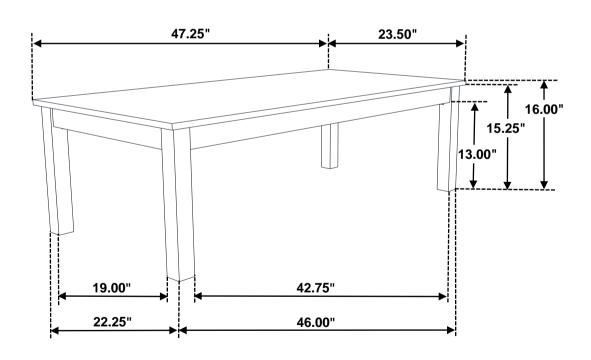

Note: Dimension tolerance ± 5%