

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

703608 Coffee Table

ITEM:703608

ASSEMBLY INSTRUCTIONS



ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.

 


ASSEMBLY TIME

15 MINUTES

PARTS IDENTIFICATION

A TOP



1PC

B LEG



3PCS

HARDWARE IDENTIFICATION

1	BOLI
	(M8 x 20mm - BLK)



6PCS

2 FLAT WASHER (M10 x 16mm - BLK)



6PCS

3 ALLEN WRENCH (5mm - BLK)




1PC


ITEM:703608



ASSEMBLY INSTRUCTIONS STEP 1

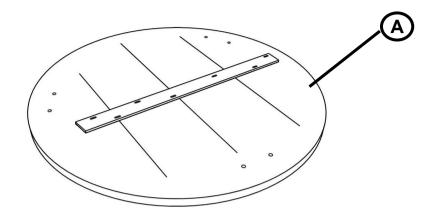

STEP 2

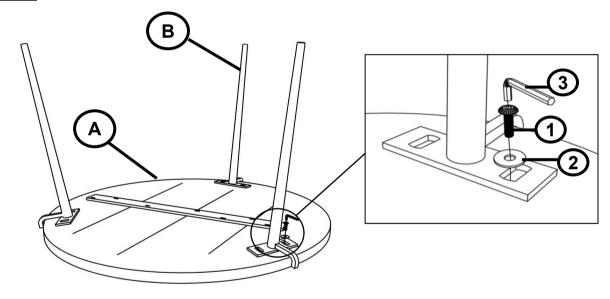

STEP 3 COMPLETE




COASTERFURNITURE.COM

PAGE 3 OF 3

ITEM:**703608**



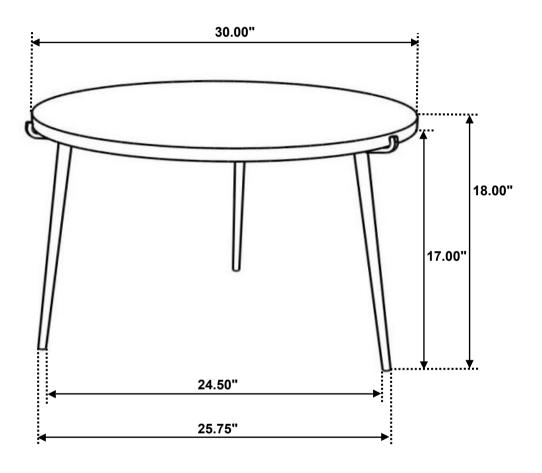

Note: Dimension tolerance ±5%