

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

212422 Nightstand

REVISION 0 : 10/16/2017 REVISION 1 : 12/26/2017 REVISION 2 : 08/09/2018 REVISION 3 : 01/02/2019 REVISION 4 : 12/13/2019

COASTERFURNITURE.COM

ITEM: 212422

ASSEMBLY INSTRUCTIONS



ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

5 MINUTES

PARTS IDENTIFICATION

A NIGHTSTAND



1PC

B LEG



4PCS

HARDWARE IDENTIFICATION

1	BOLT (M6 x 50mm - BLK)	4PCS
2	LOCK WASHER (1/4" - BLK)	4PCS
3	FLAT WASHER (1/4"ID x 19mm - BLK)	4PCS
4	ALLEN WRENCH (M4 x 60mm - BLK)	1PC


NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.


ITEM:**212422**

COASTER

ASSEMBLY INSTRUCTIONS STEP 1

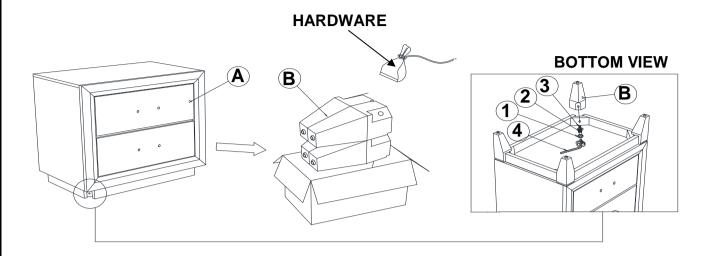

STEP 2

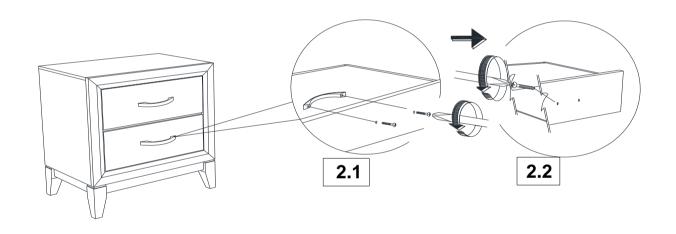

STEP 3 COMPLETE






COASTERFURNITURE.COM



Inner Size of Drawer : 17.00"W x 12.50"D x 4.00"H x 0.25"T

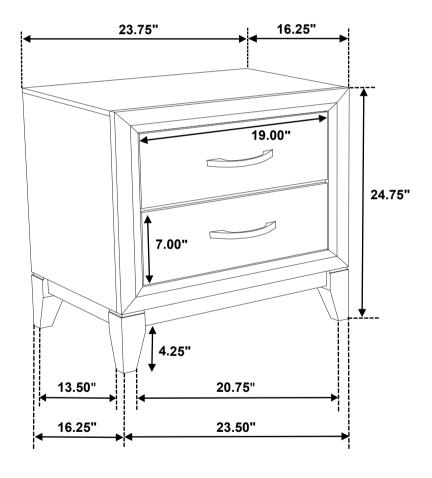

Note: Dimension tolerance ± 5%