

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life



REVISION 0 : 04/24/2019 REVISION 1 : 05/28/2019 REVISION 2 : 12/03/2019

PAGE 1 OF 3

COASTERFURNITURE.COM

ITEM: 223142 ASSEMBLY INSTRUCTIONS



ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.

2. This product is for home use only and not intended for commercial establishments.







PARTS IDENTIFICATION

A	NIGHTSTAND		1PC
В	LEG (WITH 'B' LABEL)		2PCS
С	LEG (WITH 'C' LABEL)		2PCS
HARDWARE IDENTIFICATION			
1	WOOD DOWEL (M8Ø x 30MM)		4PCS
2	BOLT (M6 x 40MM - RBW)	())=	4PCS
3	LOCK WASHER (1/4" x 12Ø - RBW)	Ø	4PCS
4	FLAT WASHER (1/4" x 19Ø - RBW)	(0)	4PCS
5	ALLEN WRENCH (M4 x 65MM - BLK)		1PC
NOTE:			

Phillips head screw driver is required in the assembly process; however, manufacturer does not provided this item.

PAGE 2 OF 3

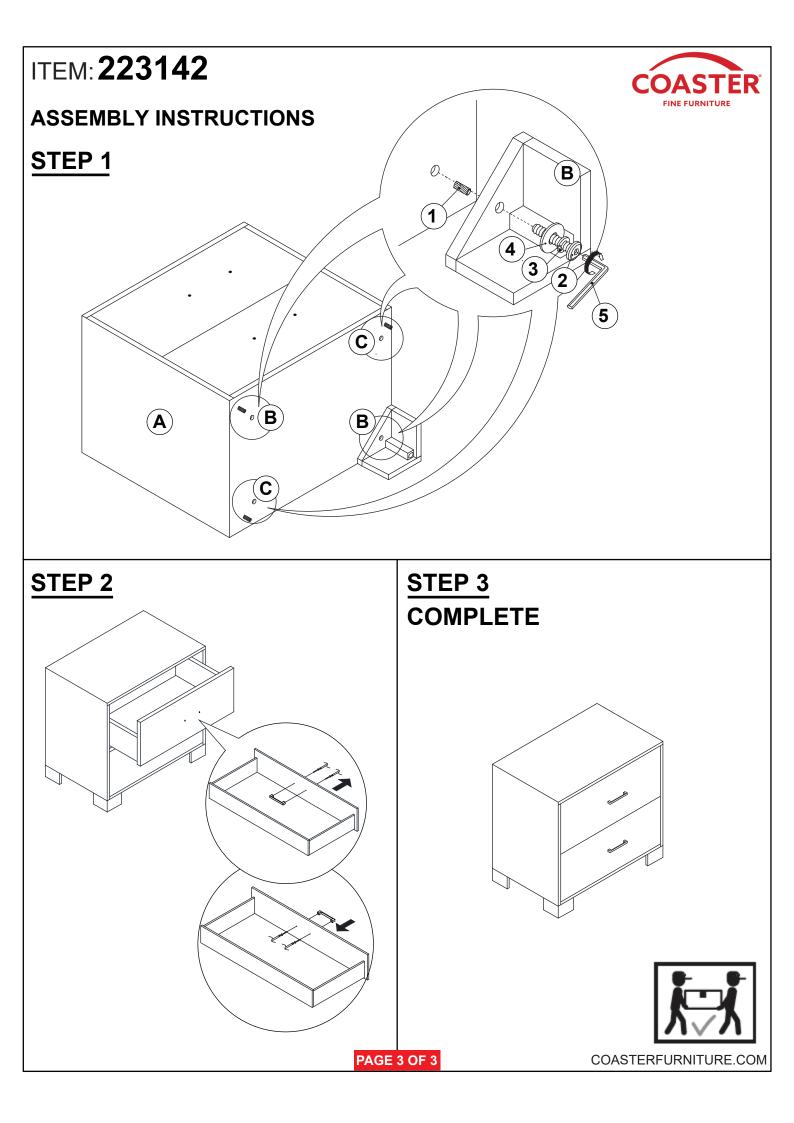

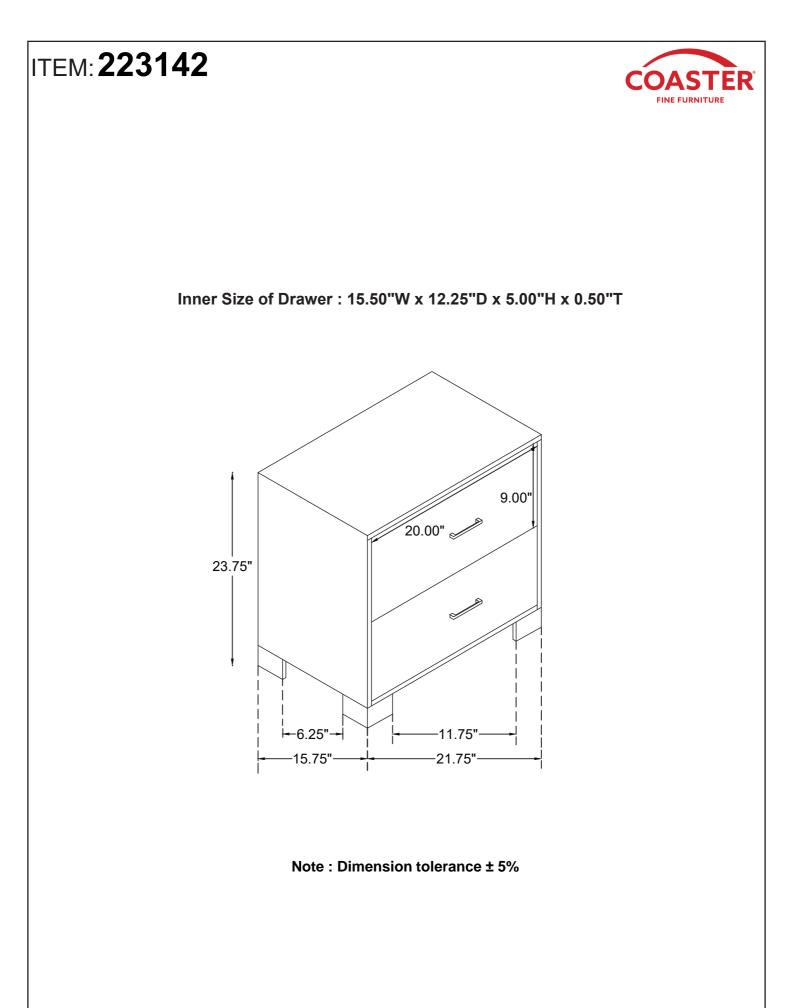

COASTERFURNITURE.COM