

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

100033 Dining Set

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

- Remove hardware from box and sort by size.
 Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

30 MINUTES

PARTS INDENTIFICATION

PARTS INDENTIFICATION				
No	DESCRIPTION & FIGURE	QTY		
Α	Table Top	1pc		
В	Table Leg	2pcs		
С	Table Frame	2pcs		
D	Chair Back	4pcs		
Е	Left Leg	4pcs		
F	Right Leg	4рсз		
G	Middle Rail	4pcs		
н	Front Rail	4pcs		
I	Seat Board	4pcs		

HARDWARE PACKAGE:


No	DESCRIPTION	FIGURE	QTY
1	BOLT (shorter)	((((6) M6x12mm	32pcs
2	TAP BOLT (longer)	(≭)))))>> M4x28mm	4pcs
3	BOLT (longer)		16pcs
4	BOLT (longer)	(((())) M6x25mm	8pcs
5	BOLT (longer)	(®) M6x40mm	8pcs
6	ALLEN KEY (4MM)		1pc

NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

STEP 1




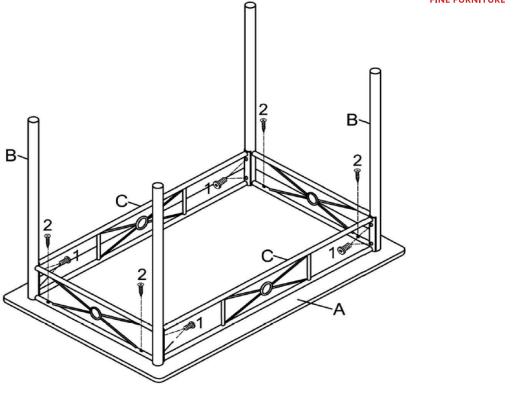

STEP 2

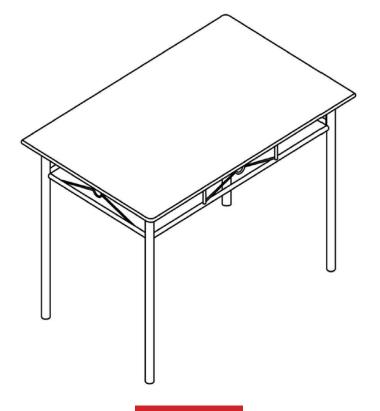


STEP 3

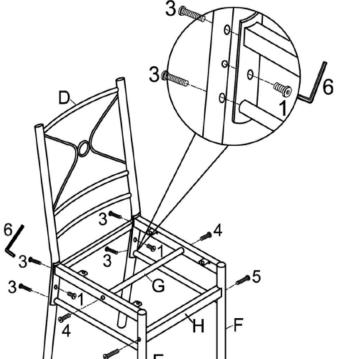



 $\times 4$

STEP 4

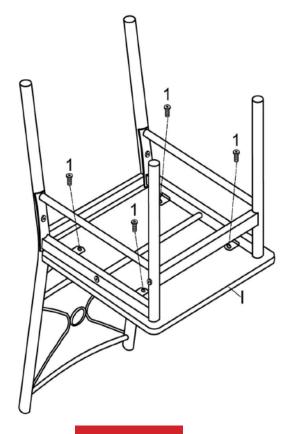

 $\times 4$

COASTER

STEP 5

COMPLETE





