

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

109811 *Dining Table*

COASTER

ASSEMBLY INSTRUCTIONS

 
ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

15 MINUTES

PARTS IDENTIFICATION

A	ТОР	1PC
В	APRON	2PCS
С	LEFT LEG	2PCS
D	RIGHT LEG	2PCS


HARDWARE IDENTIFICATION

1	SMALL ALLEN WRENCH (M4 - BLK)	1PC
2	SMALL BOLT (M6 x 50mm - RBW)	8PCS
3	HALF ROUND NUT (M6 - BLK)	8PCS
4	BIG ALLEN WRENCH (M5 - BLK)	1PC
5	BIG BOLT (M8 x 50mm - RBW)	12PCS
6	LOCK WASHER (M8 - RBW)	12PCS
7	FLAT WASHER (M8 - RBW)	12PCS
8	FLAT HEAD SCREW (M4 x 38mm - RBW)	16PCS
9	PLASTIC DOWEL (M8 x 30mm - BLK)	12PCS




ASSEMBLY INSTRUCTIONS


STEP 1

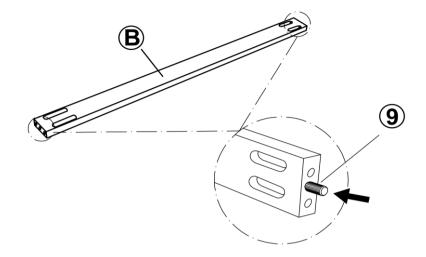

STEP 2

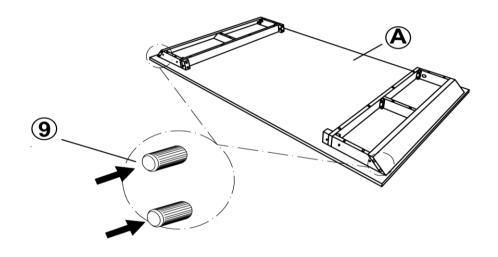

STEP 3

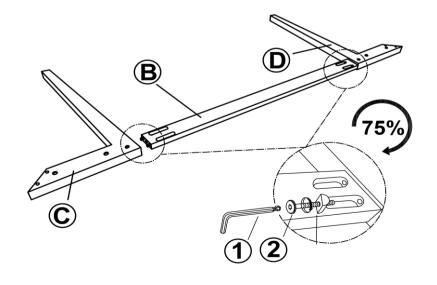


PAGE 3 OF 4


COASTERFURNITURE.COM




ASSEMBLY INSTRUCTIONS STEP 4

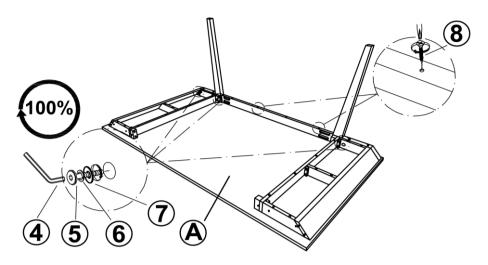

STEP 5

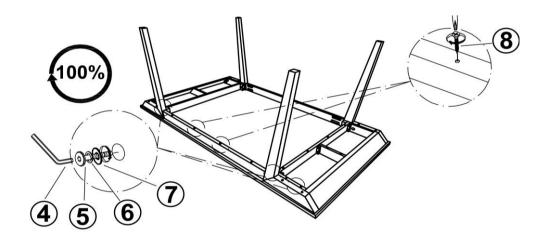


STEP 6 COMPLETE

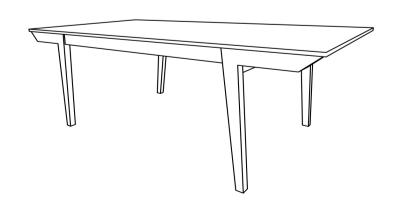

K

COASTERFURNITURE.COM



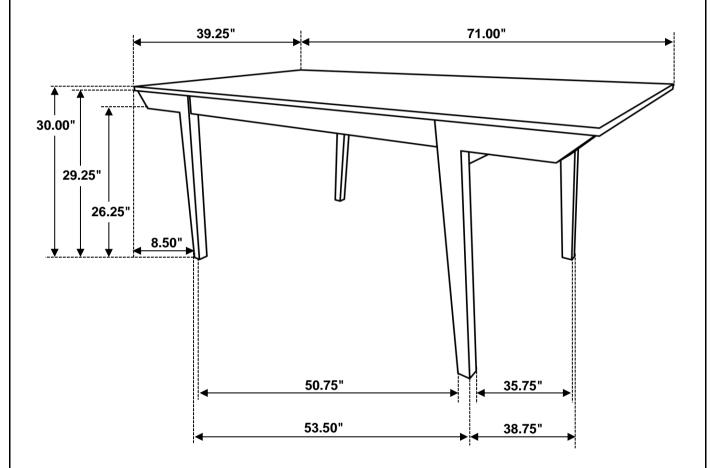

Note: Dimension tolerance ±5%