
 


## ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



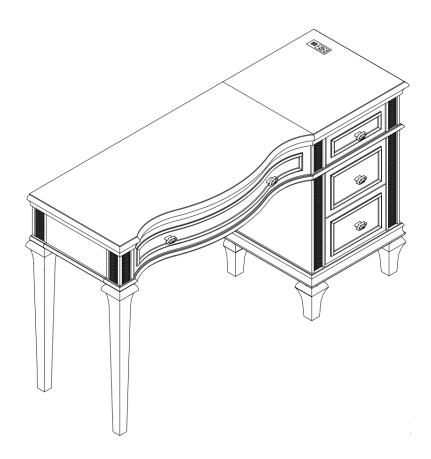






PAGE 1 OF 6

COASTERFURNITURE.COM

ITEN	л: <b>223397</b>						
AS	SEMBLY INSTR	RUCTIONS				COAS <sup>-</sup>	TER
ASSEMBLY TIPS: FINE FURNITURE							
<ol> <li>Remove hardware from box and sort by size.</li> <li>Please check to see that all hardware and parts are present prior to start of assembly.</li> </ol>							
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.							
WARNING!							
1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.							
<ul><li>2. This product is for home use only and not intended for commercial establishments.</li></ul>							
		SEMBLY TIME		10	MINUTES		
				-			
PARTS IDENTIFICATION							
<u>B</u> ′	<u>1 (BOX 1)</u>	$\frown$					
А	DESK TOP		1PC	в	FRONT LEG		1PC
^	DESKTOP		110	Б	(WITH "B" LABEL)		110
С			1PC				
	(WITH "C" LABEL)						
<u>B2</u>	<u>(BOX 2)</u>	$\sim$		-			
					FRONT LEG		
D	COMPARTMENT		1PC	E	(WITH "E" LABEL)	ST -	2PCS
						$\checkmark$	
F	RIGHT BACK LEG		1PC	G	LEFT BACK LEG		1PC
•	(WITH "F" LABEL)	L7		•	(WITH "G" LABEL)	$\square$	
HARDWARE IDENTIFICATION							
Z-B1 (BOX 1) - HARDWARE PACK IS LOCATED IN 223397(B1)							
1	BOLT		8PCS	2	LOCK WASHER		8PCS
	(Φ5/16" x 40mm - RBW)			-	(Φ5/16" - RBW)		
3	FLAT WASHER				ALLEN WRENCH	ଳ	100
3	(Φ5/16" - RBW)	$\bigcirc$	8PCS	4	(4MM - RBW)		1PC
Z-B2 (BOX 2) - HARDWARE PACK IS LOCATED IN 223397(B2)							
5	BOLT (Φ5/16" x 60mm - RBW)		8PCS	6	LOCK WASHER (Φ5/16" - RBW)		8PCS
	(	<b>~</b>			. ,		
7	FLAT WASHER (Φ5/16" - RBW)		8PCS	8	ALLEN WRENCH (4MM - RBW)		1PC
	(	_		I	(		
PAGE 2 OF 6 COASTERFURNITURE							
				01-0			

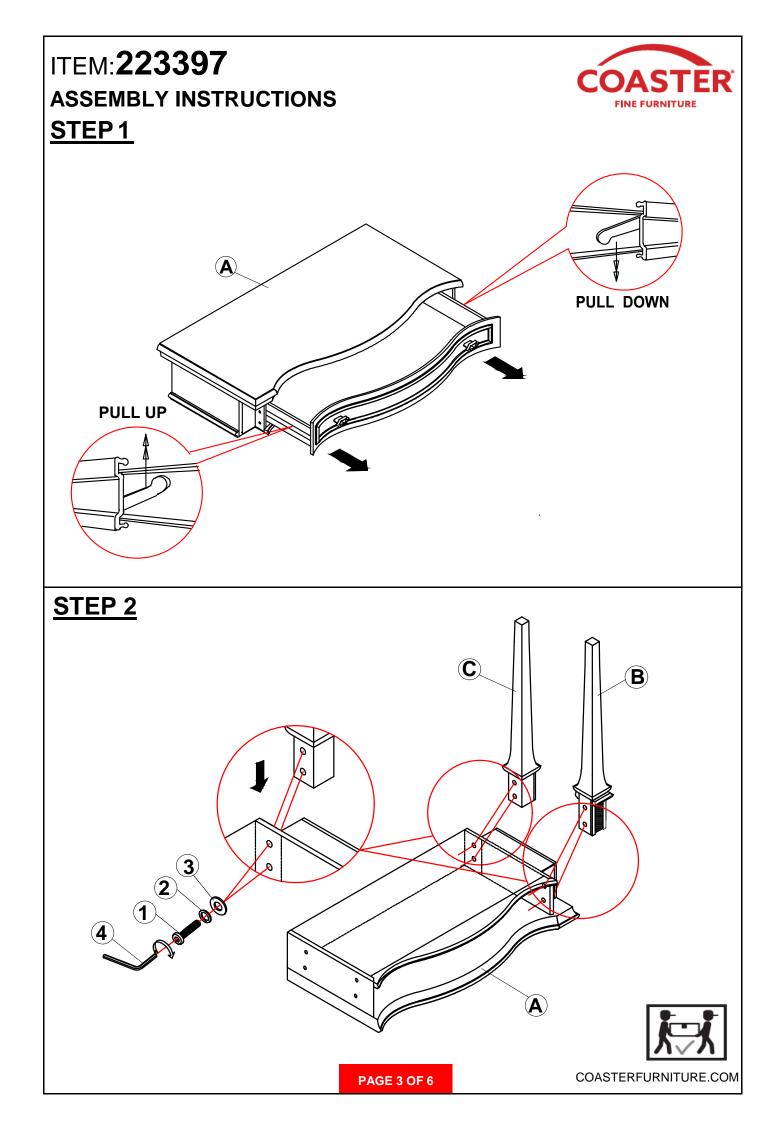

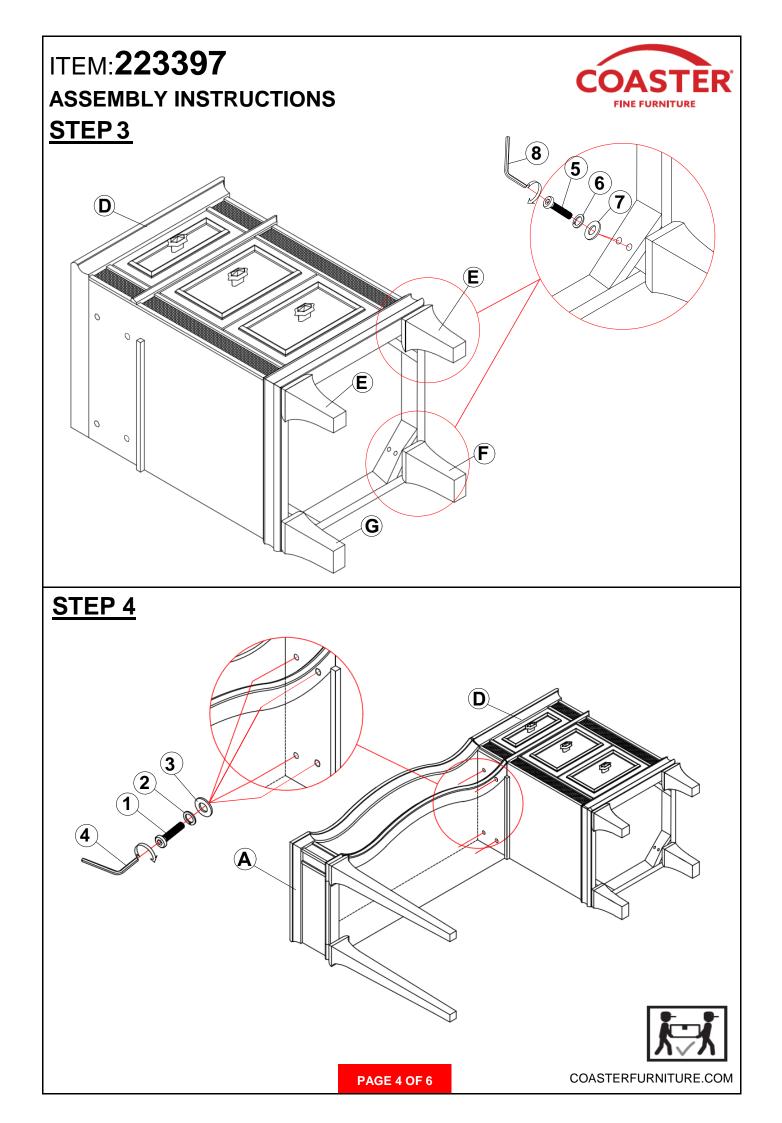

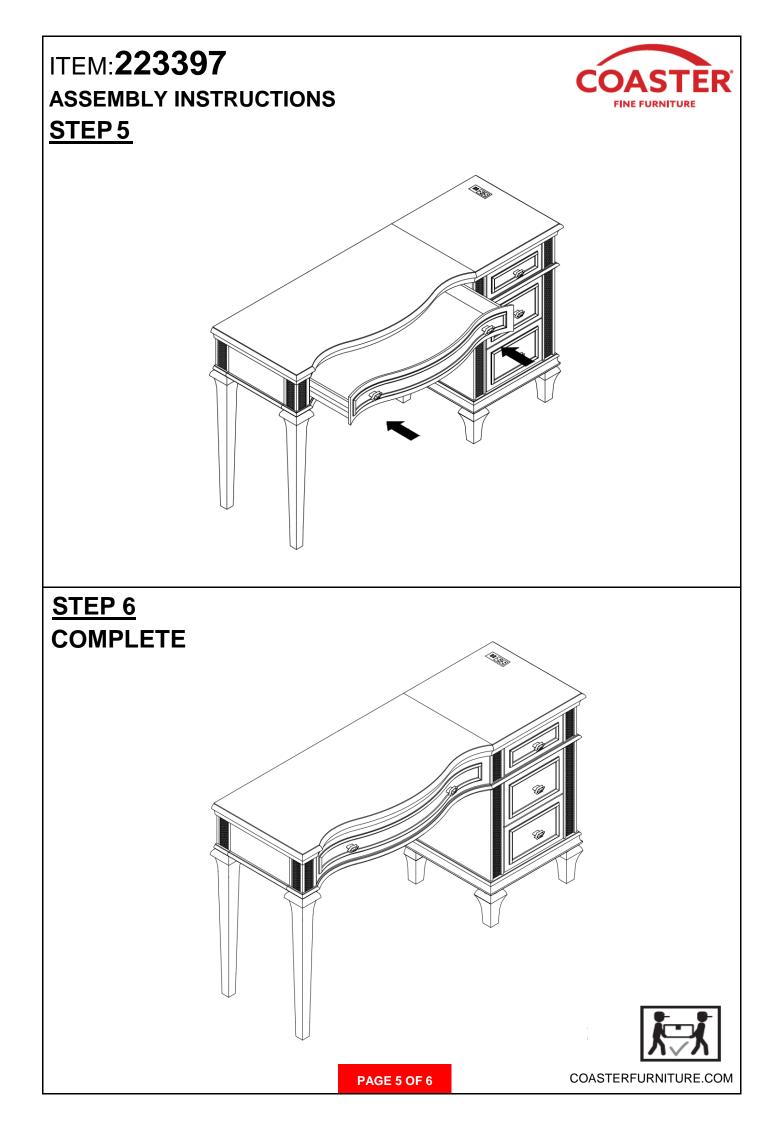

## ITEM: 223397



## ANTI-TIPPING INSTALLMENT INSTRUCTIONS FURNITURE TIPPING RESTRAINT

## WARNING

Injury may result from tipping furniture. This restraint may protect against tipping furniture. Do not allow children to climb on furniture. This restraint is not a substitute for proper adult supervision. Failure to detach this restraint before moving the furniture may result in injury and damage.

1. Attach one of the mounting brackets securely to the back edge of the furniture. Use the short screw.

2. Determine where the furniture is to be placed and mark location on the wall for the mounting bracket

screw hole approximately 2" below the bracket mounted to the edge of the furniture.

3. Drill a 3/16" hole in the wall. Press the plastic wall plug into the hole and gently tap until the flange on the wall plug is against the wall surface.

4. Position the bracket over the wall plug and use the long screw to securely attach the bracket to the wall.

5. Place the furniture so the bracket on the back edge is in line with the bracket on the wall.

6. Lace an end of the cable tie down through each bracket. Bring both ends together and slide the beaded end of the cable tie through the keyhole shaped slot on the other end until snug. Pull down on the beaded end until it snap locks into the keyhole slot.

7. To double lock return the beaded end back through the keyhole as shown.

8. Check to make sure the cable tie is securely laced and locked to the brackets.

