

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

115528 Counter Height Table

REVISION 0: 04/28/2022

PAGE 1 OF 4

COASTERFURNITURE.COM

ITEM: 115528



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

- Remove hardware from box and sort by size.
 Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

30 MINUTES

PARTS IDENTIFICATION

A	TOP	1PC	D	BACK LEGS	2PCS
В	LEFT FRONT LEG	1PC	E	SIDE RAIL	2PCS
С	RIGHT FRONT LEG	1PC	F	BACK RAIL	1PC

HARDWARE IDENTIFICATION


1	ALLEN WRENCH (4MM - BLK)	1PC	4	FLAT WASHER (Ø1/4" x 19MM-BLK)		8PCS
2	ALLEN BOLT (Ø1/4 x 2" - BLK)	8PCS	5	SCREW (#8 x 1-1/2 MM- BLK)	8	6PCS
3	LOCK WASHER (Ø1/4" -BLK)	8PCS				

ITEM: 115528


ASSEMBLY INSTRUCTIONS

COASTE


STEP 1

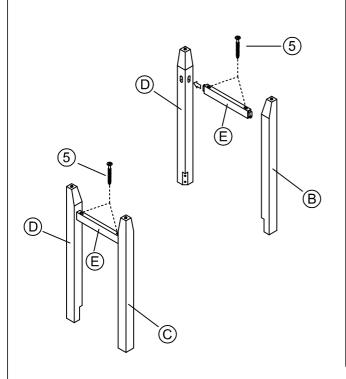


STEP 2

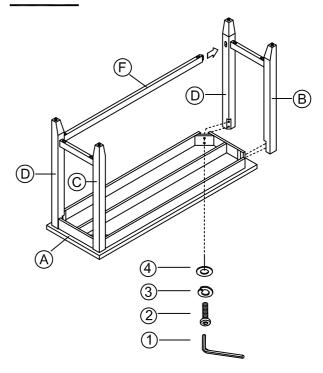

STEP 3

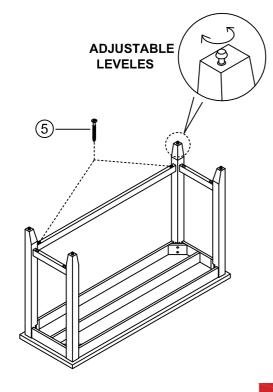

STEP 4 COMPLETE

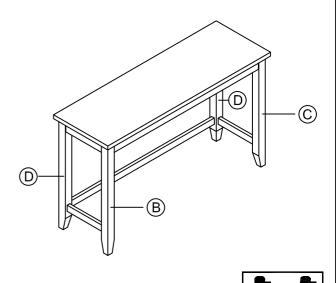


PAGE 3 OF 4

COASTERFURNITURE.COM

ITEM:**115528**



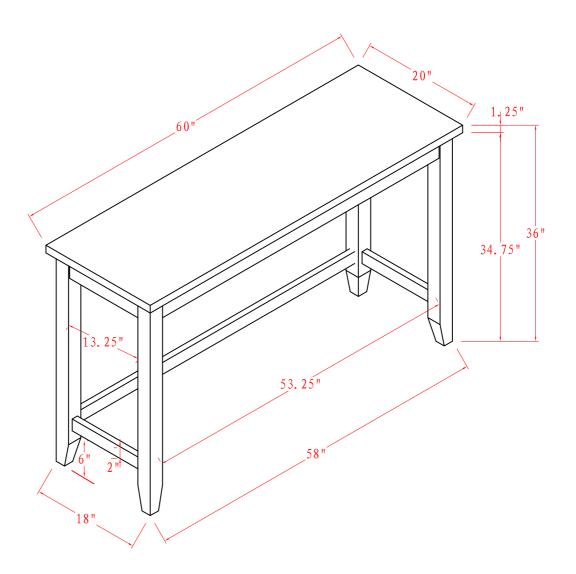

Note: Dimension tolerance ±5%