

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

107591 <u>Dining Table</u>

PAGE 1 OF 5 COASTERFURNITURE.COM

ASSEMBLY INSTRUCTIONS



ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

30 MINUTES

PARTS IDENTIFICATION

TOP 1PC LEG B 2PCS В 2PCS C LEG C D **MOUNTING BAR** 2PCS Ε SUPPORT BAR 2PCS F 2PCS TRESTLE BAR

ASSEMBLY INSTRUCTIONS



ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.


HARDWARE IDENTIFICATION

1	ALLEN WRENCH (M4 - BLK)		1PC
2	SHORT BOLT (M6 x 40mm - BLK)		26PCS
3	LONG BOLT (M6 x 70mm - BLK)		4PCS
4	LOCK WASHER (M6 - BLK)	0	30PCS
5	FLAT WASHER (M6 - BLK)		26PCS
6	PLASTIC DOWEL (M8 x 30mm - BLK)		20PCS




ASSEMBLY INSTRUCTIONS




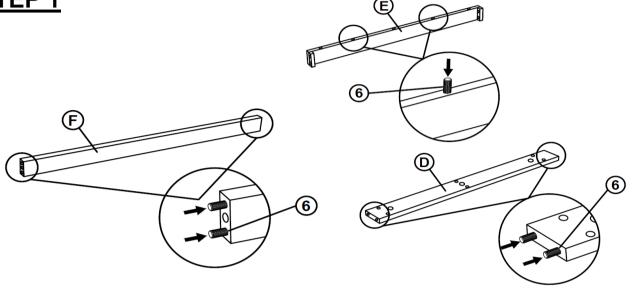

STEP 2

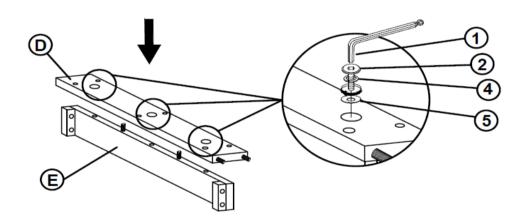


STEP 3

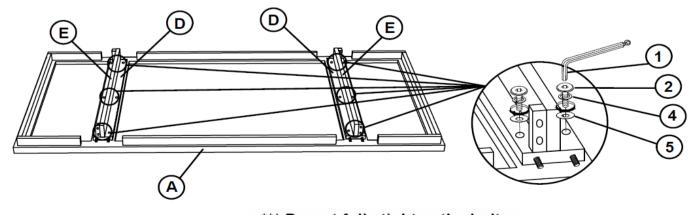


*** Do not fully tighten the bolt

PAGE 4 OF 5

COASTERFURNITURE.COM

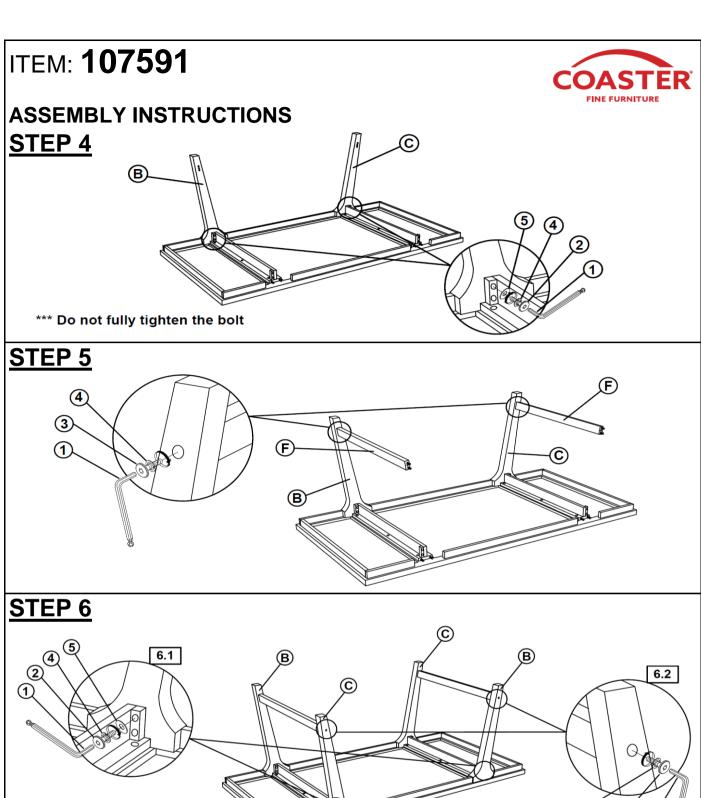

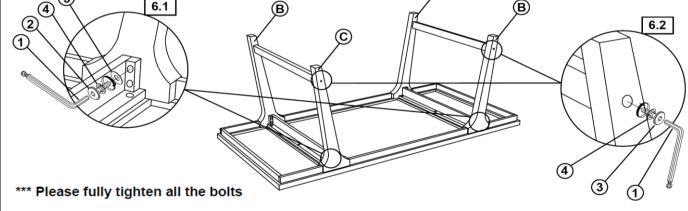


PAGE 5 OF 5





COASTERFURNITURE.COM



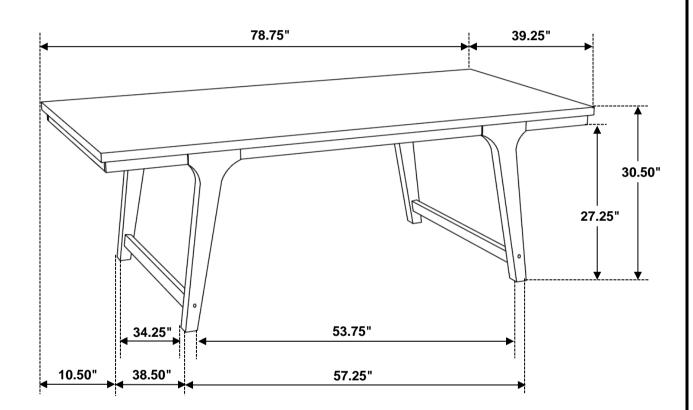

Note: Dimension tolerance ±5%