


ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE

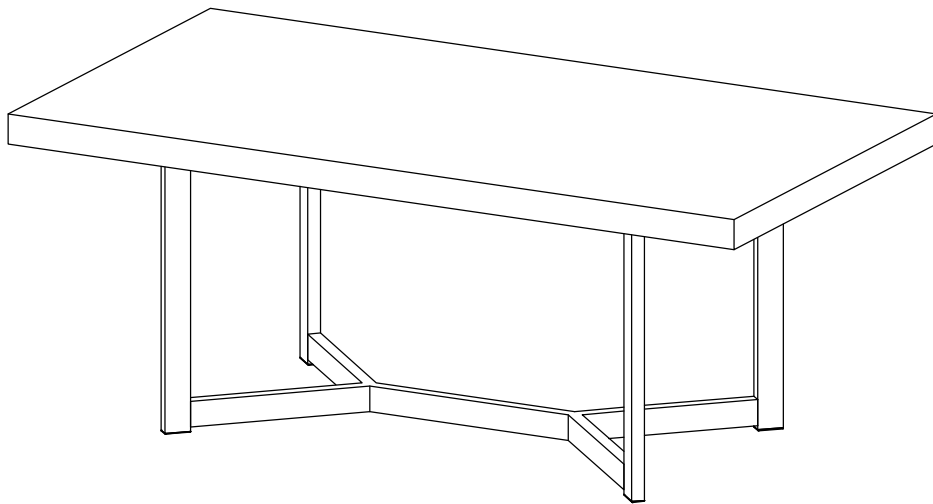

Fine Furniture for every stage of life

107121
DINING TABLE

ITEM:107121



ASSEMBLY INSTRUCTIONS


ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!


1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

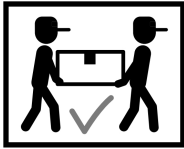

ASSEMBLY TIME 20 MINUTES


PARTS IDENTIFICATION

A TOP

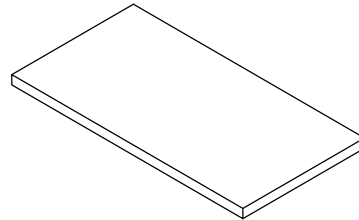

1PC

B LEG FRAME SUPPORT

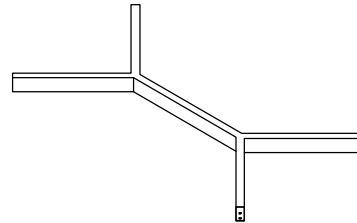

1PC

C LEG



4PCS

HARDWARE IDENTIFICATION

1 SHORT BOLT
(1/4" x 12mm SR)



8PCS

2 LONG BOLT
(1/4" x 42mm SR)



 
8PCS

3 CAP
(30 x 30mm BLK)



4PCS

4 ALLEN WRENCH
(4mm)




1PC

ITEM:107121




ASSEMBLY INSTRUCTIONS

STEP 1 Do not tighten until each step is completed or instructed.

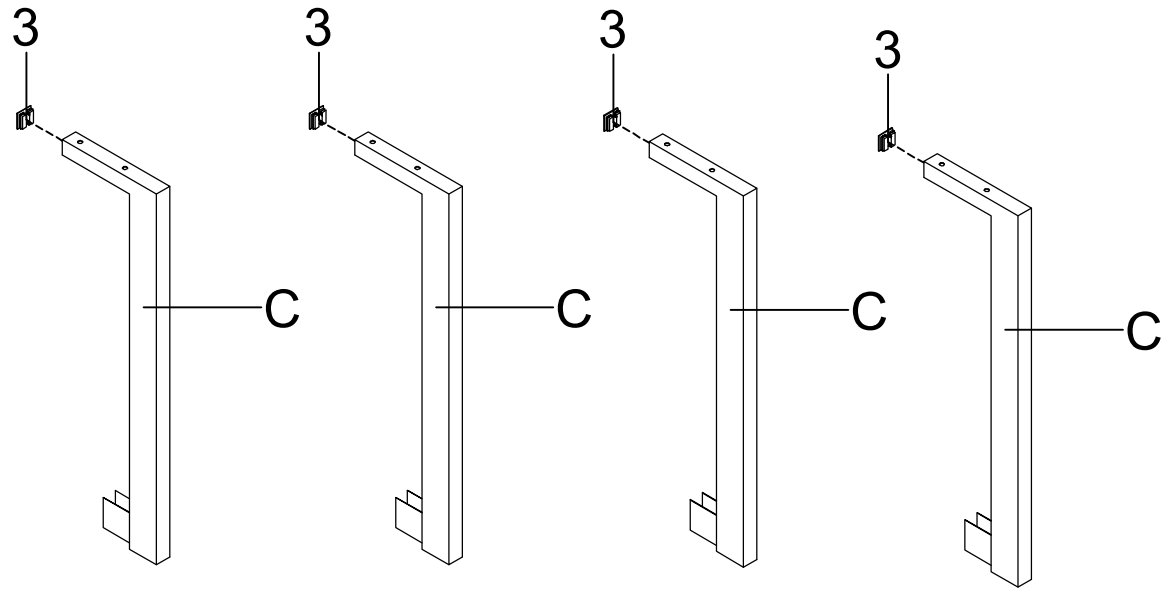


STEP 2

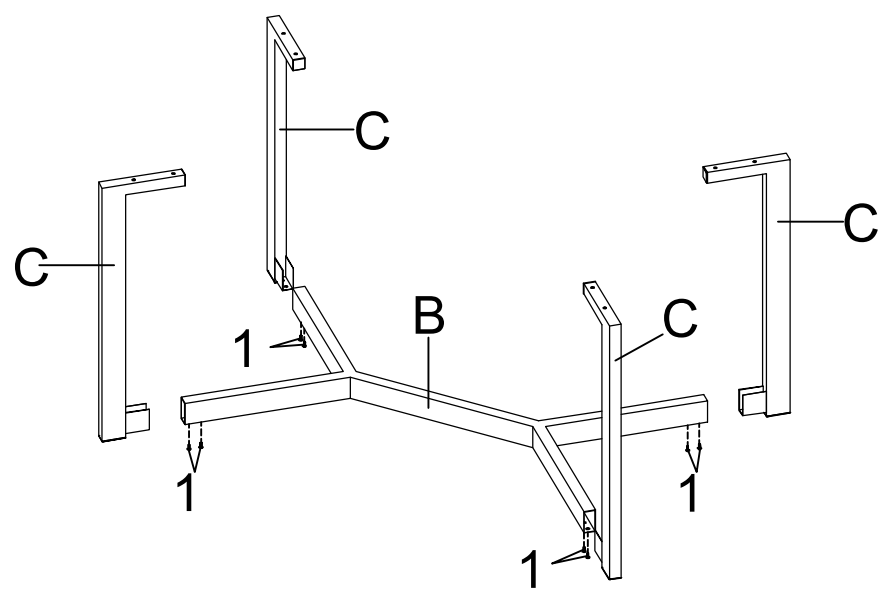



ITEM:107121

ASSEMBLY INSTRUCTIONS

STEP 3

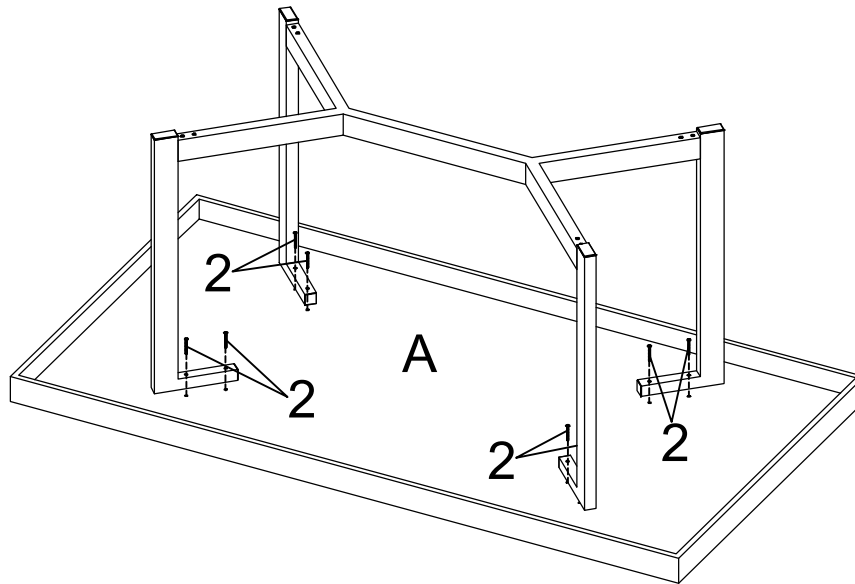


STEP 4

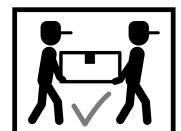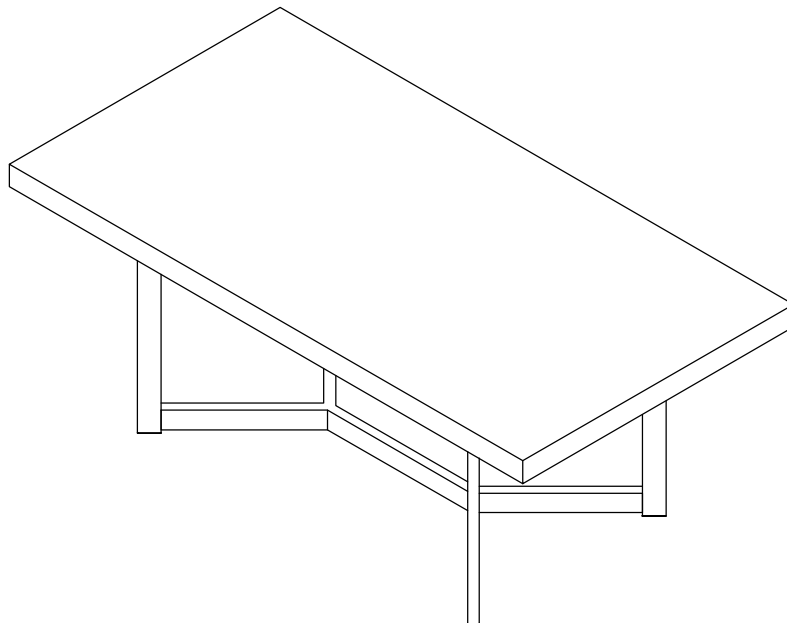

ITEM:107121 ASSEMBLY INSTRUCTIONS



Product Size : 1829 X 965 X 749 H (MM)
Product Size : 72" X 38" X 29.5"

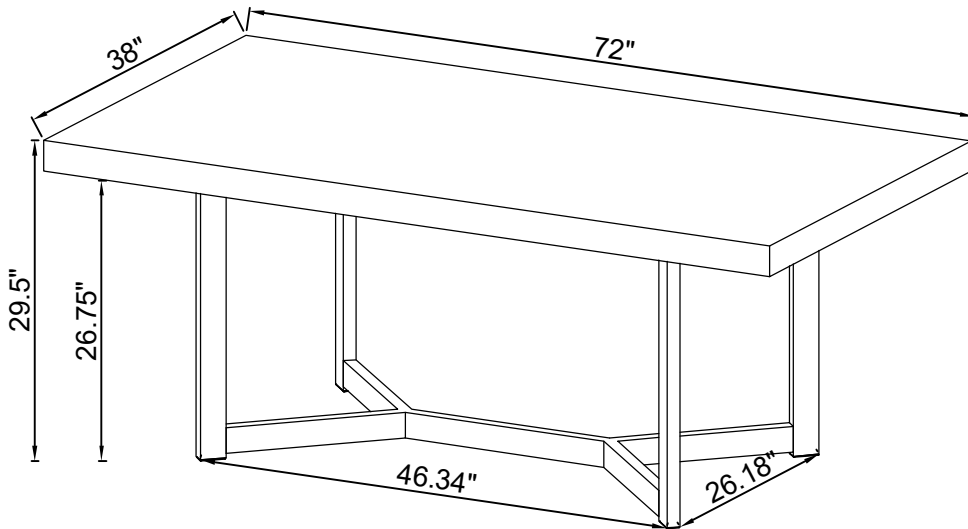

Note : Dimension tolerance $\pm 5\%$