

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

609452 Youth Rocking Chair

REVISION 0: 06/20/2020 REVISION 1: 05/24/2021

PAGE 1 OF 6

ASSEMBLY INSTRUCTIONS



ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

20 MINUTES

PARTS IDENTIFICATION

AN	BACK FRAME		1PCE	EN	ROCKER	2PCS
BN	UPPER SIDE STRETCHER	00000	2PCS	FN	SEAT	1PC
CN	LOWER SIDE STRETCHER		2PCS	GN	LEFT ARMREST	1PC
DN	FRONT LEG FRAME		1PCE	HN	RIGHT ARMREST	1PC

HARDWARE IDENTIFICATION


1	PAN HEAD SCREW 3 (5x50mm - RBW)		2PCS	3	PAN HEAD SCREW 1 (4x35mm - RBW)	Communica	14PCS
2	PAN HEAD SCREW 2 (4x50mm - RBW)	Commission	4PCS	4	GLUE	(I) GLUE	1PC

NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.



ASSEMBLY INSTRUCTIONS STEP 1

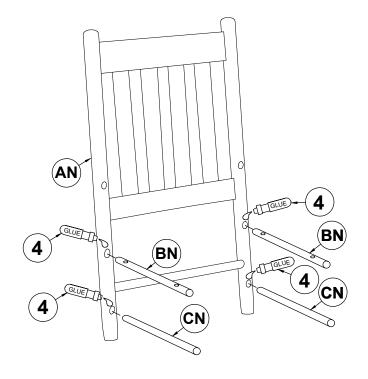


STEP 2

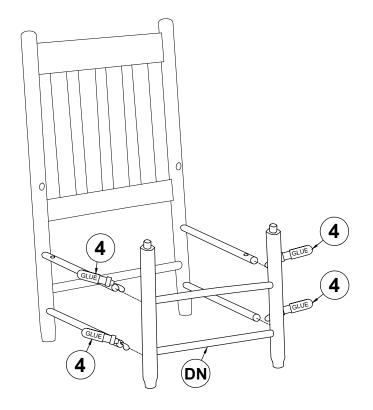


PAGE 3 OF 6



ASSEMBLY INSTRUCTIONS STEP 3

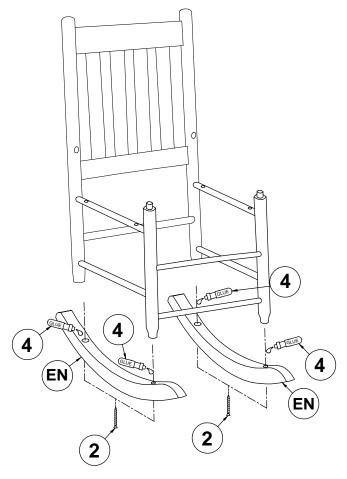

STEP 4

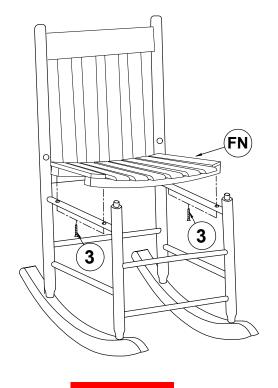


PAGE 4 OF 6




ASSEMBLY INSTRUCTIONS

STEP 5

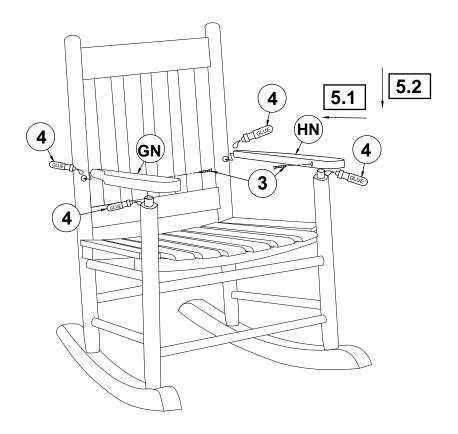

STEP 6

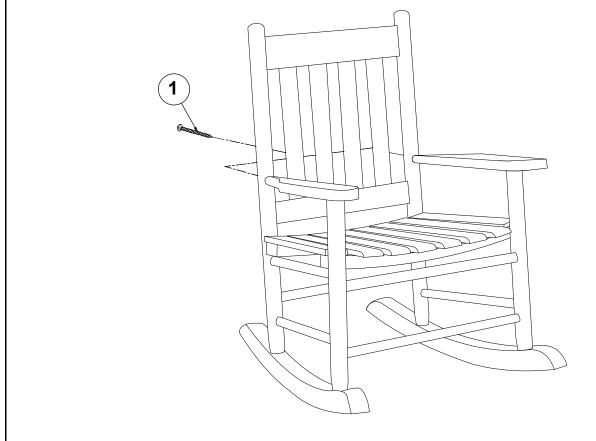


PAGE 5 OF 6

COASTER

ASSEMBLY INSTRUCTIONS

STEP 7

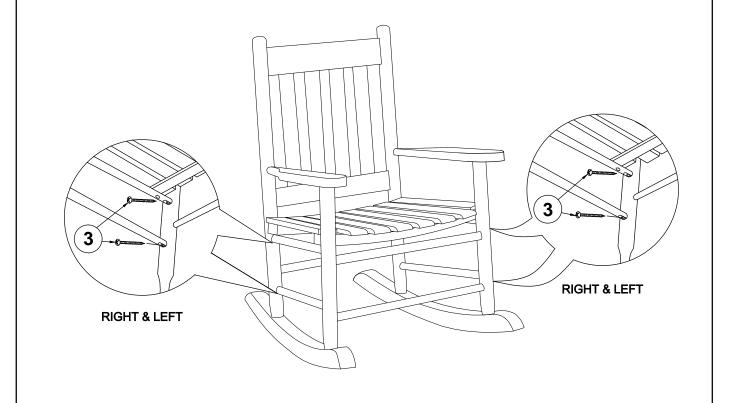


STEP 8 COMPLETE







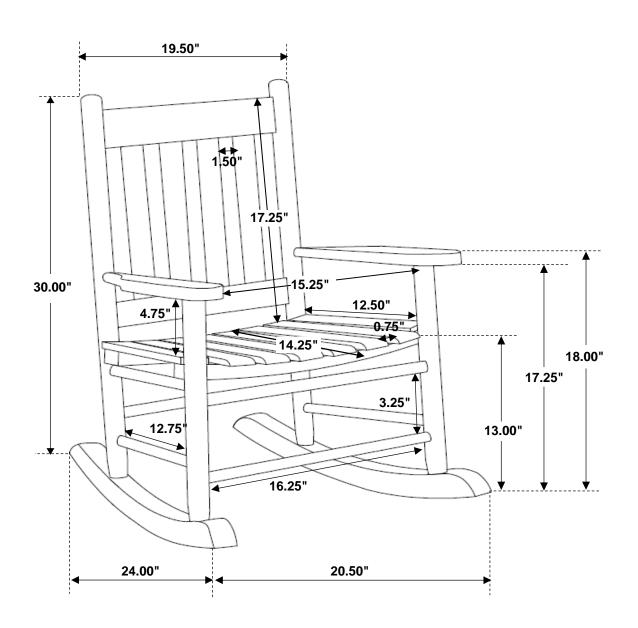

Note: Dimension tolerance ±5%