

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

190162
DINING CHAIR

REVISION 0: 05/21/2019 REVISION 1: 11/30/2019

REVISION 2: 07/28/2022

PAGE 1 OF 4

COASTERFURNITURE.COM

ITEM: 190162

ASSEMBLY INSTRUCTIONS



ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.





ASSEMBLY TIME

10 MINUTES

PARTS IDENTIFICATION

HARDWARE INDENTIFICATION

LARGE BOLT


-			
Α		BACK	1PC
В		SEAT CUSHION	1PC
С	<u> </u>	FRONT LEGS	2PCS

'		(M8×75mm)	4PCS
2	<u>()—————</u>	SMALL BOLT (M8×60mm)	4PCS
3	<u>()————————————————————————————————————</u>	SMALL BOLT (M8×55mm)	1PC
4		ALLEN KEY (M8)	1PC
5		LOCK WASHER (Ф8)	9PCS
6		FLAT WASHER (Φ8)	9PCS

ITEM: 190162

ASSEMBLY INSTRUCTIONS



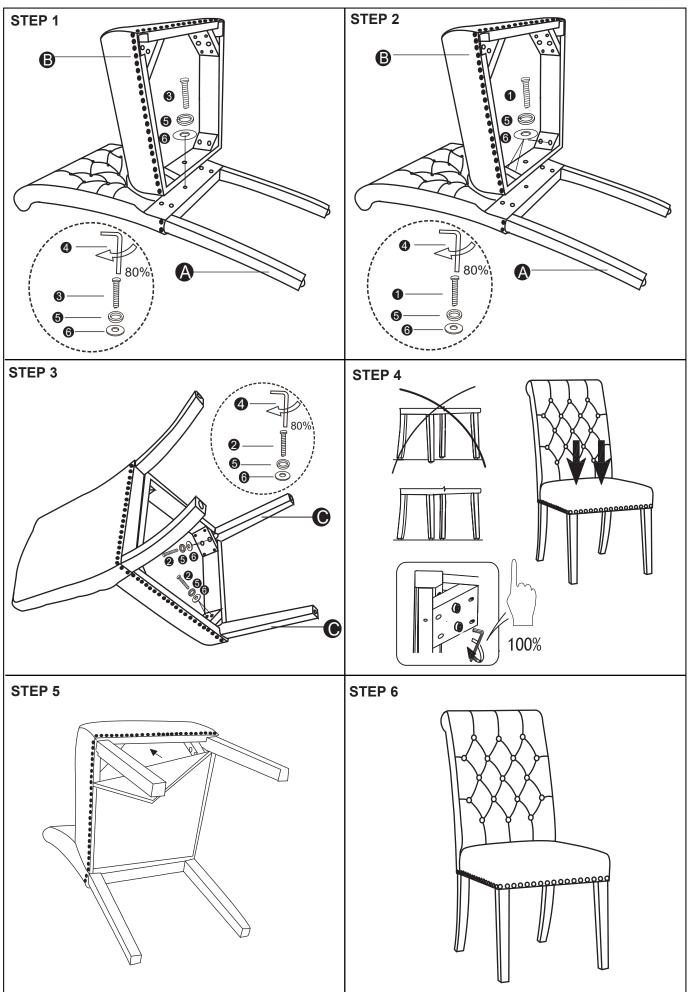

ITEM: 190162

COASTER

ASSEMBLY INSTRUCTIONS

