

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

923238

FLOOR LAMP

REVISION 0:06/01/2020 REVISION 1:12/01/2022 REVISION 2:07/13/2023

PAGE 1 OF 4

COASTERFURNITUER.COM

ITEM:923238

Assembly Instructions



ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.

Warning!



- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediatel
- 2. This product is for home use only and not intended for commercial establishments.

PARTS IDENTIFICATION

NO	DESCRIPTION	FIGURE	Q,TY	H HARDWARE PACKAGE			
Α	BASE		1 PC	NO	DESCRIPTION	FIGURE	Q,TY
				1	FLAT WASHER	0	1 PC
В	MAIN POST		1 PC	2	SPRING WASHER		1 PC
				3	NUT		1 PC
С	SHADE RING		3 PCS	4	WRENCH	2=0	1 PC
D	SHADE		3 PCS	5	SCREW	400>	1 PC
				6	HOLLOW SCREW	(District)	1 PC
E	ARMS	9	1 PC				
		Es.					
F	SOCKET RING	0	3 PCS				
G	LIGHT BULB		3 PCS				
			PAGE 2 OF 4	er.	ı		


COASTERFURNITUER.COM


ITEM:923238

Assembly Instructions STEP1




STEP2

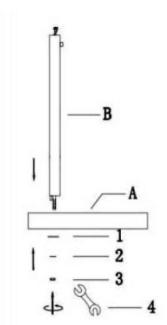


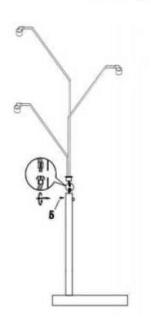

STEP3

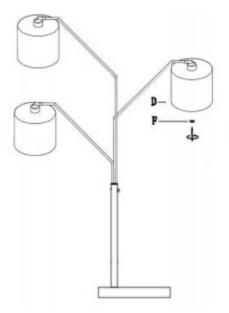

STEP4

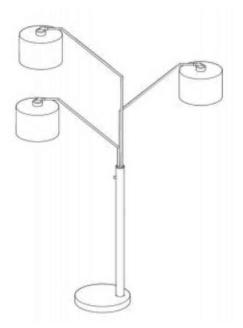


As a safety feature, and to reduce the risk of electric shock, this portable lamp includes a polarized plug (one blade is wider than the other). The plug will fit into a polarized outlet in a single direction only. If the plug does not fit fully in the outlet, reverse the plug and try again. If it still does not fit, contact a qualified electrician. DO NOT use with an extension cord unless, can be fully inserted. DO NOT alter the plug.

FLOOR LAMP: TYPE A LED BULB 9W

ITEM:923238



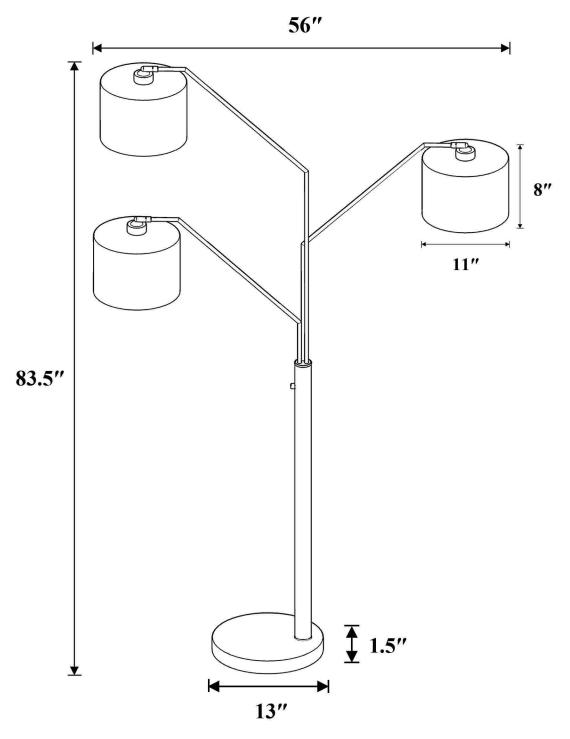

Note: Dimension tolerance ±5%