

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

709950 3PC OCCASIONAL SET

ITEM: 709950

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.

2. Please check to see that all hardware and parts are present prior to start of assembly.

3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!


1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately. 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

50 MINUTES

PARTS IDENTIFICATION

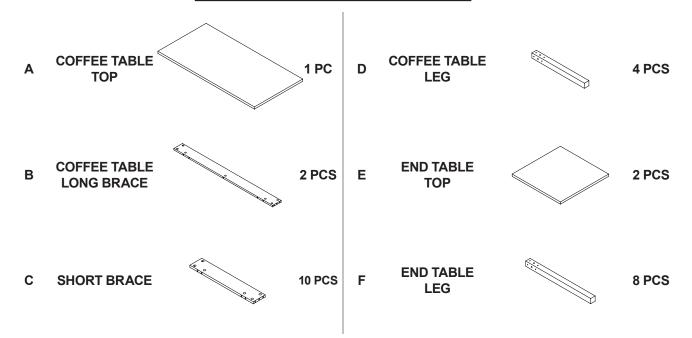



HARDWARE IDENTIFICATION


Z							
NO	DESCRIPTION	FIGURE	Q'TY	NO	DESCRIPTION	FIGURE	Q'TY
1	GLUE 40g		1 PC	5	WOODEN DOWEL		12 PCS
2	WOODEN DOWEL		48 PCS	6	PLASTIC FEET Ø15mm		12 PCS
3	CAM BOLT ∉7x35.5mm SR		74 PCS	7	STICKER		13 PCS
4	CAM LOCK ø15x12mm SR		74 PCS				


NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

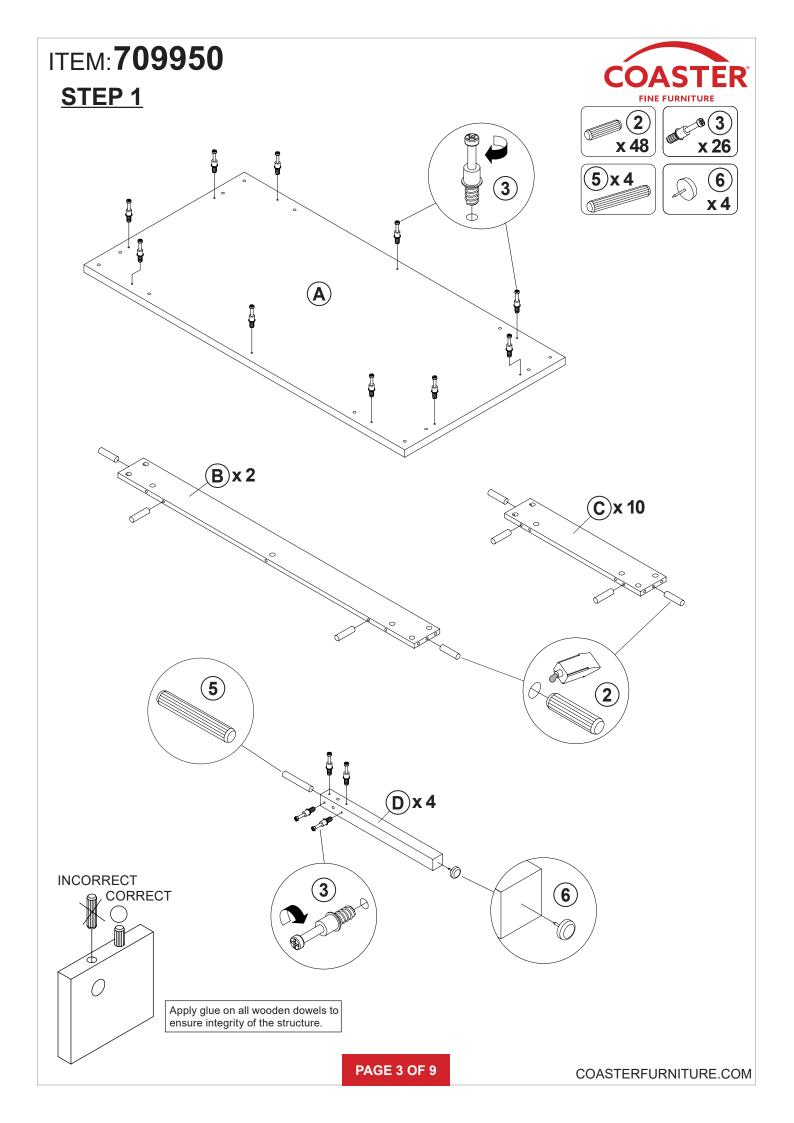

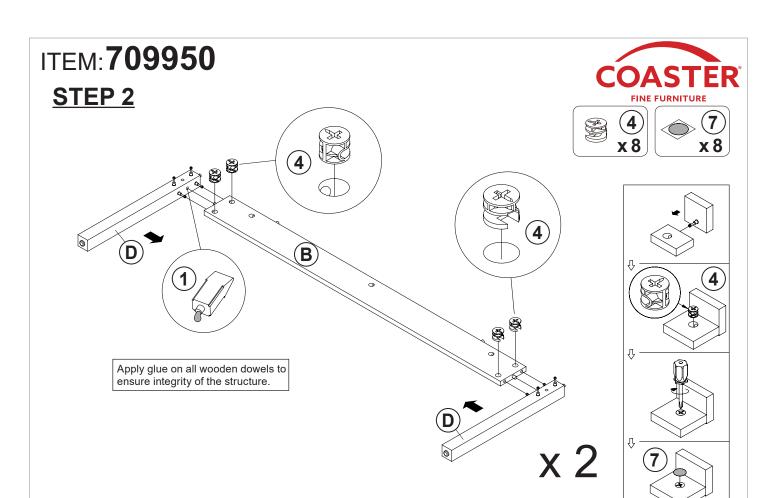

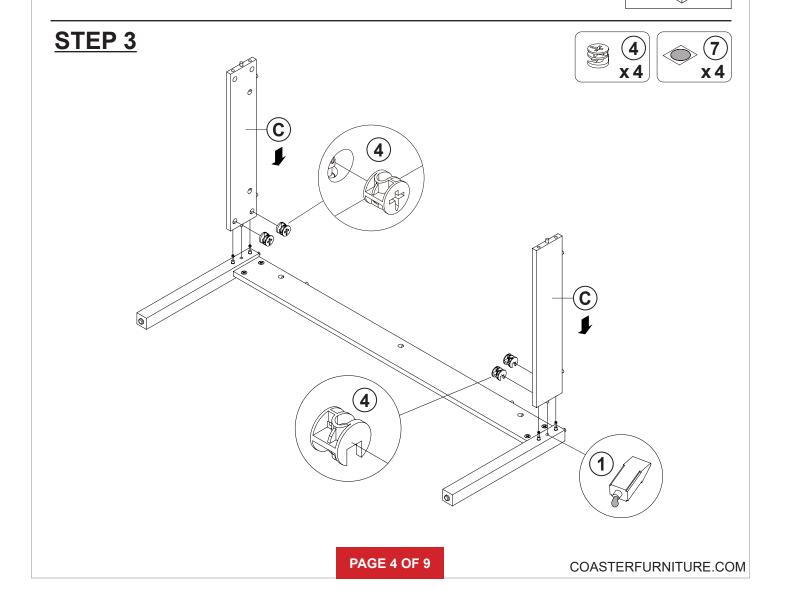

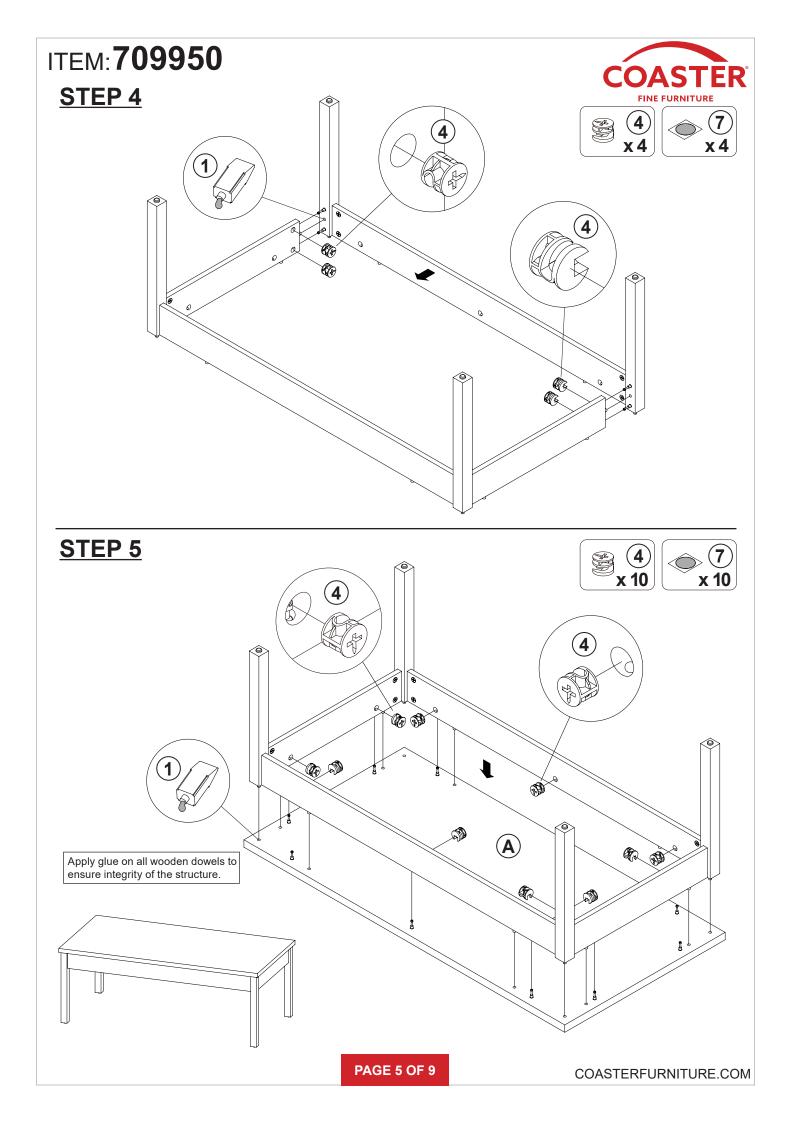


STEP 6 Apply glue on all wooden dowels to ensure integrity of the structure. (E) x 2 (B) x 8 (B) x 8 (COASTER FINE FURNITURE (S) (S) x 8 (S)

STEP 7






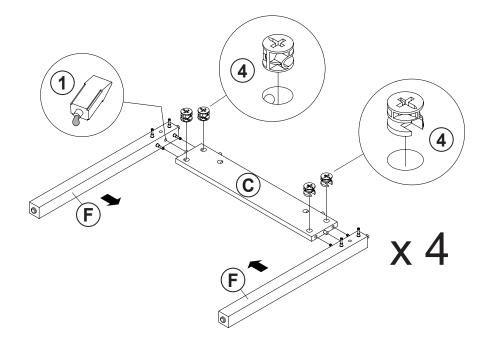

ITEM: **709950 STEP 8**




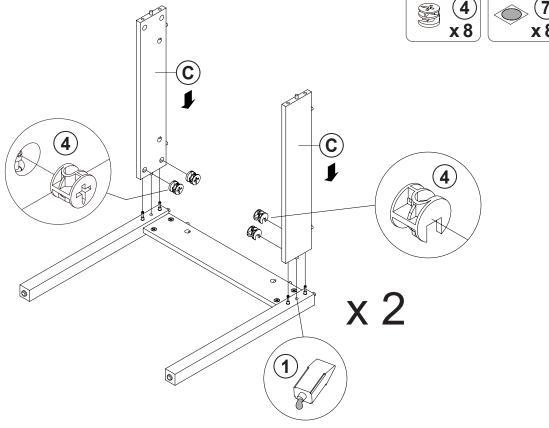

STEP 9






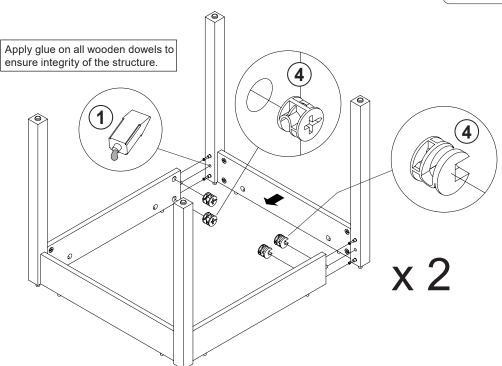

STEP 10 COASTER FINE FURNITURE Apply glue on all wooden dowels to ensure integrity of the structure.


STEP 11


COMPLETE

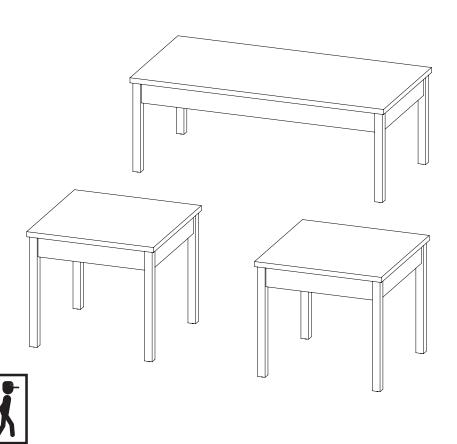

ITEM: **709950**



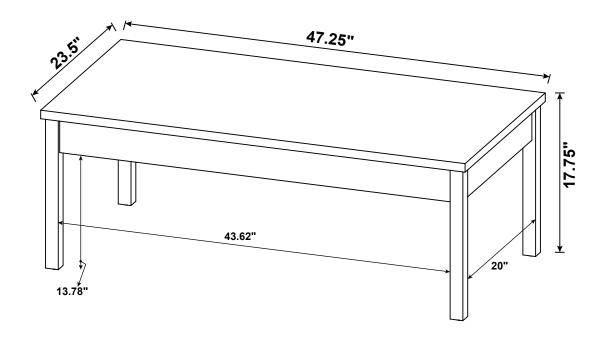

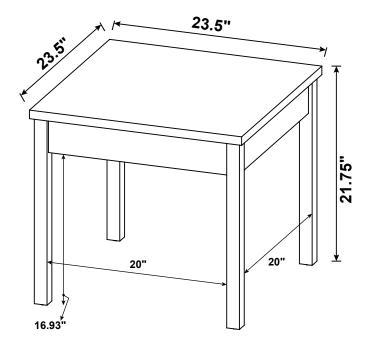

Note: Dimension tolerance ±5%