

## ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

# COUNTER HEIGHT STOOL

REVISION 0: 08/28/2023

PAGE 1 OF 7

COASTERFURNITURE.COM

# ITEM:182358 ASSEMBLY INSTRUCTIONS



COASTERFURNITURE.COM

#### **ASSEMBLY TIPS:**

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



#### WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.

ASSEMBLY TIME 35 MINUTES

#### PARTS IDENTIFICATION

**ACRYLIC SEAT** 1PC В FRONT AND BACK FRAME 2PCS C TOP CROSSBAR 2PCS D **BOTTOM CROSSBAR** 2PCS

PAGE 2 OF 7

## ITEM:182358

## ASSEMBLY INSTRUCTIONS



Ζ

### HARDWARE IDENTIFICATION





16PCS

5 PLASTIC BUSHING



4PCS

2 LONG BOLT (1/4" x 35mm SR)



4PCS

6 SPRING WASHER



4PCS

3 NUT



4PCS

ALLEN WRENCH (4mm)



1PC

4 CAP (20 x 20mm BLK)




4PCS

# ITEM:182358 ASSEMBLY INSTRUCTIONS




STEP 1

Do not tighten until each step is completed or instructed.

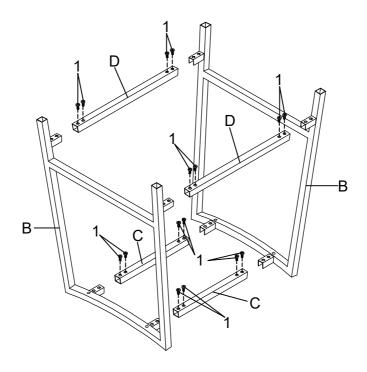

## STEP 2

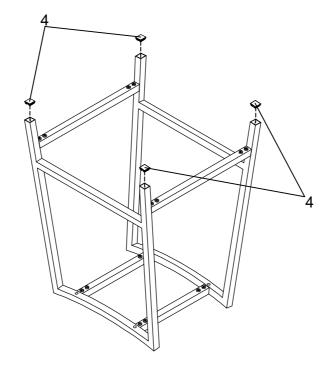


PAGE 4 OF 7


COASTERFURNITURE.COM

# ITEM:182358 ASSEMBLY INSTRUCTIONS STEP 3



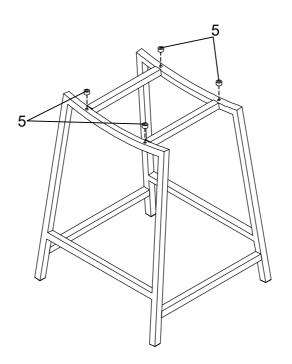

### STEP 4

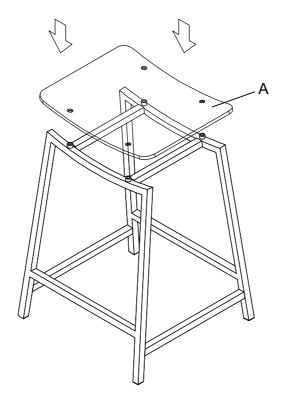


PAGE 5 OF 7


COASTERFURNITURE.COM

# ITEM:182358 ASSEMBLY INSTRUCTIONS STEP 5



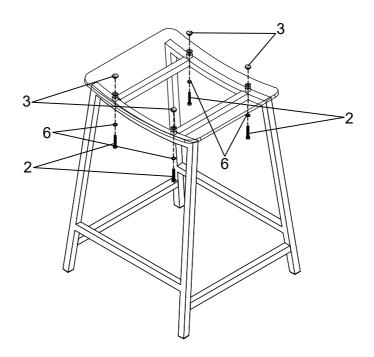

## STEP 6 COMPLETE

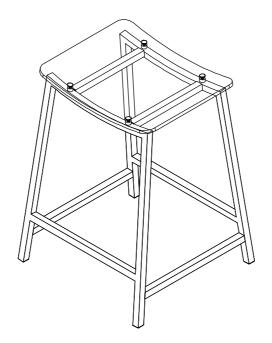


How to clean Acrylic product:
Using a dry soft microfiber cloth, lightly brush off any dust.
For additional care, dampen the cloth with warm water.
For deepest cleaning, use an Acrylic cleaner.

# ITEM:182358 ASSEMBLY INSTRUCTIONS



Product Size: 457 X 406 X 610 H (MM)

Product Size: 18" X 16" X 24"

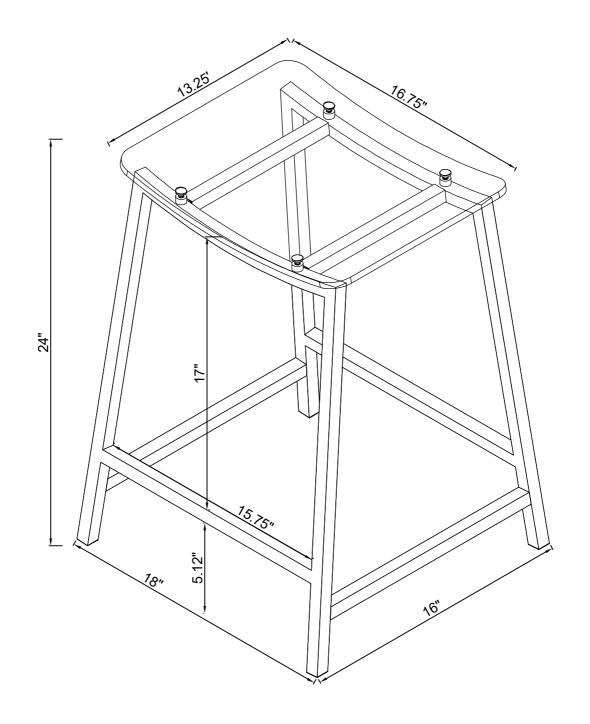

Note: Dimension tolerance ±5%