

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

901199 *FLOOR LAMP*

REVISION 0:05/07/2019 REVISION 1:12/01/2022 REVISION 2:04/26/2023 REVISION 3:07/21/2023



COASTERFURNITURE.COM

ITEM:901199

Assembly Instructions

COASTER

ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.

Warning!



- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediate
- 2. This product is for home use only and not intended for commercial establishments.

PARTS IDENTIFICATION

NO	DESCRIPTION	FIGURE	Q,TY	HARDWARE PACKAGE			
Α	PLATE	•	1 PC	NO	DESCRIPTION	FIGURE	Q,TY
В	LAMP BODY		1 PC	1	WRENCH	2000	1 PC
С	BASE		1 PC				
D	BOTTOM SHADE		1 PC				
E	TOP SHADE		1 PC				
F	RING	WAR	1 PC				
G	FLAT WASHER	•	1 PC				
Н	SPRING WASHER	•	1 PC				
1	NUT	•	1 PC				
J	HOLLOW SCREW	_	1 PC				
K	SCREW	•	1 PC				
L	LIGHT BULB		1 PC				

PAGE 2 OF 4

ITEM:901199


Assembly Instructions


STEP1




STEP2


STEP4

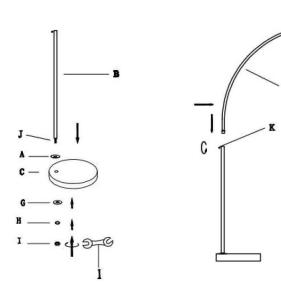


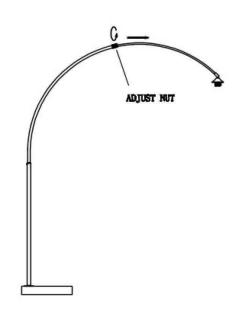

 STEP3



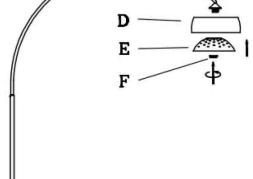

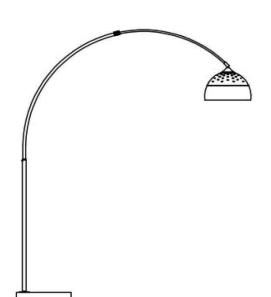


As a safety feature, and to reduce the risk of electric shock, this portable lamp includes a polarized plug (one blade is wider than the other). The plug will fit into a polarized outlet in a single direction only. If the plug does not fit fully in the outlet, reverse the plug and try again.

If it still does not fit, contact a qualified electrician. DO NOT use with an extension cord unless, can be fully inserted. DO NOT alter the plug.

FLOOR LAMP: TYPE A LED BULB 9W

ITEM:901199



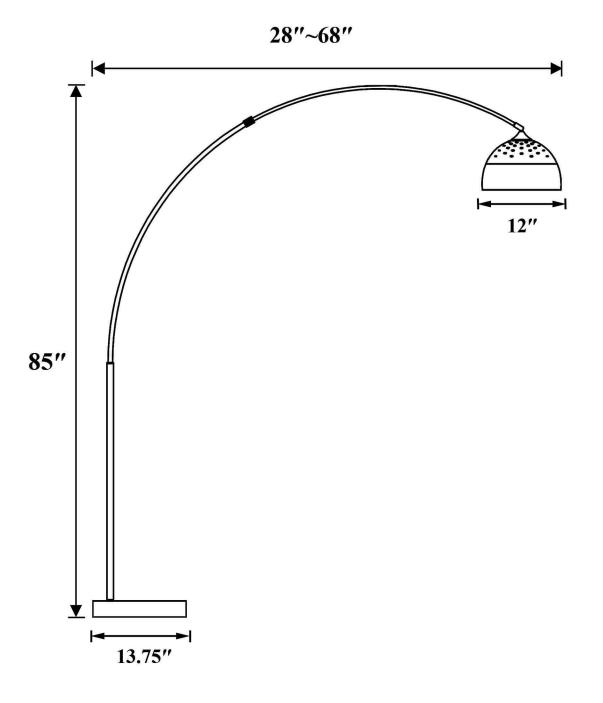

Note: Dimension tolerance ±5%

PAGE4 OF 4

COASTERFURNITUER.COM