

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

224744 Mirror

ITEM: 224744

ASSEMBLY INSTRUCTIONS



ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

5 MINUTES

PARTS IDENTIFICATION

A DRESSER



1PC

B MIRROR



1PC

C MIRROR SUPPORT (PACKED WITH DRESSER)



2PCS

HARDWARE IDENTIFICATION

1 BOLT (Φ1/4" x 38mm - BLK)



6PCS

2 LOCK WASHER (Φ1/4" x 11 x 2MM - BLK)



6PCS

3 FLAT WASHER (Φ1/4" x 19 x 2MM - BLK)



6PCS

4 ALLEN WRENCH (M4 x 58MM - BLK)




1PC

ITEM: **224744**


ASSEMBLY INSTRUCTIONS



STEP 1

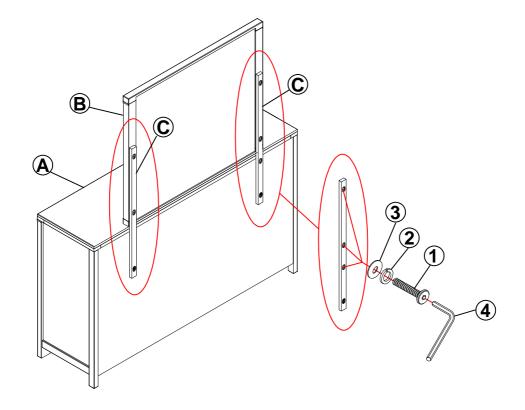


STEP 2 COMPLETE

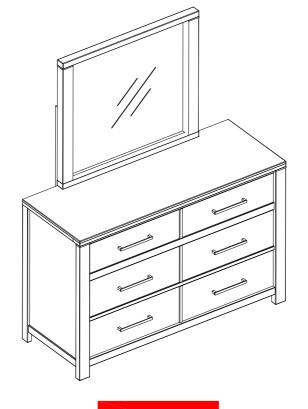



ITEM: **224744**



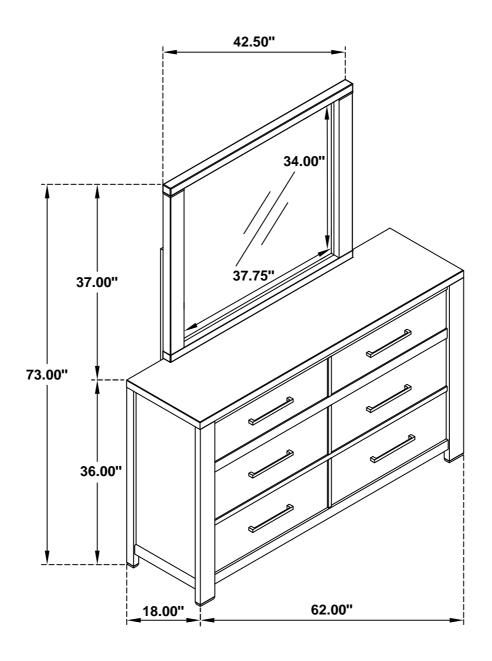

Note: Dimension tolerance ±5%