

# ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

360097 Sofa Bed

REVISION 0: 05/03/2019 REVISION 1: 03/22/2021 REVISION 2: 07/21/2022 REVISION 3: 10/20/2023 **ITEM: 360097** 



#### **ASSEMBLY INSTRUCTIONS**

#### **ASSEMBLY TIPS:**

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly. WARNING!

 $\triangle$ 

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

30 MINUTES

### **PARTS IDENTIFICATION**

A SOFABED 1PC D FRONT R-LEG 1PC

B BACK LEGS 2PCS E MIDDLE LEG 1PC


C FRONT L-LEG 5 1PC F ARM

# 6

2PCS

## HARDWARE IDENTIFICATION

6PCS **WASHER ALLEN WRENCH** 1PC **Z01 Z03** (10 x 25mm - BLK) (D 5mm - BLK) **PLASTIC WASHER** 2PCS **BOLT** 6PCS **Z**04 **Z02** (D 50mm - BLK) (8 x 30mm - BLK)

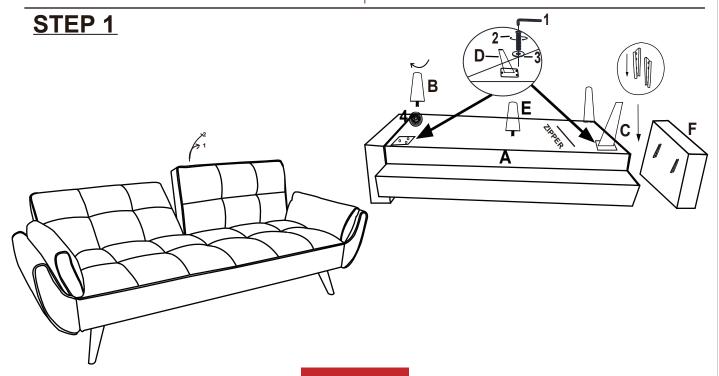

# **ITEM: 360097**

# **ASSEMBLY INSTRUCTIONS**



PRODUCT DIMENSION (Note: Dimension tolerance ±5%)

