

# ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE

**551302**

**551301**



Fine Furniture for every stage of life

**551301**  
**CORNER**

REVISION 0 : 05/03/2019  
REVISION 1 : 05/28/2021  
REVISION 2 : 07/22/2022  
REVISION 3 : 10/20/2023

# ITEM: 551301



## ASSEMBLY INSTRUCTIONS


### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

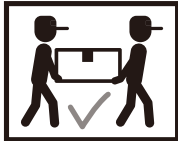

ASSEMBLY TIME

30 MINUTES


## PARTS IDENTIFICATION

A	CORNER SOFA		1PC	B	LEG		4PCS
---	-------------	--	-----	---	-----	--	------



## HARDWARE IDENTIFICATION

Z01	ALLEN WRENCH (D 5mm - BLK)		1PC	Z03	WASHER (10 x 25mm - BLK)		8PCS
Z02	BOLT (8 x 30mm - BLK)		8PCS				

### STEP 1

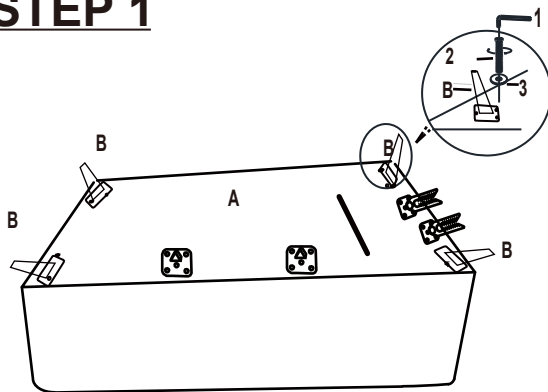

### STEP 2

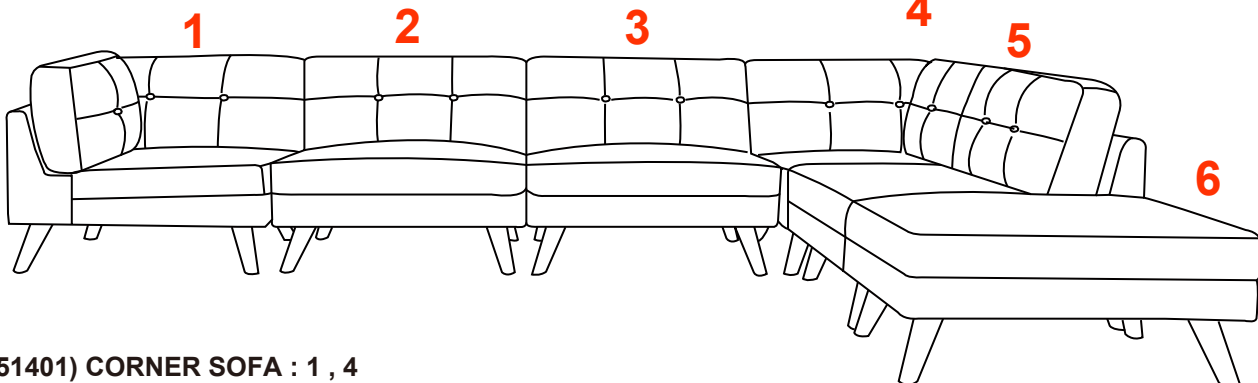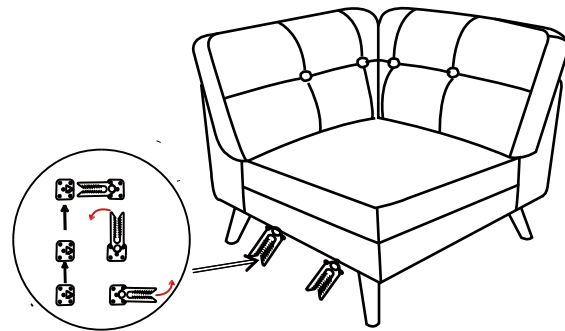

- (551401) CORNER SOFA : 1 , 4  
(551402) ARMLESS CHAIR : 2 , 3 , 5  
(551403) OTTOMAN : 6

ITEM: 551301



ASSEMBLY INSTRUCTIONS

PRODUCT DIMENSION (Note: Dimension tolerance  $\pm 5\%$  )

