

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

PAGE 1 OF 5

107872N Dining chair

COASTERFURNITURE.COM

ITEM: 107872N (B1-B2)

COASTER

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

10 MINUTES

PARTS IDENTIFICATION

<u>B1 (BOX 1)</u>

BACK

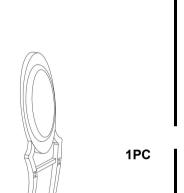

B2 (BOX 2)



NOTE:

В

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

PAGE 2 OF 5

COASTERFURNITURE.COM

ITEM:107872N (B1-B2)

ASSEMBLY INSTRUCTIONS



ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.

HARDWARE IDENTIFICATION

Z-B2 (BOX 2) - HARDWARE PACK IS LOCATED IN 107872N (B2)

1	ALLEN WRENCH (65 x 64MM - RBW)		1PC
2	SHORT BOLT (M8*25mm)		4PCS
3	Spring Shim	0	4PCS
4	BARREL NUT (Dia10mm)		4PCS

Hardware pack is located in 107872N B2

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM:107872N (B1-B2) **ASSEMBLY INSTRUCTIONS** STEP 1 STEP 2 PAGE 4 OF 5 COASTERFURNITURE.COM

ITEM:107872N (B1-B2)



