

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

Dining Side Chair

REVISION 0: 11/08/2015 REVISION 1: 12/01/2017 REVISION 2: 02/25/2020

ITEM: 106592

ASSEMBLY INSTRUCTIONS

COASTER

 
ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

10 MINUTES

PARTS IDENTIFICATION

AN	UPPER LEG FRAME	7. i	1PC
BN	LOWER LEG FRAME		1PC
CN	SEAT AND BACK		1PC
DN	WOOD CLEAT		2PCS

HARDWARE IDENTIFICATION

1	ALLEN WRENCH (M4 x 110mm - BLK)		1PC
2	BOLT (M6 x 70mm - RBW)		4PCS
3	LOCK WASHER (1/4" - BLK)		4PCS
4	FLAT WASHER (M6 x 13mm - RBW)		4PCS
5	PAN HEAD SCREW (M4 x 30mm-BLK)		8PCS
6	ALLEN HEAD SCREW (M7 X 50MM ZB(10#) - ZB)	©	1PCS


NOTE:

Phillips head screw driver is required in the assembly process. However, manufacturer does not provide this item. Quantities shown are for one chair.


ITEM: 106592 ASSEMBLY INSTRUCTIONS



STEP 1

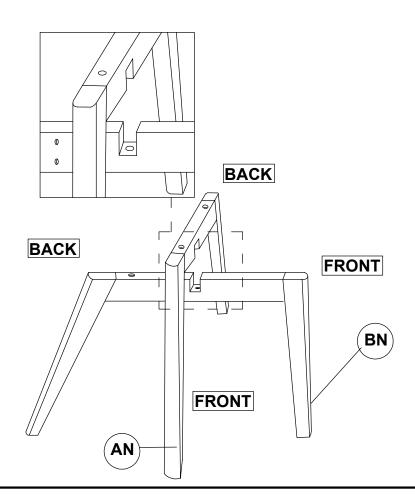


STEP 2

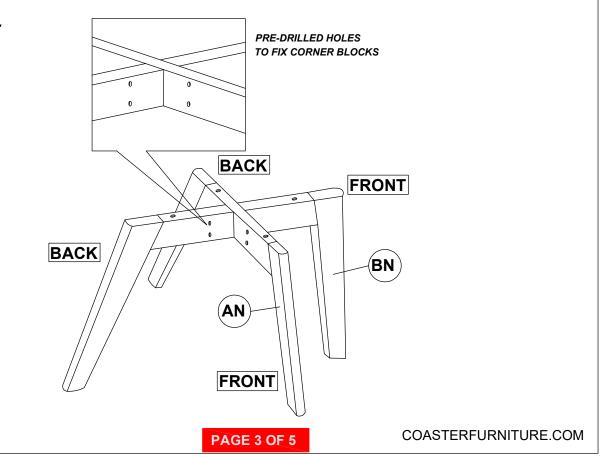


ITEM: 106592 **ASSEMBLY INSTRUCTIONS**





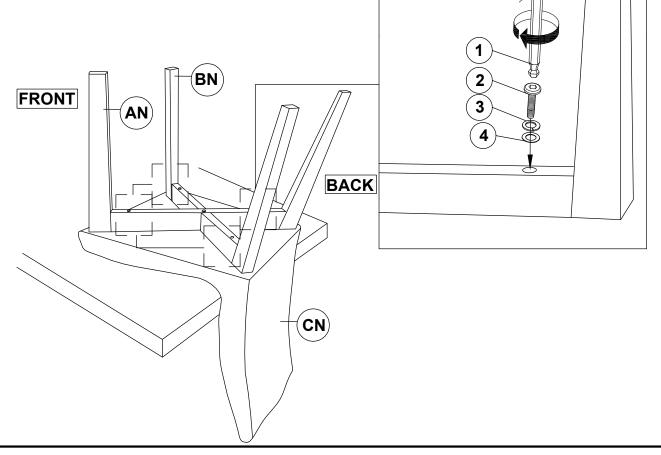

STEP 4

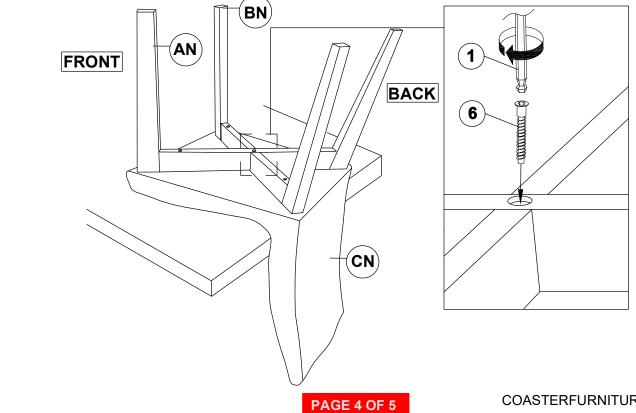


COASTERFURNITURE.COM


ITEM: 106592 ASSEMBLY INSTRUCTIONS



STEP 5

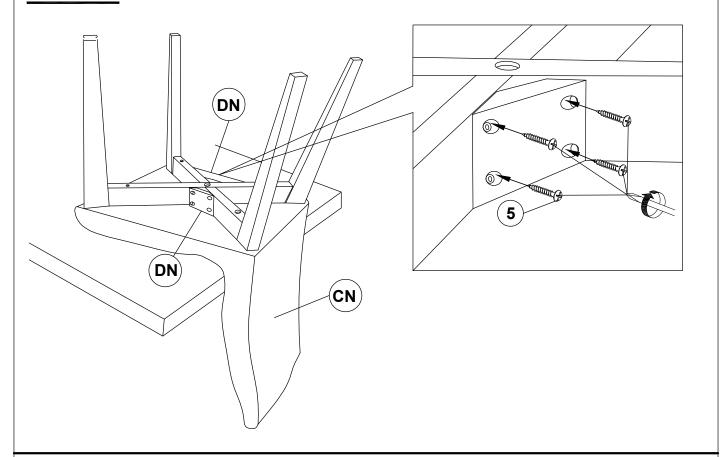

STEP 6 COMPLETE

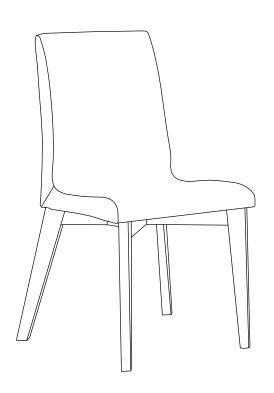




COASTERFURNITURE.COM

ITEM: 106592



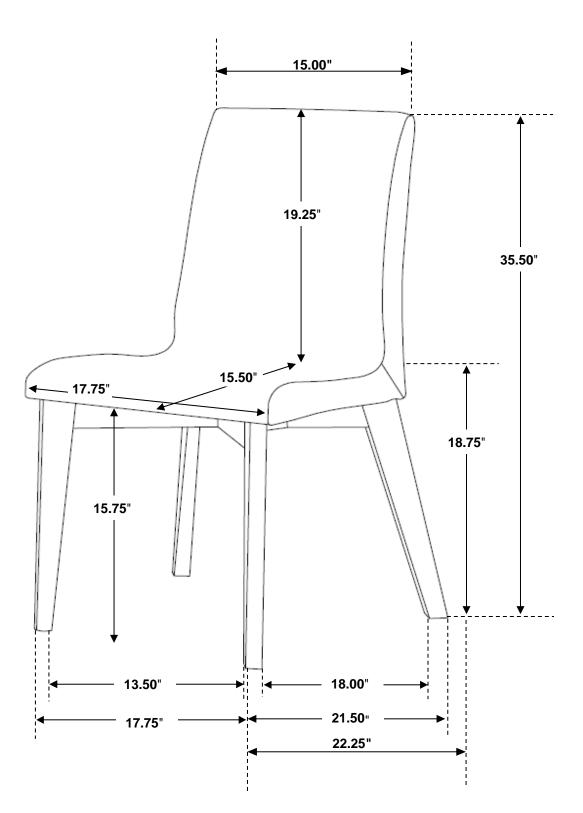

Note: Dimension tolerance ±5%