

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

122342 Dining Side Chair

REVISION 0: 05/05/2023

ITEM: 122342

ASSEMBLY INSTRUCTIONS



ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

15 MINUTES

PARTS IDENTIFICATION

A BACK FRAME

1PC

B SEAT CUSHION WITH FRAME

1PC

2PCS

HARDWARE IDENTIFICATION

1	LONG BOLT (M6 X 80MM RBW)	4PCS
2	MEDIUM BOLT (M6 X 60MM RBW)	4PCS
3	SHORT BOLT (M6 X 40MM RBW)	2PCS
4	LOCK WASHER (M6 X 13MM RBW)	10PCS
5	FLAT WASHER (M6 X 19MM RBW)	10PCS
6	ALLEN WRENCH (M4 X 110MM RBW)	1PC

NOTE:


Quantities shown are for one chair.

ITEM: **122342**


ASSEMBLY INSTRUCTIONS



STEP 1

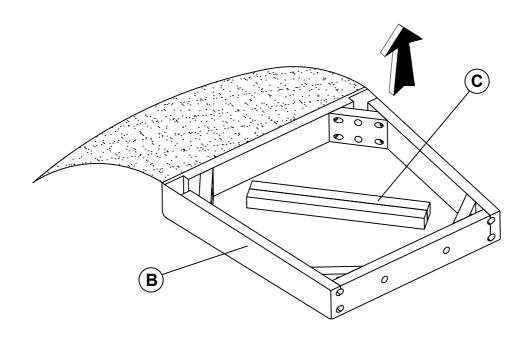

STEP 2

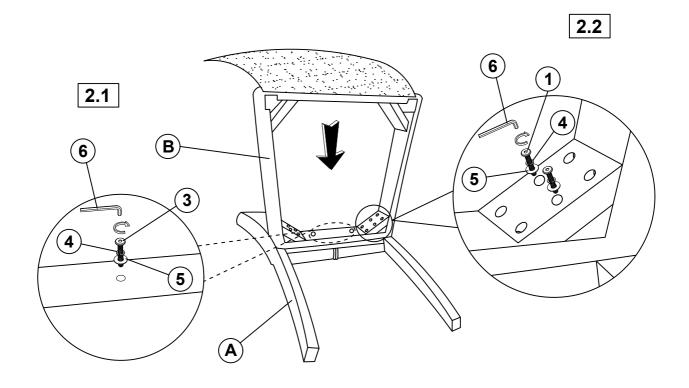


ITEM: **122342**


ASSEMBLY INSTRUCTIONS

COASTER

STEP 3

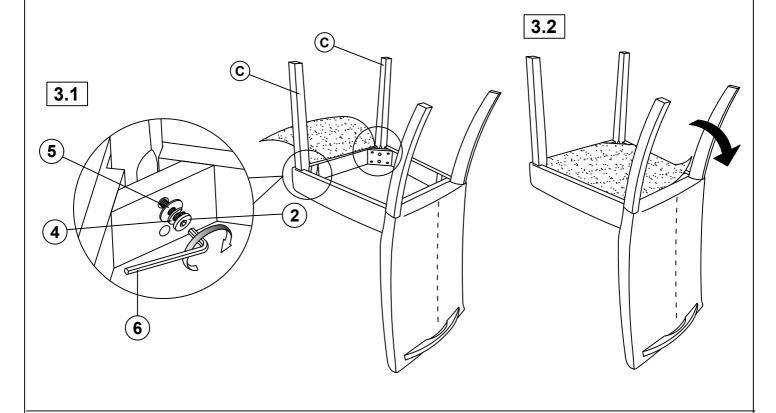


STEP 4 COMPLETE

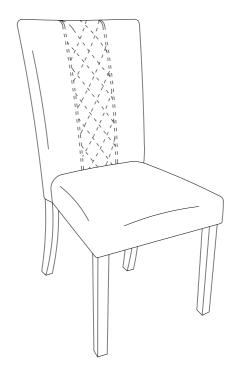





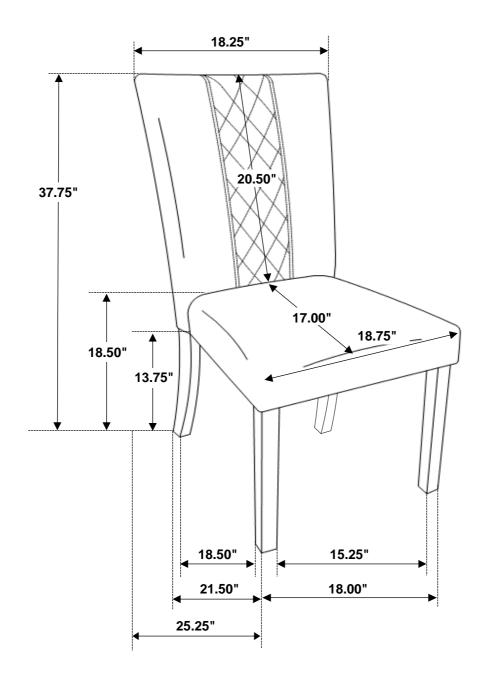

Note: Dimension tolerance ±5%