



*ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE*



Fine Furniture for every stage of life

REVISION 0 : 11/25/2017
REVISION 1 : 06/17/2019
REVISION 2 : 08/02/2022
REVISION 3 : 11/20/2023

108020
Dining Table

ITEM: 108020



ASSEMBLY INSTRUCTIONS

 
ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!



1. Don't attempt to repair or modify parts that are broken or defective .Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishment.









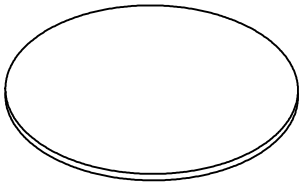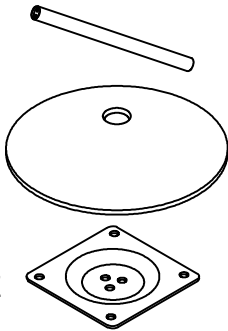


ASSEMBLY TIME

15 MINUTES

PARTS IDENTIFICATION

<p>B1 (BOX 1)</p> <p>A TOP 1PC</p> 	<p>B2 (BOX 2)</p> <p>B POST 1PC</p> <p>C BOTTOM FRAME 1PC</p> <p>D MOUNTING PLATE 1PC</p> 
---	---


HARDWARE IDENTIFICATION

Z	HARDWARE PACK	Hardware pack is located in 108020B2	
1	ALLEN WRENCH M10-SR		1PC
2	ALLEN WRENCH M6-SR		1PC
3	ALLEN WRENCH M5-SR		1PC
4	BOLT M12" *80MM-BLK		1PC
5	BOLT M8" *30MM-BLK		3PCS
6	BOLT Ø5/16" *15MM-RBW		4PCS
7	LOCK WASHER Ø17 *Ø 13-SR		1PC
8	FLAT WASHER Ø17 *Ø8.3-SR		7PCS
9	WASHER Ø5/16 *15MM-SR		1PC


ITEM: 108020

ASSEMBLY INSTRUCTIONS

STEP 1

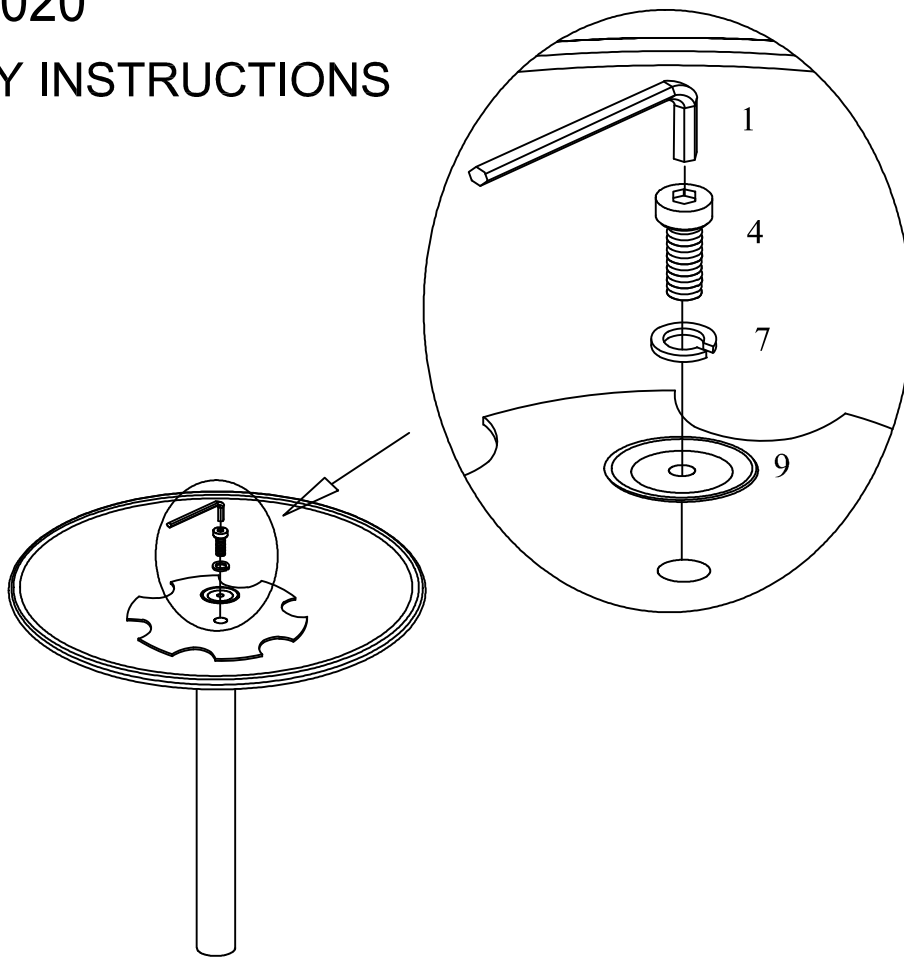


STEP 2

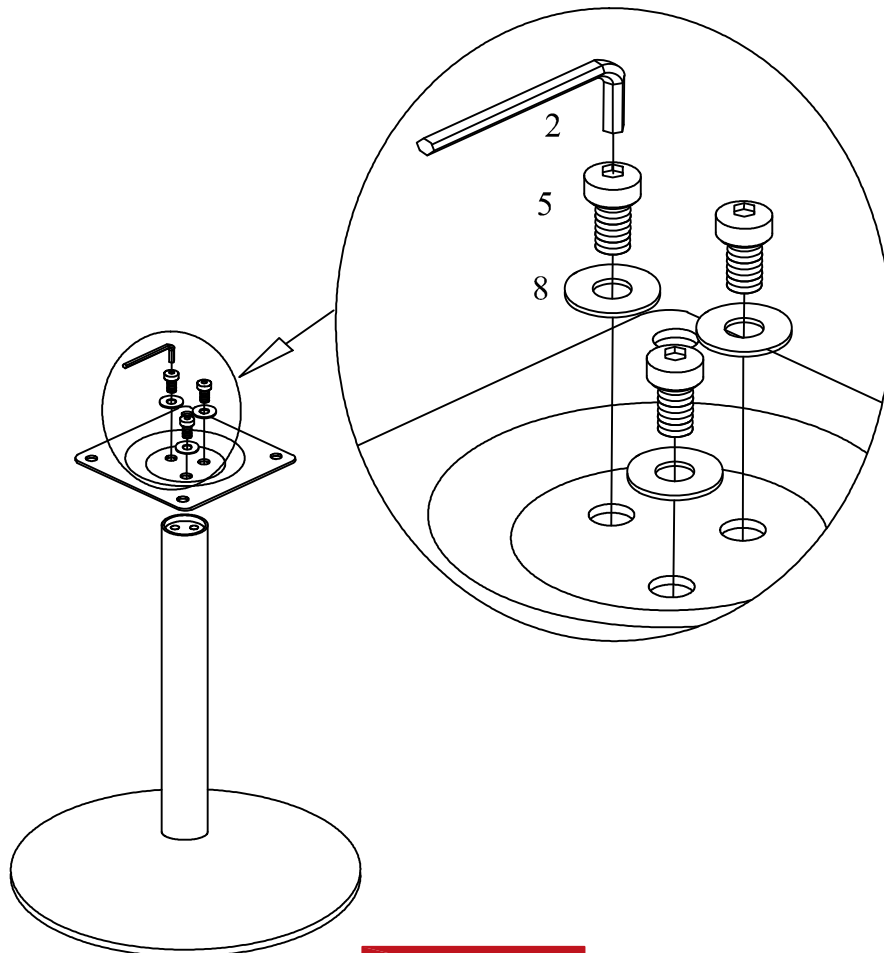


ITEM: 108020

ASSEMBLY INSTRUCTIONS

STEP 3

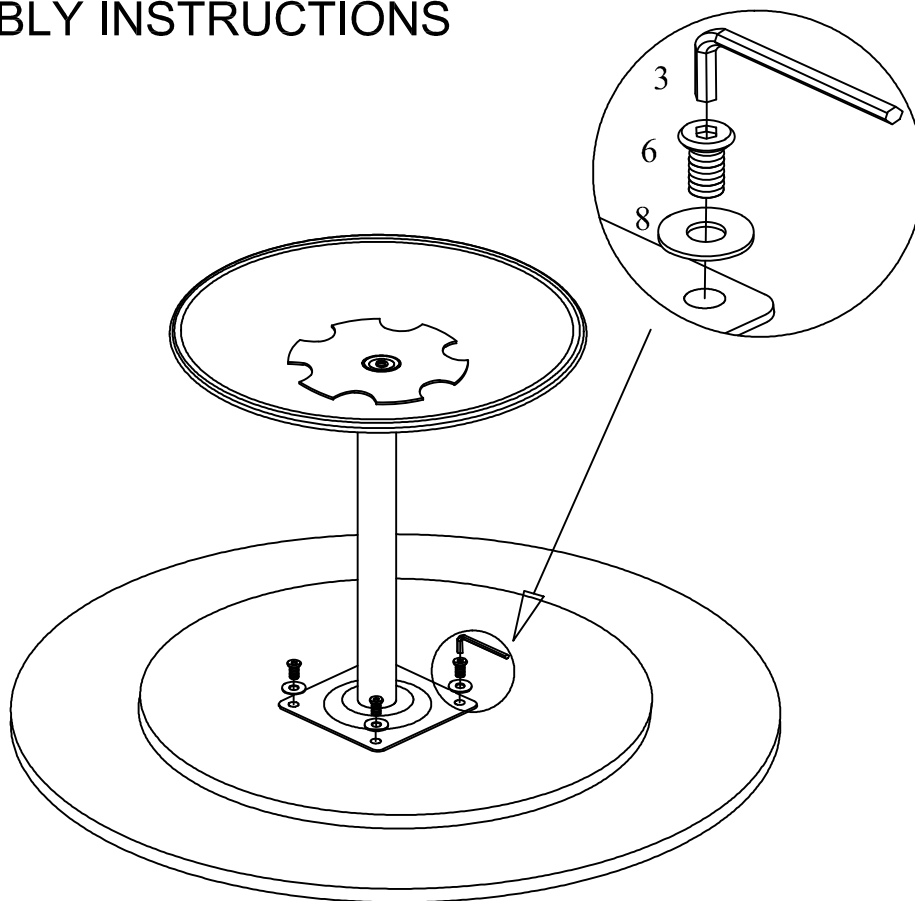


STEP 4

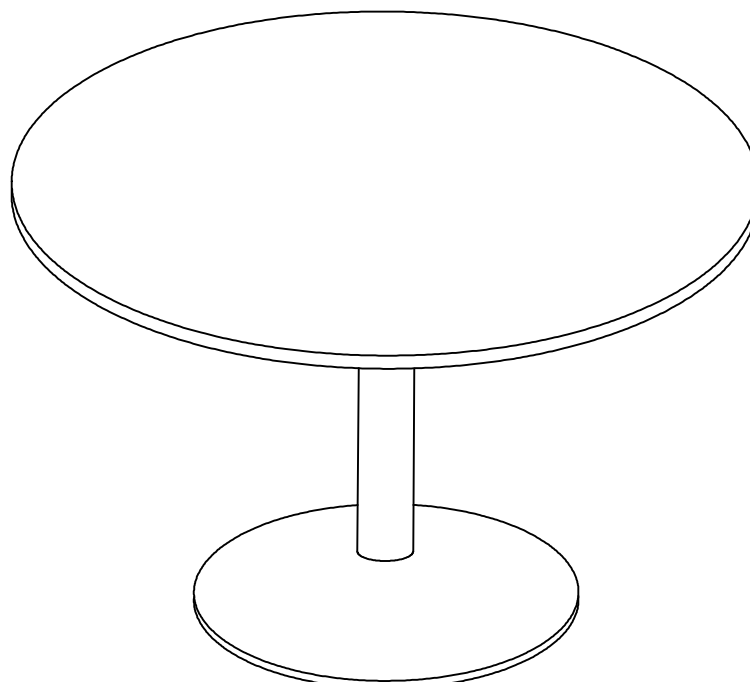

ITEM: 108020

ASSEMBLY INSTRUCTIONS

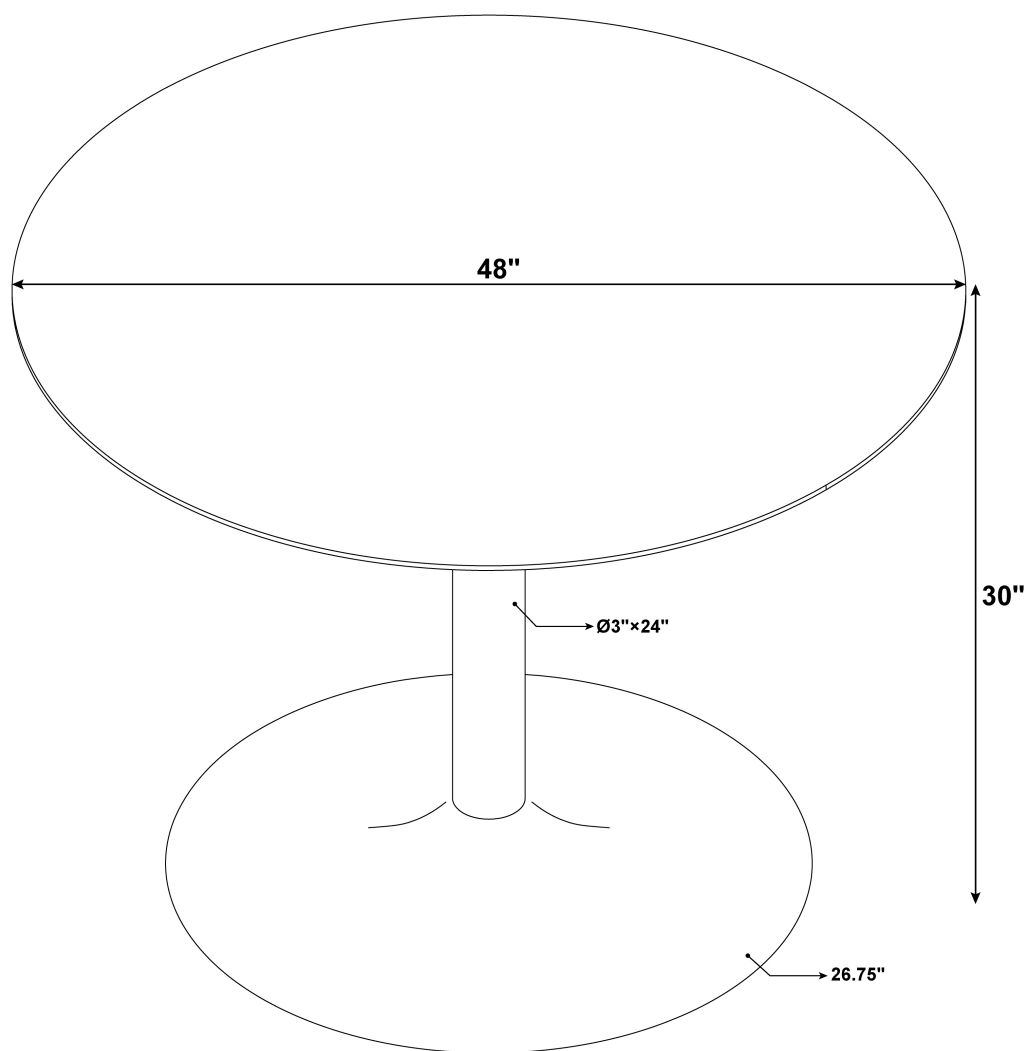

Note :Dimension tolerance $\pm 5\%$

