

# ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

## 1297A FLOOR LAMP

REVISION 0:05/07/2019 REVISION 1:01/05/2021 REVISION 2:12/01/2022 REVISION 3:04/26/2023 REVISION 4:07/14/2023

PAGE 1 OF 4

COASTERFURNITUER.COM

### ITEM:1297A

### **Assembly Instructions**



### **ASSEMBLY TIPS:**

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.

#### Warning!



- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately
- 2. This product is for home use only and not intended for commercial establishments.

### ASSEMBLY TIME 10 MINUTES

### PARTS IDENTIFICATION

NO	DESCRIPTION	FIGURE	Q,TY	H HARDWARE PACKAGE			
Α	Clump weight		1 PC	NO	DESCRIPTION	FIGURE	Q,TY
В	U Tube		1 PC	1	FLAT WASHER	0	1PC
С	POLE		1 PC	2	SPRING WASHER		1PC
D	ARM		1 PC	3	NUT		1PC
				4	SCREW		1PC
E	SHADE		5 PC	5	HOOLLOW SCREW	(000000)	1PC
				6	Cross Head Screw		4PCS
F	LIGHT BULB		5 PC	7	Washer	•	4PCS
				8	Nut With Cap	$\Theta$	4PCS
G	SOCKET RING	0	5 PC	9	WRENCH	2=3	1PC


PAGE 2 OF 4


### ITEM:1297A


## COASTER

### **Assembly Instructions**


STEP1 STEP2 STEP3

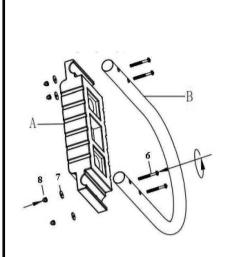


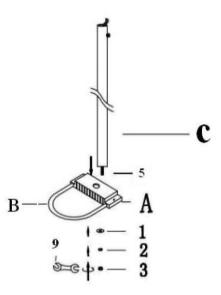

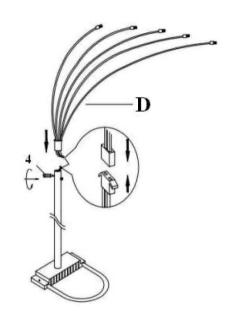

STEP4 STEP5

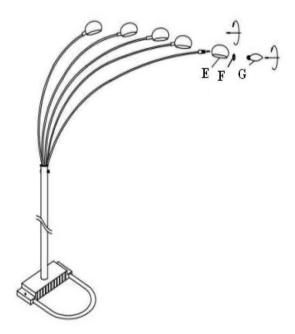


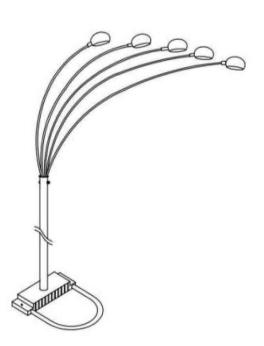

As a safety feature, and to reduce the risk of electric shock, this portable lamp includes a polarized plug (one blade is wider than the other). The plug will fit into a polarized outlet in a single direction only. If the plug does not fit fully in the outlet, reverse the plug and try again. If it still does not fit, contact a qualified electrician. DO NOT use with an extension cord unless, can be fully inserted. DO NOT alter the plug.

FLOOR LAMP: TYPE C35 E12 4W LED BULB



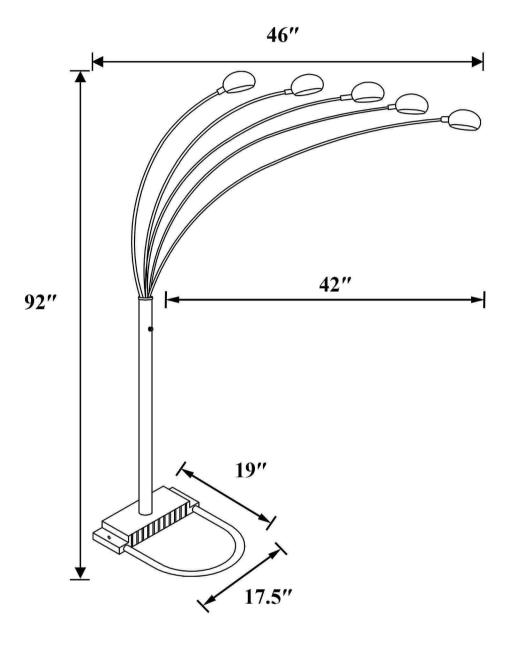

Note: Dimension tolerance ±5%