


# ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE

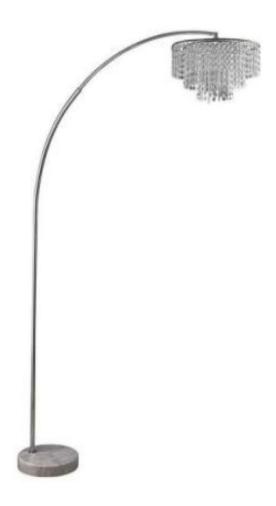

Fine Furniture for every stage of life

920065 FLOOR LAMP

REVISION 0:05/07/2019 REVISION 1:12/01/2022 REVISION 2:11/15/2023

COASTERFURNITURE.COM

### ITEM:920065

### **Assembly Instructions**



### **ASSEMBLY TIPS:**

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.

### Warning!



- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediatel
- 2. This product is for home use only and not intended for commercial establishments.

## ASSEMBLY TIME 10 MINUTES

### **PARTS IDENTIFICATION**

NO	DESCRIPTION	FIGURE	Q,TY	Z HARDWARE PACKAGE			
Α	BOTTOM POLE		1 PC	NO	DESCRIPTION	FIGURE	Q,TY
В	MIDDLE POLE		1 PC	1	PLATE	0	1 PC
С	TOP POLE		1 PC	2	TOOTH TUBE	-	1 PC
D	ARM		1 PC	3	WASHER	0	1 PC
				4	WASHER	0	1 PC
E	BASE		1 PC	5	NUT	•	1 PC
				6	WRENCH	5=0	1 PC
F	SHADE		1 PC	7	SCREW	<b>()</b>	1 PC
				8	RING	THE STATE OF THE S	1 PC
G	LIGHT BULB		1 PC				

PAGE 2 OF 4


COASTERFURNITUER.COM

### ITEM:920065


## COASTER

## Assembly Instructions


### STEP1

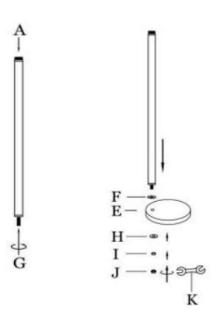


### STEP2

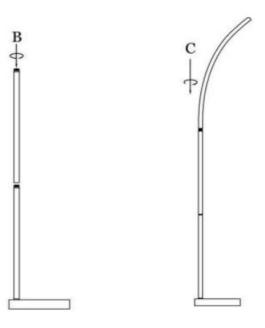

### STEP3

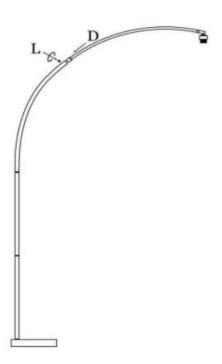

### STEP4

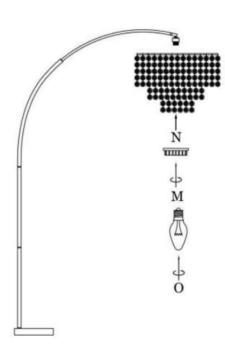


As a safety feature, and to reduce the risk of electric shock, this portable lamp includes a polarized plug (one blade is wider than the other). The plug will fit into a polarized outlet in a single direction only. If the plug does not fit fully in the outlet, reverse the plug and try again. If it still does not fit, contact a qualified electrician. DO NOT use with an extension cord unless, can be fully inserted. DO NOT alter the plug.

### FLOOR LAMP: TYPE A LED BULB 9W

## ITEM:920065



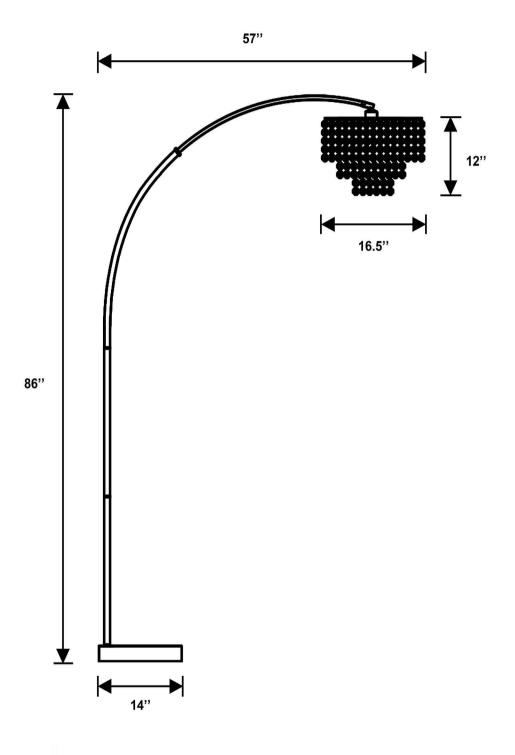

Note: Dimension tolerance ±5%

PAGE 4 OF 4