

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

182438(B1&B2) Counter Height DiningTable

REVISION 0: 11/18/2023

PAGE 1 OF 5

COASTERFURNITURE.COM

ASSEMBLY INSTRUCTIONS



ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

15 MINUTES

PARTS IDENTIFICATION

B1 (BOX1)

A TOP



B2 (BOX2)

B LEG FRAME



2PCS

D STRETCHER



1PC

C TRESTLE BAR



1PC

E WOOD CAP



2PCS

HARDWARE IDENTIFICATION

 
Z-B2 (BOX 2) - HARDWARE PACK IS LOCATED IN 182438 (B2)

1	BOLT 1
	(Ø1/4 x 30mm- BLK)



1PC

4 BOLT 4 (Ø1/4 x 100mm- BLK)



D 2PCS

2 BOLT 2 (Ø1/4 x 50mm- BLK)



4PCS

5 ALLEN WRENCH (M4 - 64mm - BLK)



1PC

3 BOLT 3 (Ø 1/4 x 60mm- BLK)



2PCS

6 WOOD DOWEL




4PCS

COASTER

ASSEMBLY INSTRUCTIONS

STEP 1

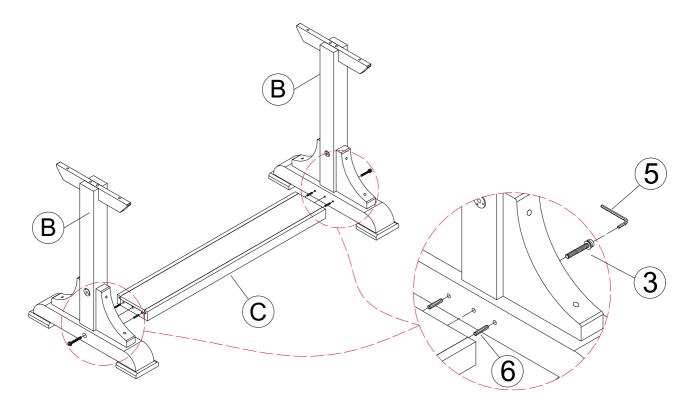


STEP 2 STEP 2 COASTERFURNITURE.COM

ASSEMBLY INSTRUCTIONS

COASTER


STEP 3

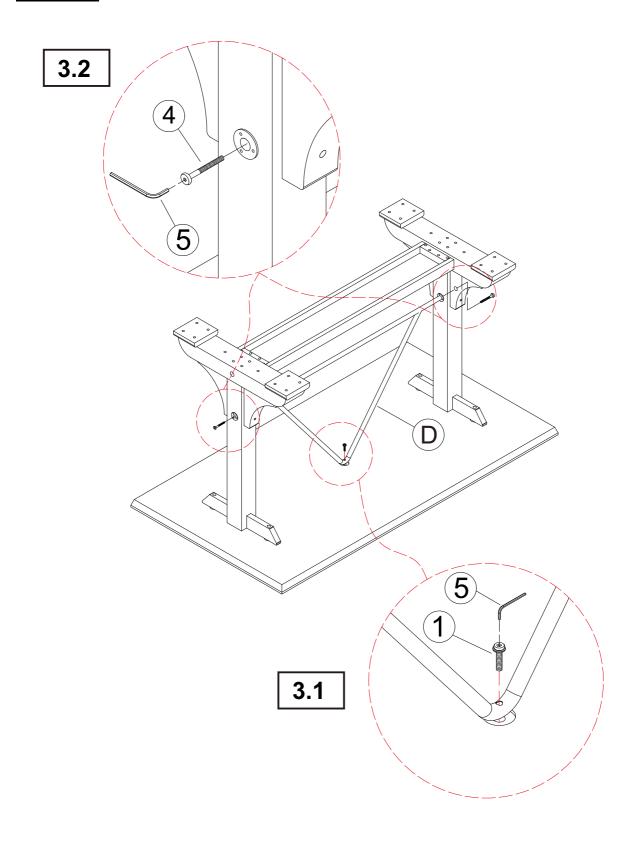

ASSEMBLY INSTRUCTIONS



STEP 4

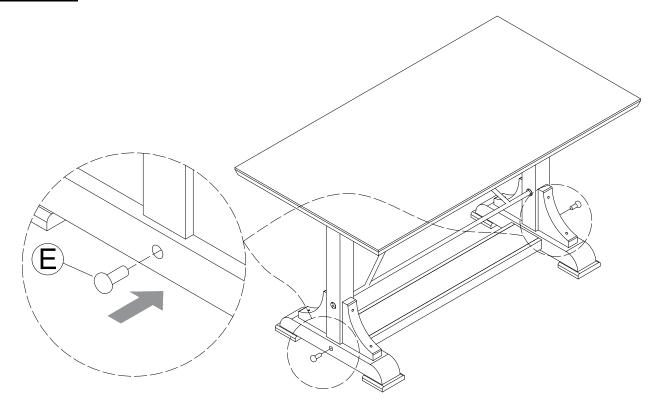


STEP 5 **COMPLETE**



COASTERFURNITURE.COM



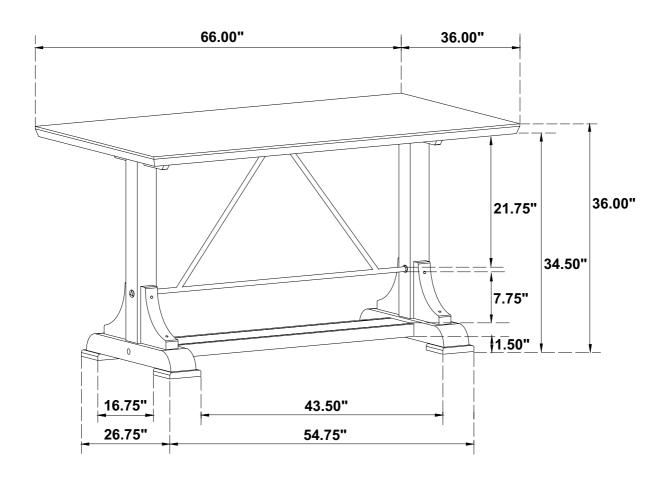

Note: Dimension tolerance ±5%