



ASSEMBLY INSTRUCTIONS

COASTER FINE FURNITURE



Fine Furniture for every stage of life

600497P

POWER LIFT MASSAGE CHAIR

REVISION 0 :09/20/2023
REVISION 1 :11/28/2023

PAGE 1 OF 6

COASTERFURNITURE.COM

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start assembly
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

 
 





- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

5 MINUTES

 PARTS IDENTIFICATION

A	CHAIR BASE		1PC
B	BACKREST		1PC
C	MOTOR REMOTE		1PC
D	POWER CORD		1PC
E	MASSAGE REMOTE		1PC
F	POWER SOURCE		1PC
G	PLUG		1PC

 REMOTE INSTRUCTIONS

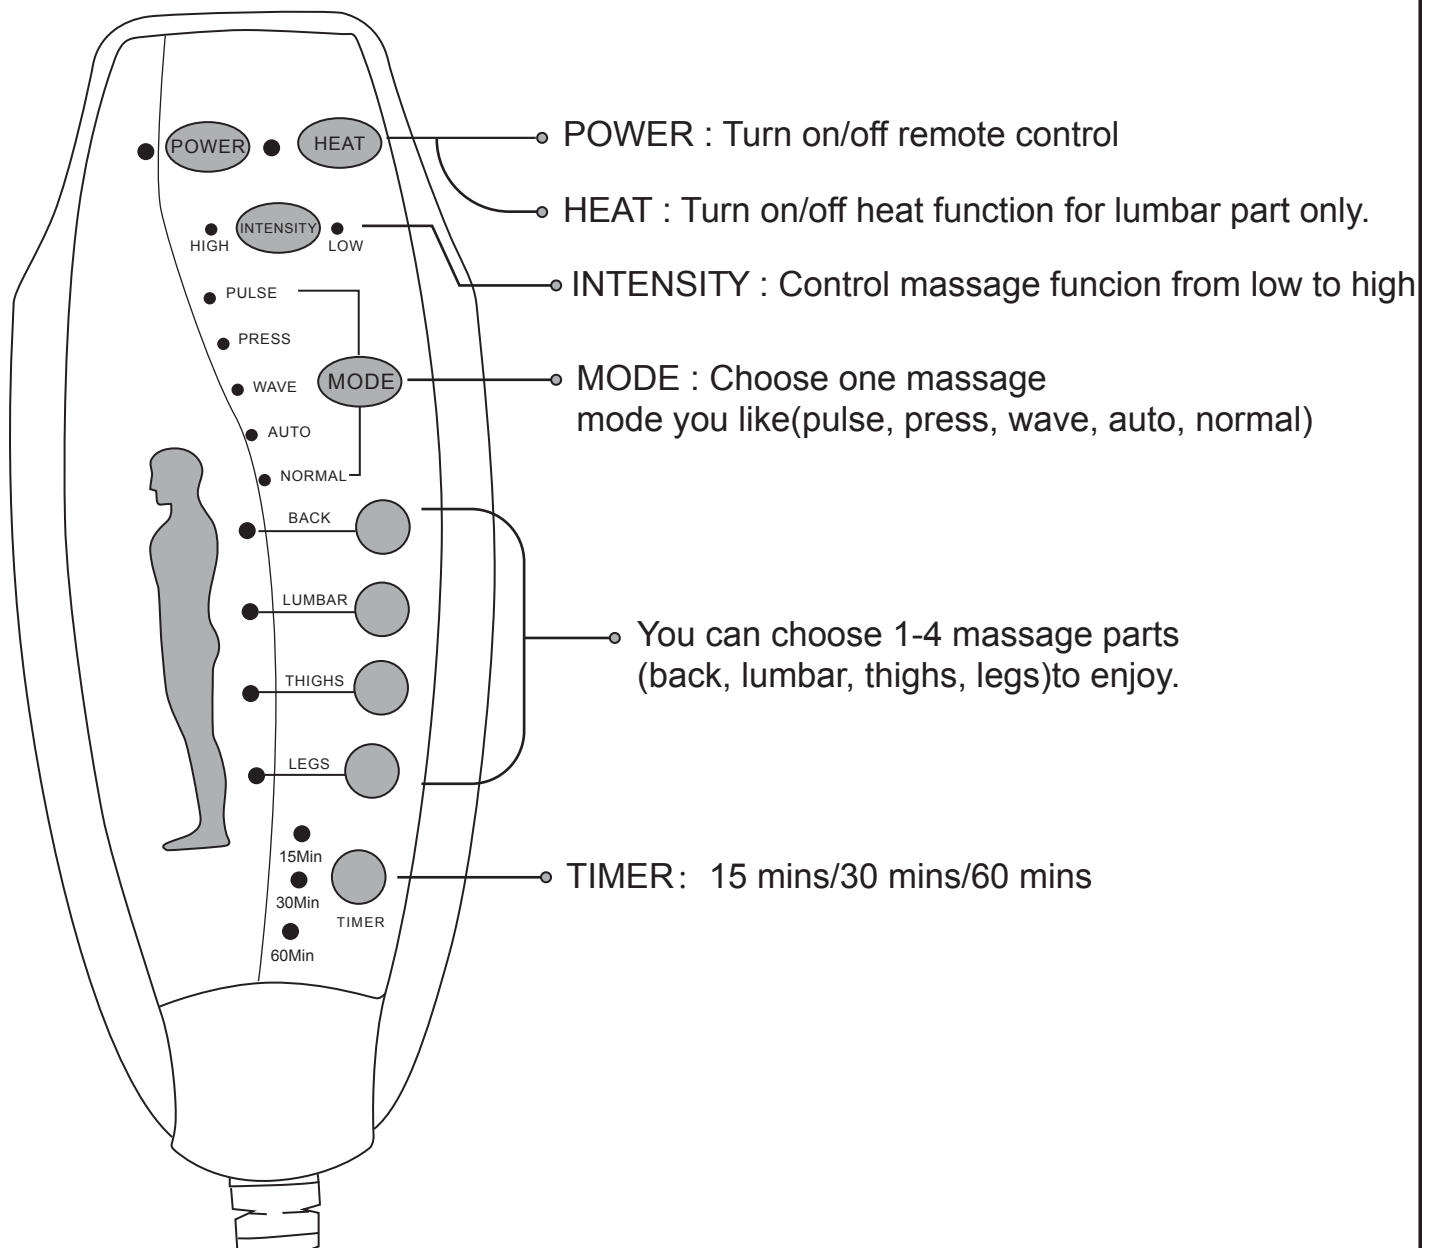


ITEM: **600497P**

REMOTE INSTRUCTIONS

STEP 1

COASTER
FINE FURNITURE

 Insert the **BACKREST** to the **CHAIR BASE** brackets (as shown in the diagram), and make sure that is fully inserted.

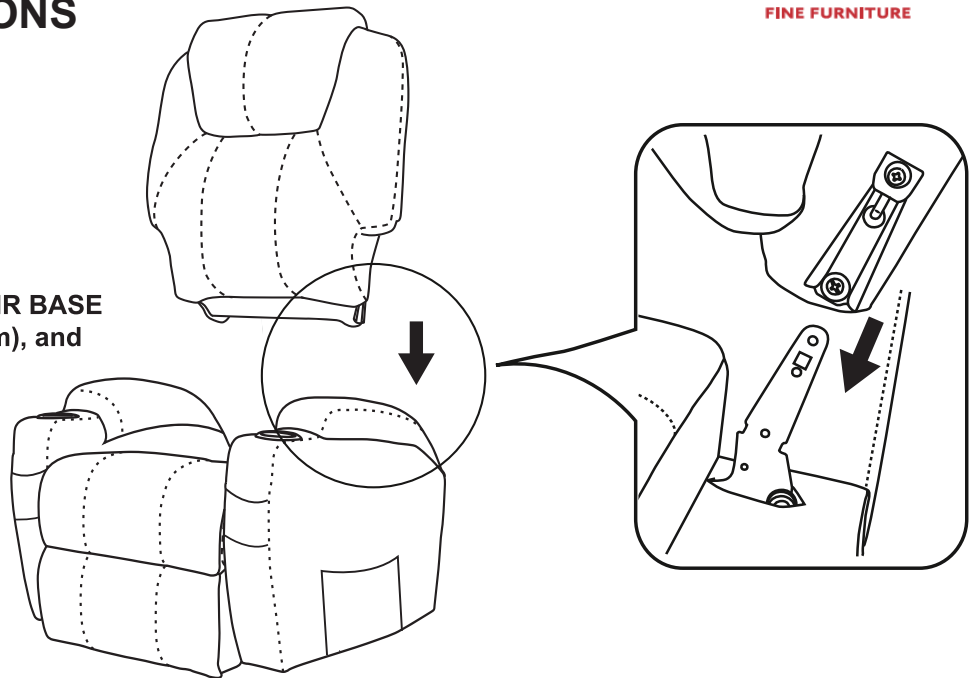


STEP 2

No.1 and No.2 wire connect with the backrest and chair base.
No.3 wire connects with backrest and power cord(D).
No.4 wire connects with backrest and Massage Remote(E).
No.5 wire connect the motor and remote motor(C).
No.6 wire connect the motor and power source (F).
NO.7 wire connect the plug(G)
and power source(F)

NOTE

 - 1: Two same color wires connect
- 2: Plug power cord and power source into outlet, then you can use all function








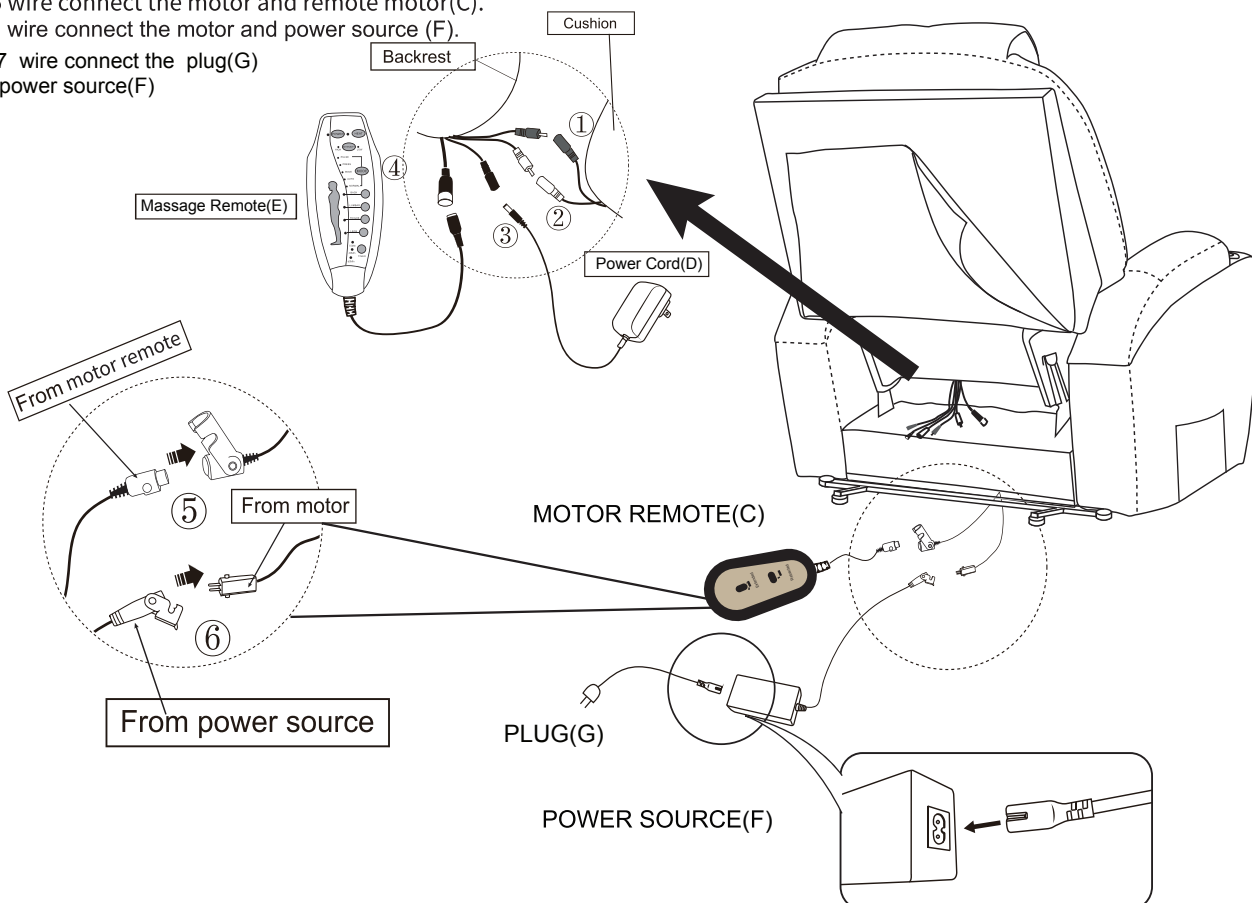



ITEM: **600497P**



ASSEMBLY INSTRUCTIONS

         STEP 3 COMPLETE

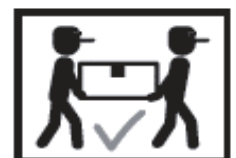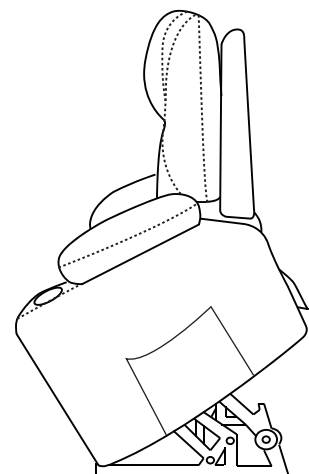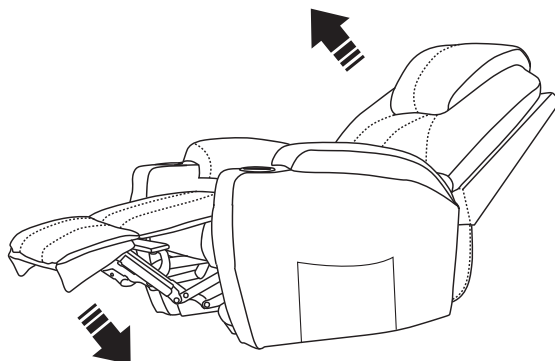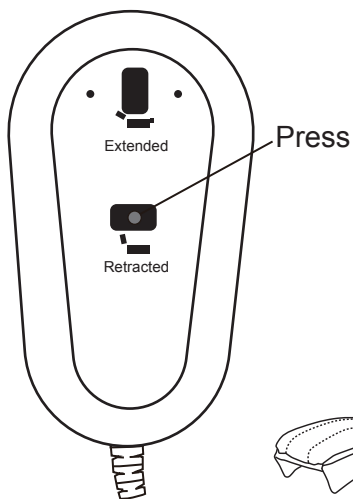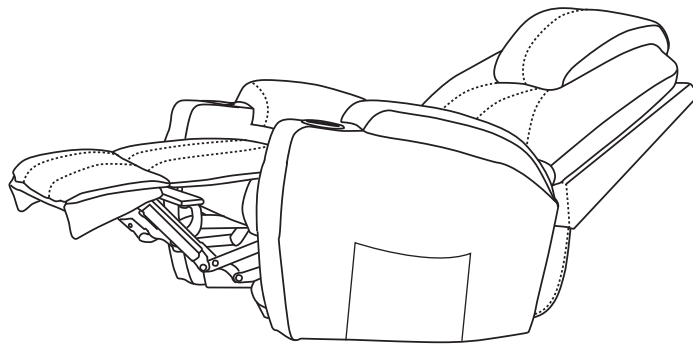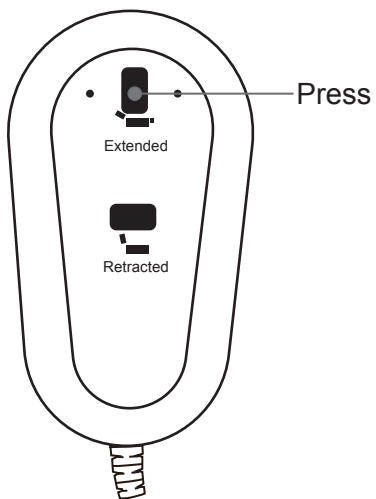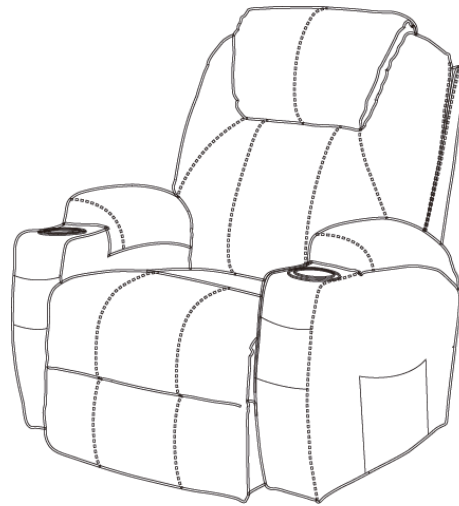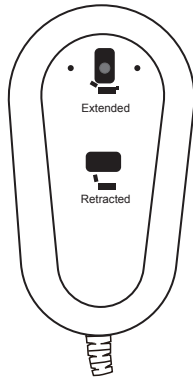

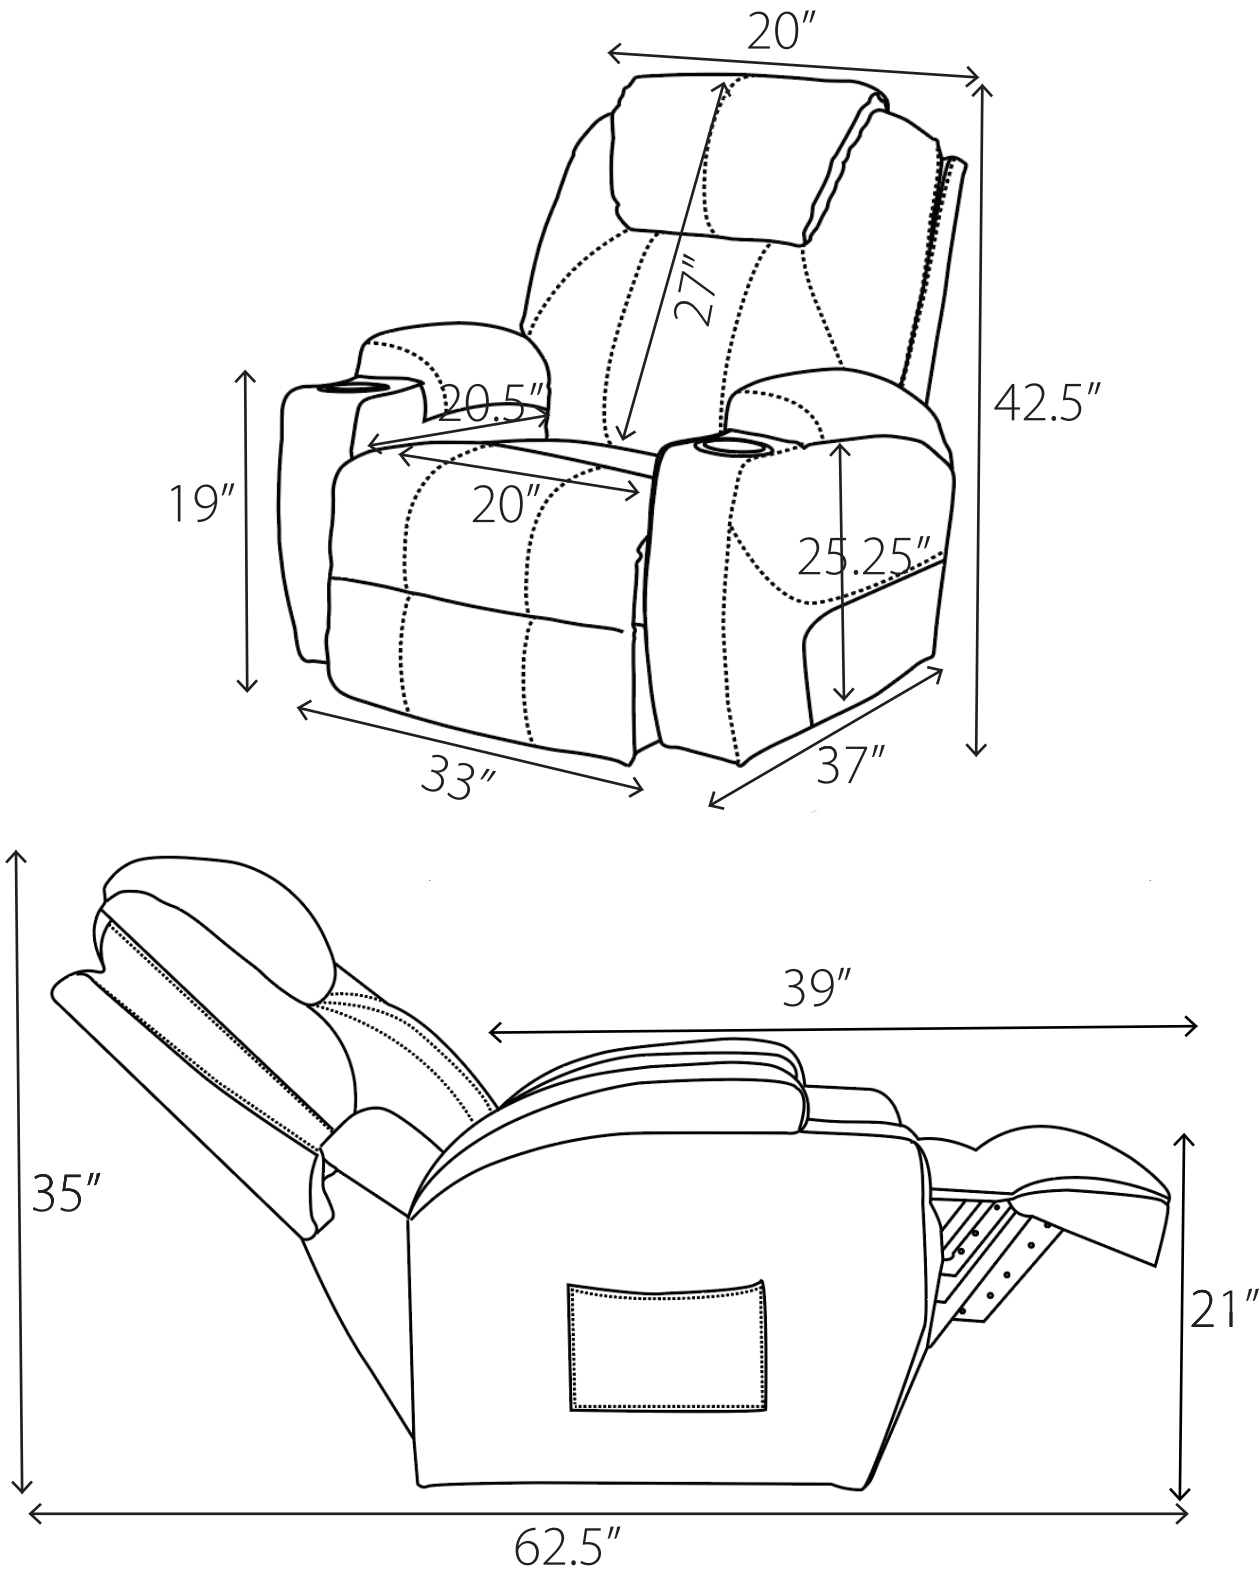

Note : Dimension tolerance $\pm 5\%$