

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

509655 Loveseat

REVISION 0: 10/24/2023

COASTERFURNITURE.COM

ASSEMBLY INSTRUCTIONS



ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

10 MINUTES

PARTS IDENTIFICATION

A FRONT PANEL	1PC	F LEFT ARM		1PC
B SEAT DECK	1PC	G RIGHT ARM		1PC
C BACKREST	1PC	H LEG		4PCS
D BACK CUSHION	2PCS	CENTER SUPPORT LE WITH LEVELER	G	1PC
E SEAT CUSHION	2PCS			


HARDWARE IDENTIFICATION

1	LONG BOLT (5/16" x 25mm - RBW)	4PCS	4	LOCK WASHER (D12mm - RBW)	6PCS
2	ALLEN WRENCH (60mm x 4mm - RBW)	1PC	5	FLAT WASHER (D19mm - RBW)	6PCS
3	SHORT BOLT (1/4" x 20mm - RBW)	2PCS			


COASTER

ASSEMBLY INSTRUCTIONS

STEP 1

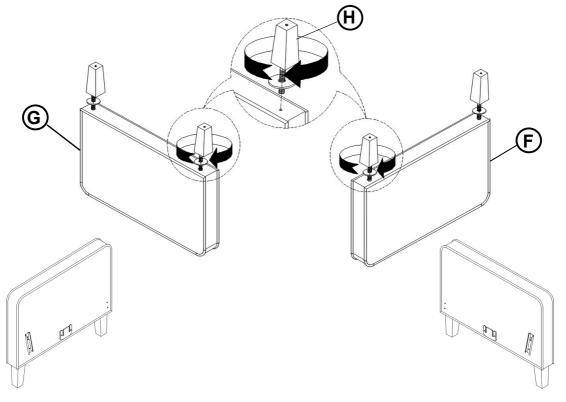


STEP 2

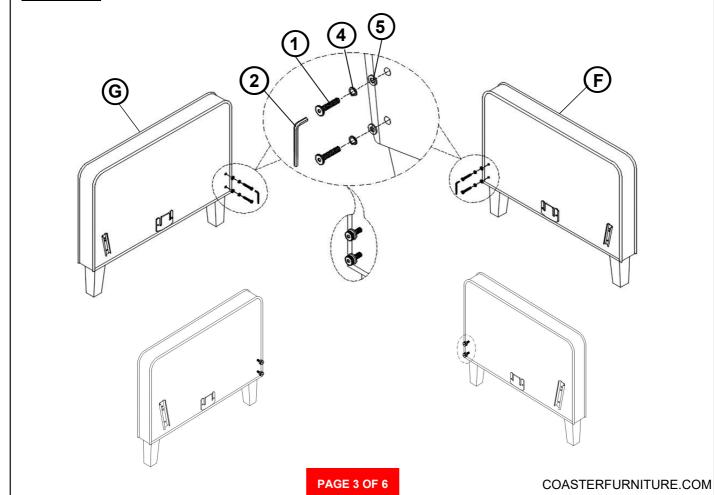




ASSEMBLY INSTRUCTIONS STEP 3

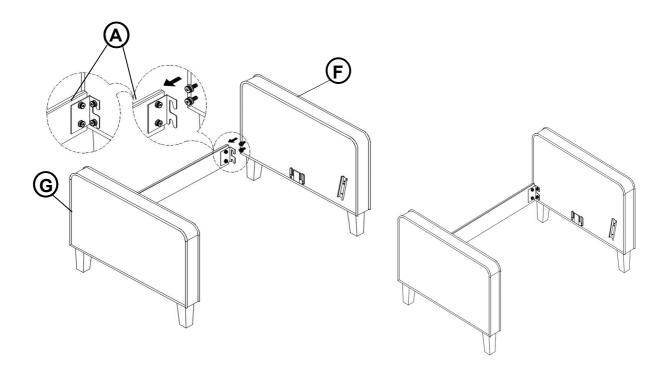


STEP 4

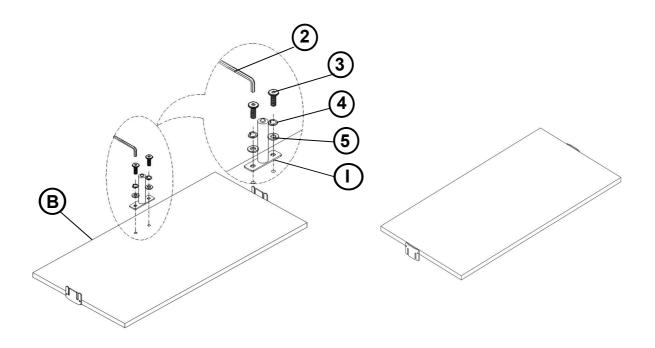




ASSEMBLY INSTRUCTIONS STEP 5

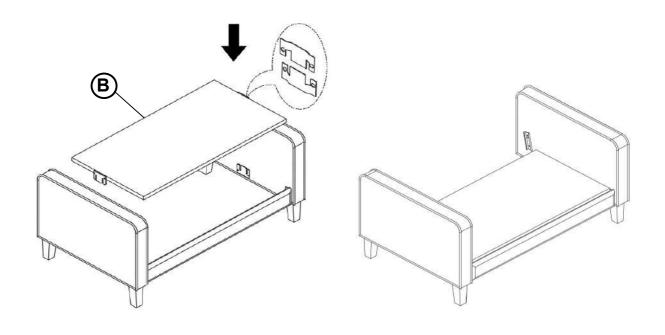



STEP 6

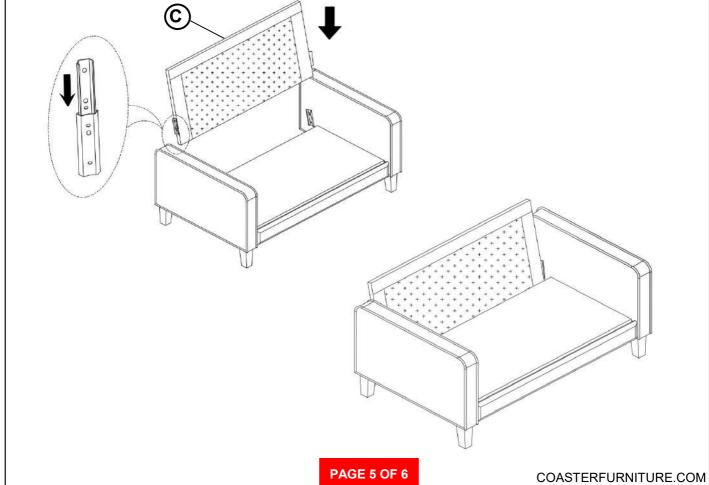




ASSEMBLY INSTRUCTIONS STEP 7

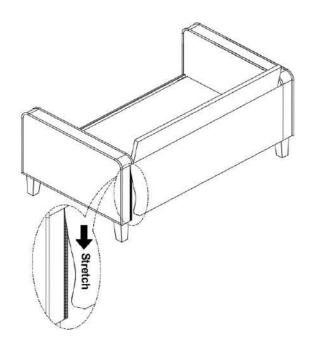

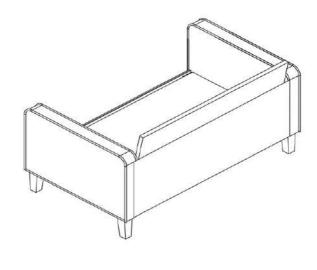


STEP 8 COMPLETE

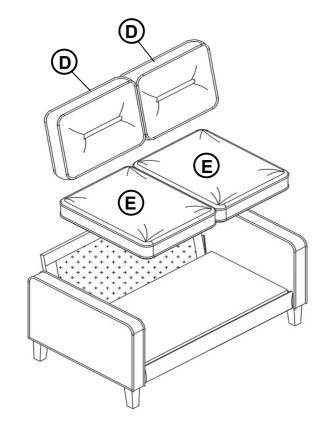







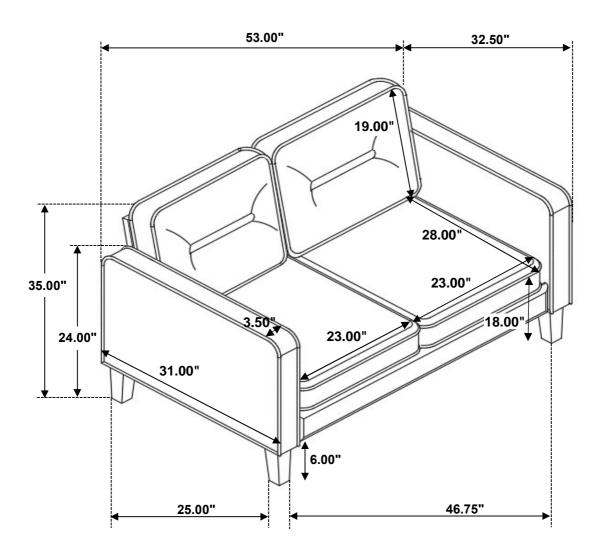

Note: Dimension tolerance ±5%