

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

108440 Dining Table

REVISION 0: 10/16/2023

PAGE 1 OF 7



ASSEMBLY INSTRUCTIONS

 
ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

25 MINUTES

PARTS IDENTIFICATION

Α	ТОР	1PC
В	LEG FRAME	4PCS
С	UPPER CROSSBAR	1PC
D	LOWER CROSSBAR	1PC
E	LEG SUPPORT FRAME	1PC
F	LEG SUPPORT FRAME COVER	1PC

HARDWARE IDENTIFICATION

1	ALLEN WRENCH (M4 x 110mm - BLK)	1PC
2	BOLT (M6 x 40mm - RBW)	20PCS
3	LOCK WASHER (1/4" - BLK)	20PCS
4	SMALL FLAT WASHER (M6 x 13mm - RBW)	12PCS
5	BIG FLAT WASHER (1/4" - RBW)	8PCS
6	WOOD DOWEL (M10 X 30MM)	4PCS
7	ADJUSTABLE LEVELER (M8 X 20MM)	4PCS

NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer not provide this item.

COASTER'

ASSEMBLY INSTRUCTIONS


STEP 1

ATTENTION! PLEASE REMOVE ALL SCREWS AND WOOD BLOCKS BEFORE ASSEMBLE.

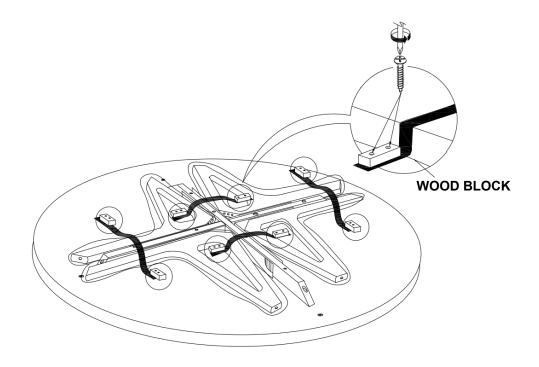

STEP 2

ATTENTION! PLEASE REMOVE ALL BOLTS, LOCK WASHERS AND FLAT WASHERS IN THIS STEP AND USE ALL HARDWARE IN STEP 6.

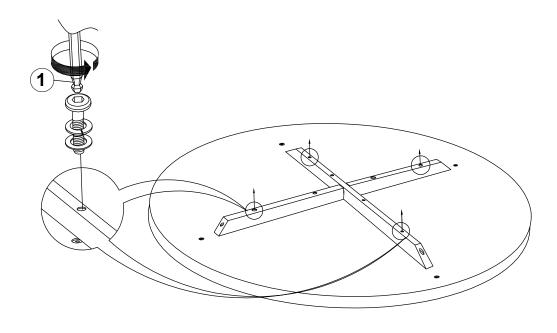


PAGE 3 OF 7


COASTER

ASSEMBLY INSTRUCTIONS

STEP 3

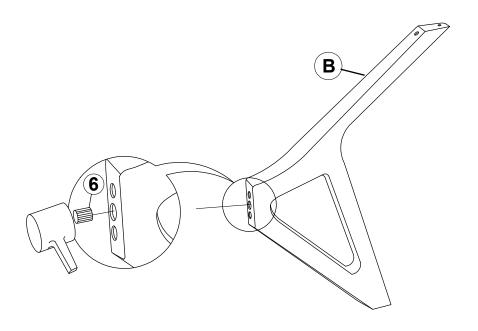


STEP 4

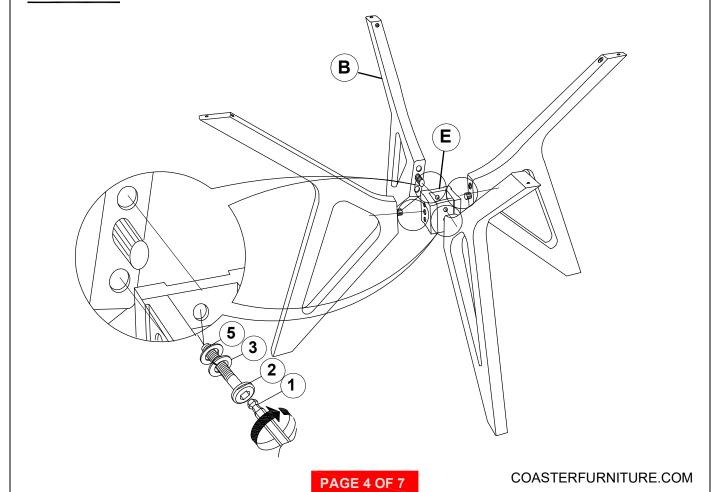

COASTER


ASSEMBLY INSTRUCTIONS

STEP 5

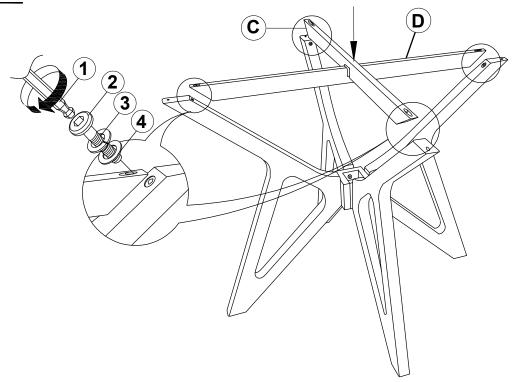

STEP 6

ATTENTION! PLEASE USE ALL BOLTS, LOCK WASHERS AND FLAT WASHERS IN STEP 2

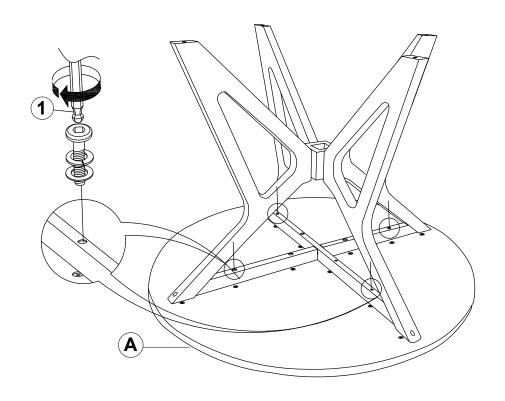


PAGE 5 OF 7


COASTER

ASSEMBLY INSTRUCTIONS

STEP 7

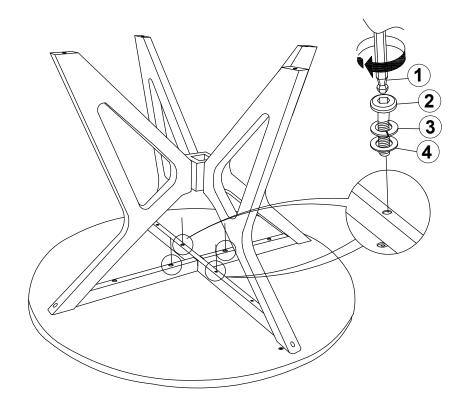

STEP 8

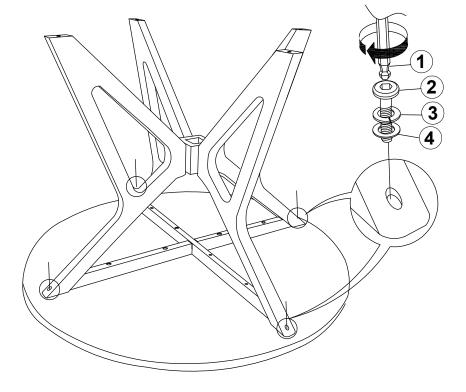


PAGE 6 OF 7


COASTER

ASSEMBLY INSTRUCTIONS


STEP 9

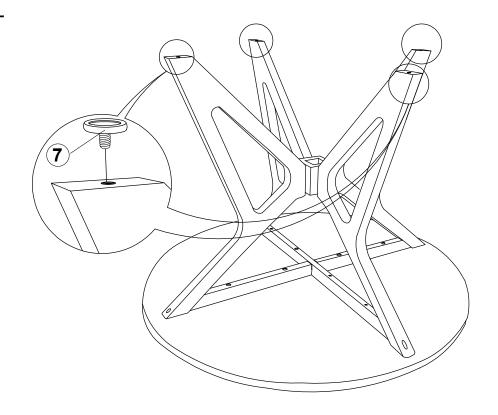

STEP 10 COMPLETE

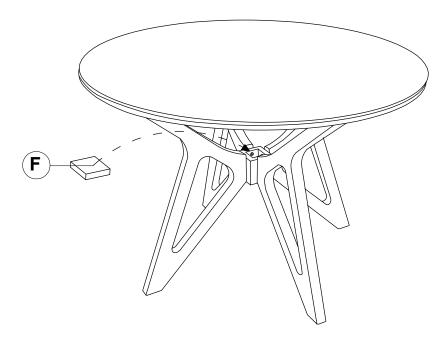



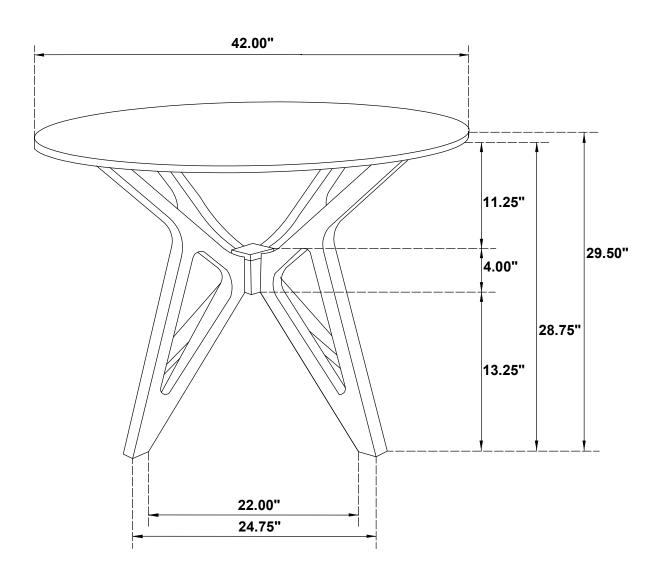

Note: Dimension tolerance ±5%