

ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE



Fine Furniture for every stage of life

108471
Dining Table

ITEM: 108471

ASSEMBLY INSTRUCTIONS

 
ASSEMBLY TIPS :

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING !

 

 
 
 
1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

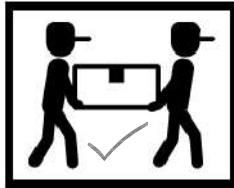








ASSEMBLY TIME

20 MINUTES

PARTS IDENTIFICATION

A	TOP		1PC
B	LEG FRAME		1PC
C	LEG		2PCS
D	UPPER CROSSBAR		1PC
E	LOWER CROSSBAR		1PC

HARDWARE IDENTIFICATION

1	ALLEN WRENCH (M4 x 110mm - BLK)		1PC
2	BOLT (M6 x 50mm - RBW)		8PCS
3	LOCK WASHER (1/4" - BLK)		8PCS
4	FLAT WASHER (M6 x 13mm - RBW)		8PCS
5	HEX HEAD SCREW (M7 x 50mm - RBW)		1PC
6	DOWEL PIN (M8 X 30MM)		4PCS
7	ADJUSTABLE LEVELER (M6 X 24MM)		4PCS

NOTE :

 
Phillips head screw driver is required in the assembly process ; However, manufacturer not provide this item.

ITEM: **108471**


ASSEMBLY INSTRUCTIONS

STEP 1

ATTENTION! PLEASE REMOVE ALL SCREWS AND WOOD BLOCKS BEFORE ASSEMBLE.

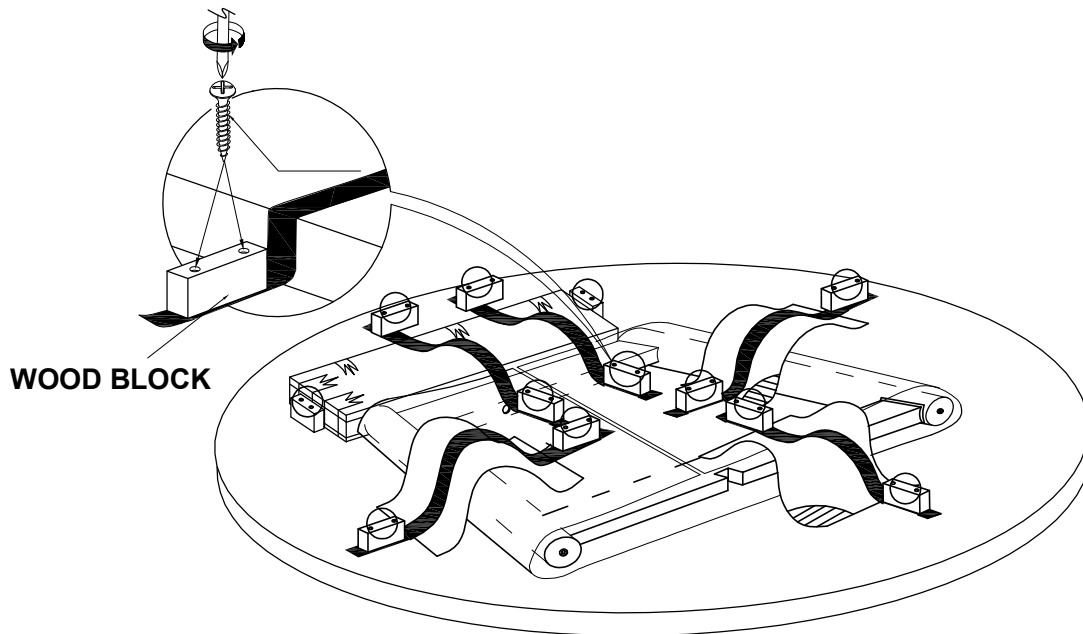

 
STEP 2

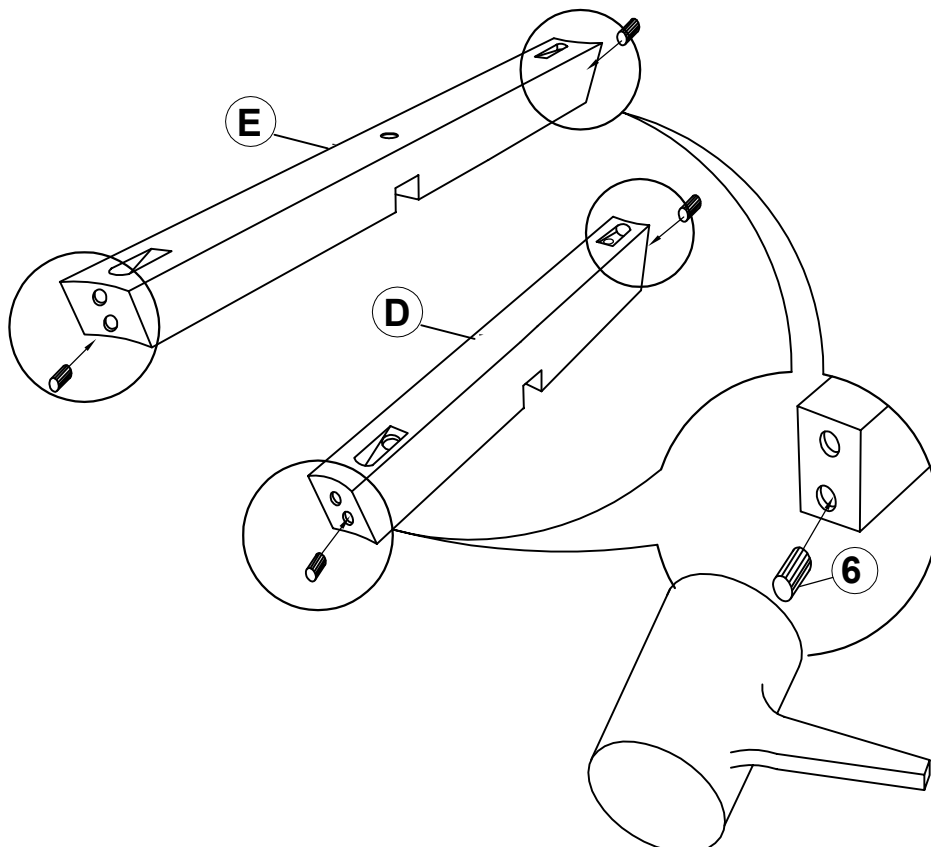


ITEM: **108471**

ASSEMBLY INSTRUCTIONS

 STEP 3

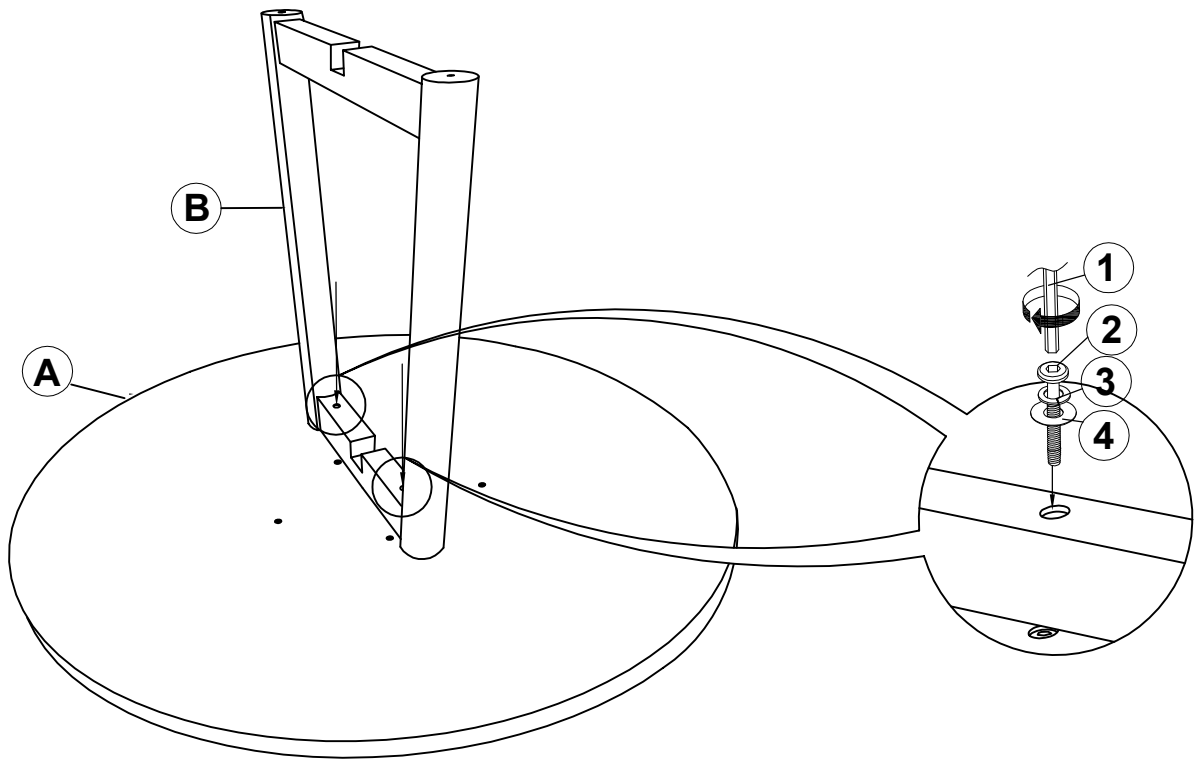

 
STEP 4

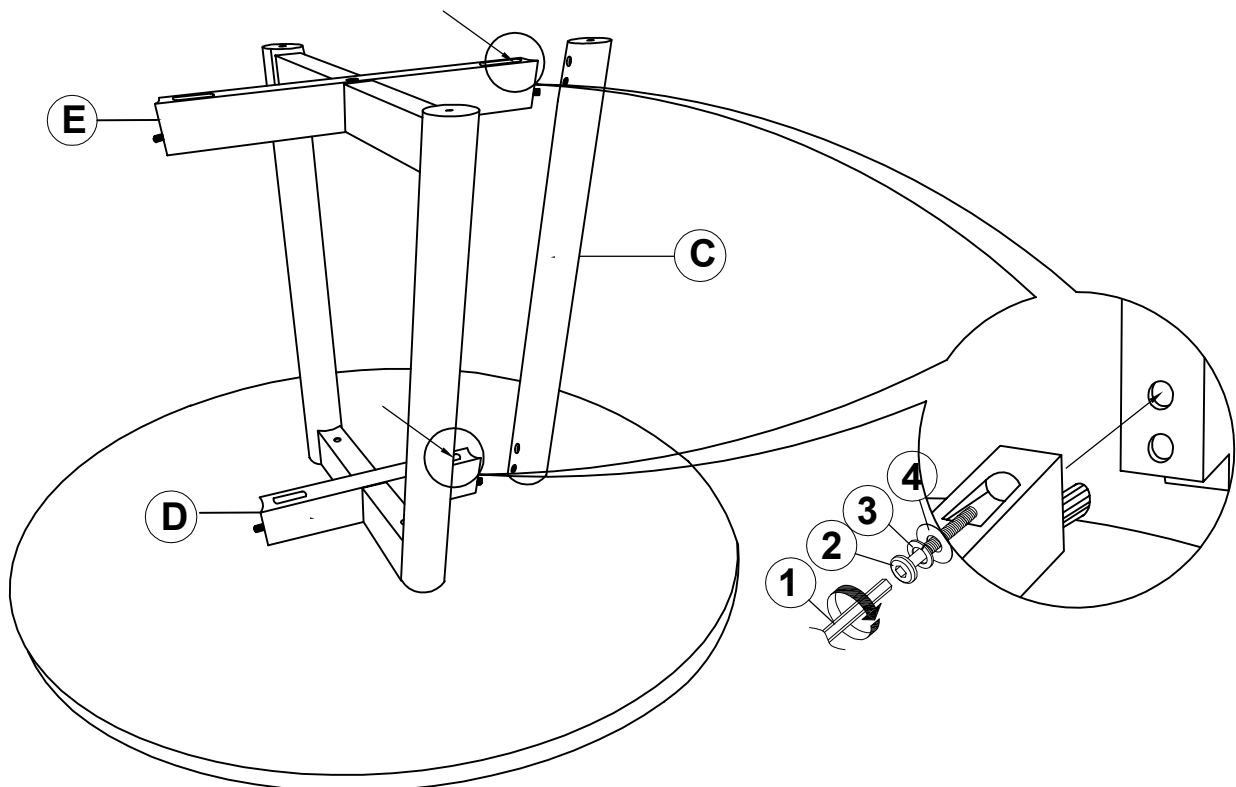


ITEM: **108471**

ASSEMBLY INSTRUCTIONS

 STEP 5

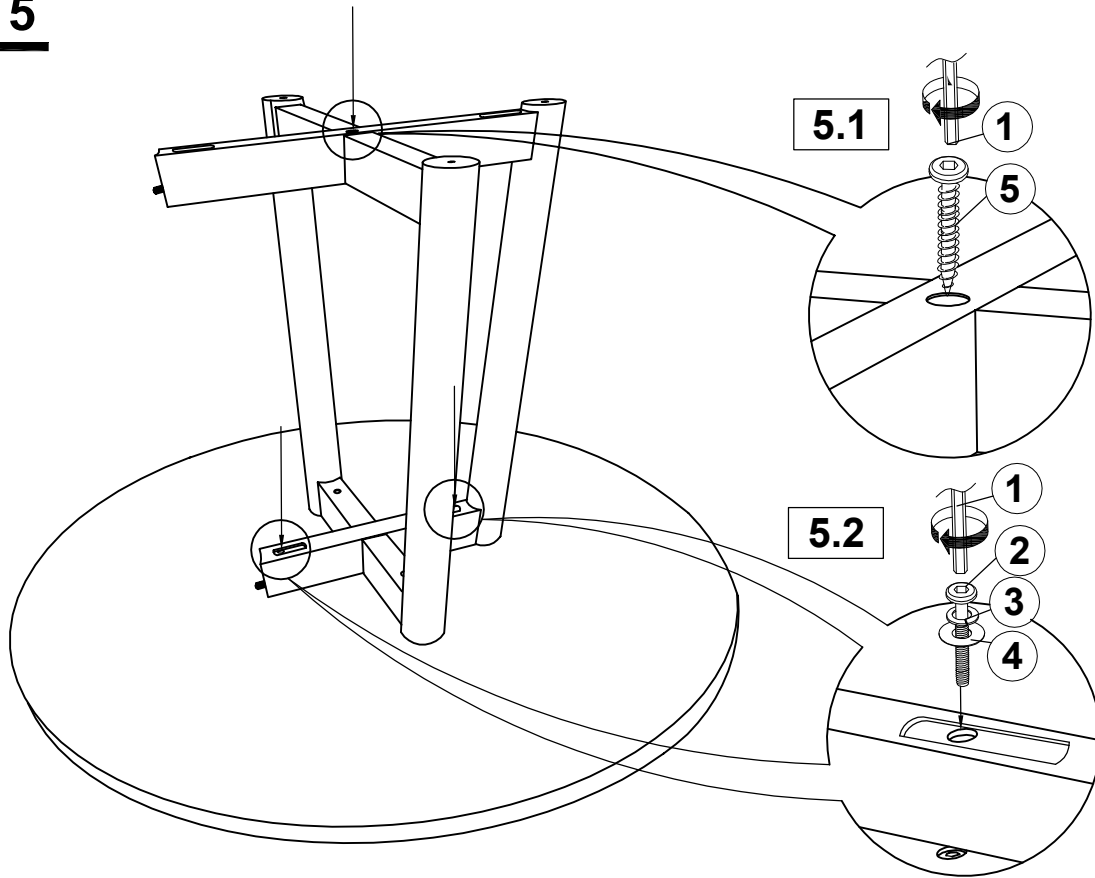

 STEP 6

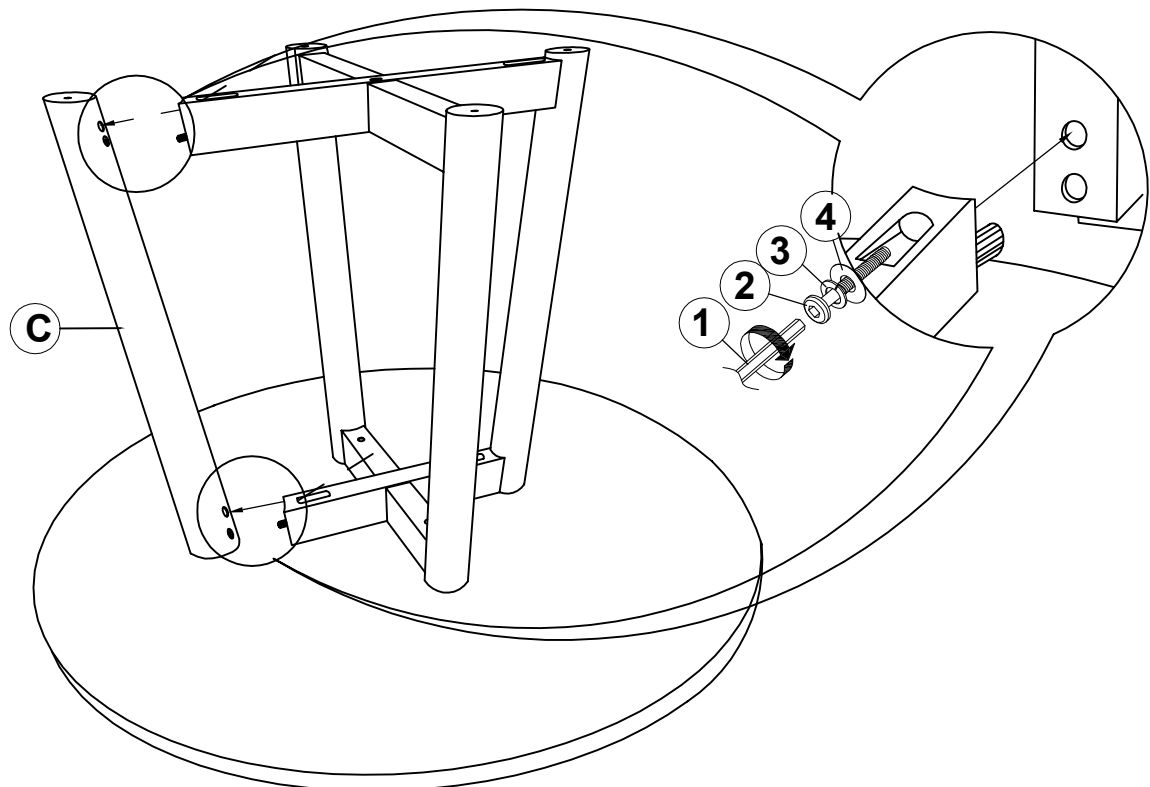


ITEM: **108471**



ASSEMBLY INSTRUCTIONS



 
STEP 7

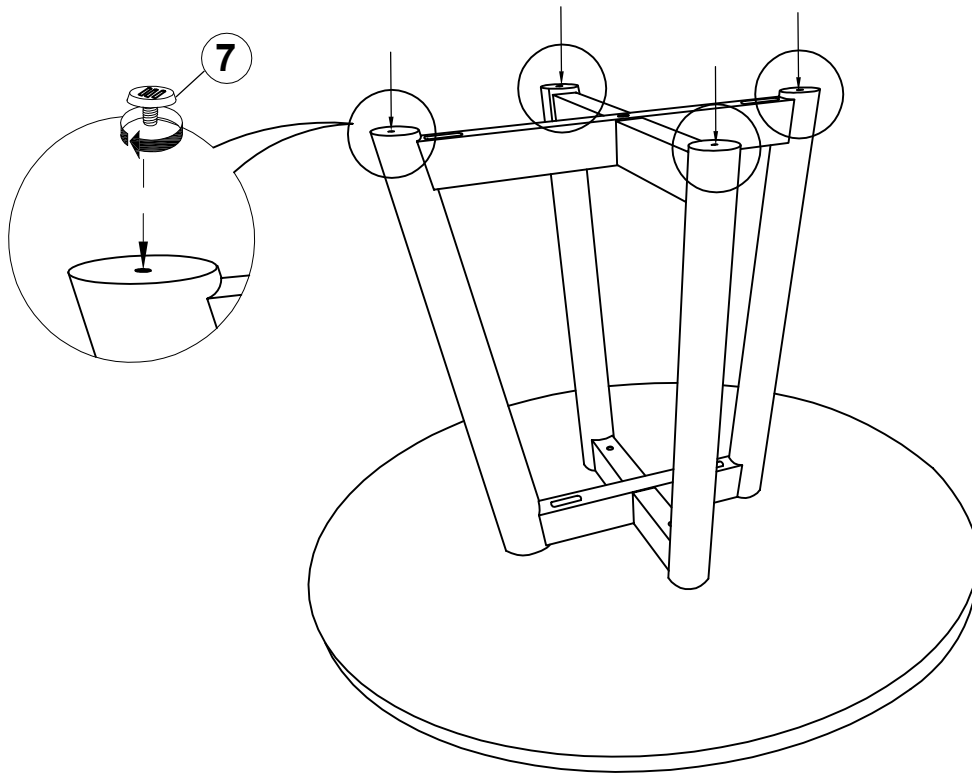

  STEP 8
COMPLETE

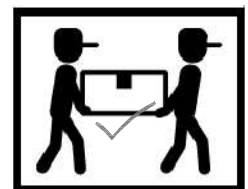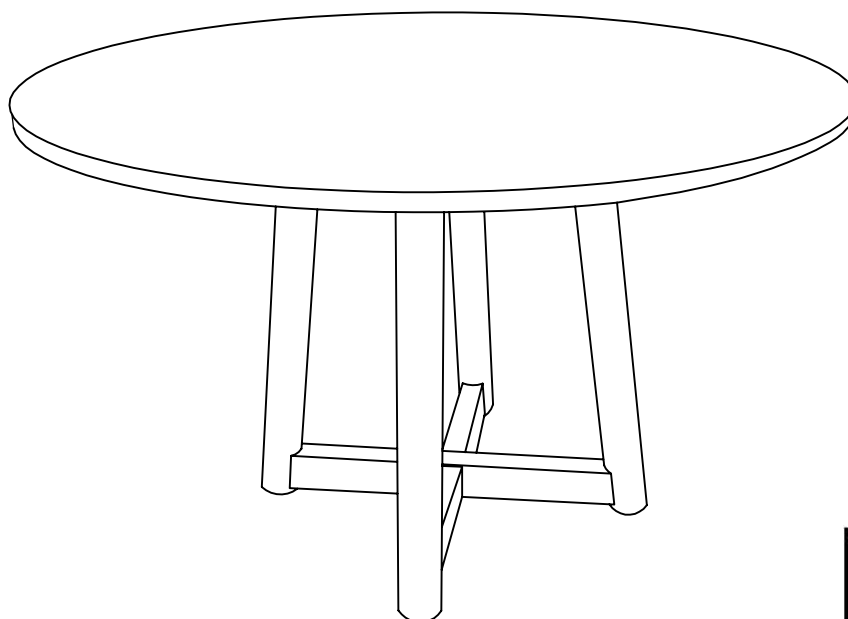

ITEM: **108471**

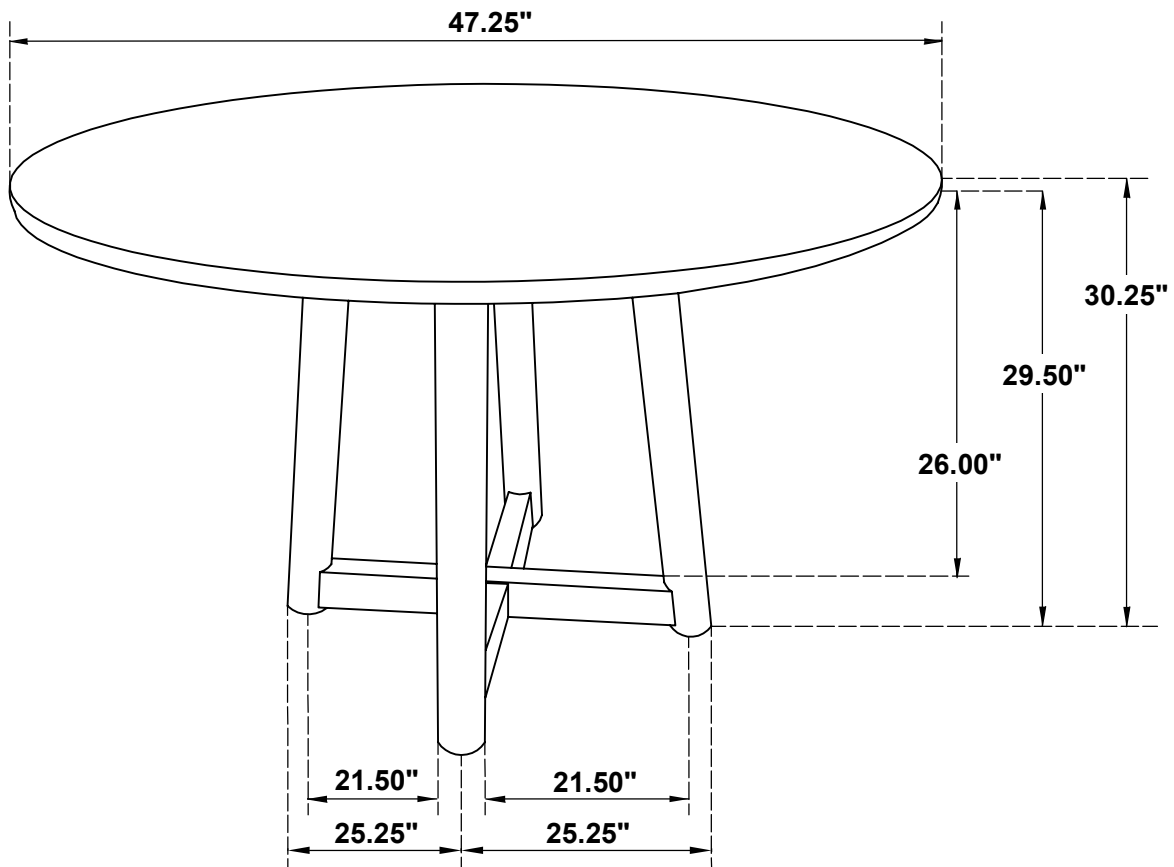 

Note: Dimension tolerance $\pm 5\%$