

# ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

# 183021 DINING TABLE

### ITEM: 183021

#### **ASSEMBLY INSTRUCTIONS**

#### **ASSEMBLY TIPS:**

1. Remove hardware from box and sort by size.

2. Please check to see that all hardware and parts are present prior to start of assembly.

3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



#### WARNING!


1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately. 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

60 MINUTES

#### PARTS IDENTIFICATION

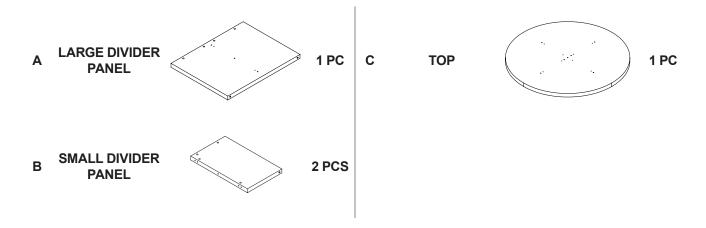

#### HARDWARE IDENTIFICATION

Z							
NO	DESCRIPTION	FIGURE	Q'TY	NO	DESCRIPTION	FIGURE	Q'TY
1	GLUE 40g		1 PC	4	CAM LOCK Ø15x12mm SR		12 PCS
2	WOODEN DOWEL Ø8x30mm		13 PCS	5	PLASTIC FEET M8x14mm		4 PCS
3	CAM BOLT Ø7x35.5mm SR		12 PCS	6	STICKER Ø20mm		2 PCS

#### NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.


# ITEM: **183021 STEP 1**










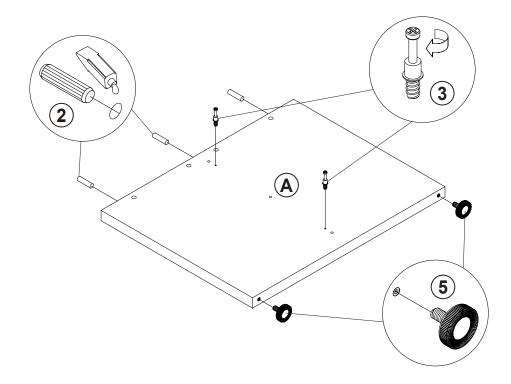


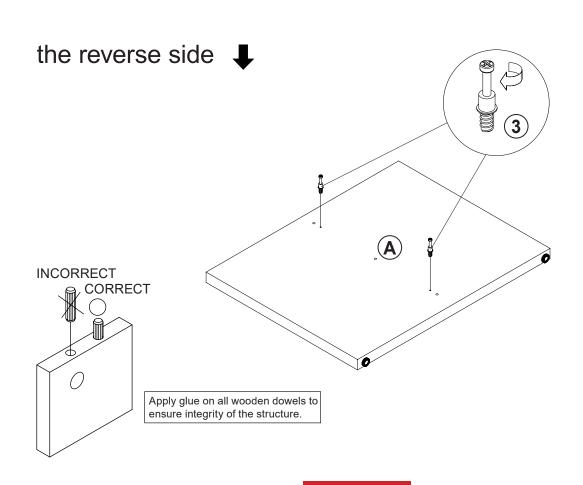

## ITEM: 183021 STEP 2






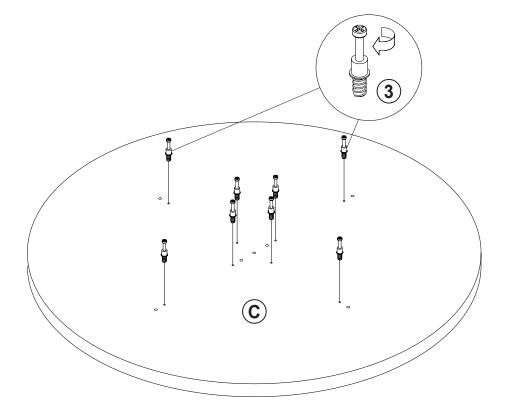

### STEP 3






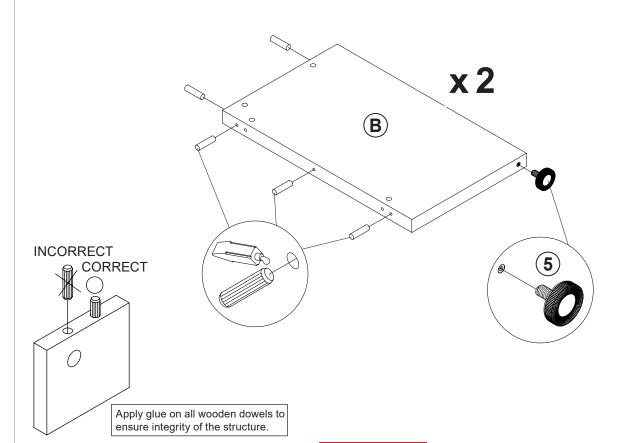

# ITEM: 183021 COASTER FINE FURNITURE STEP 4 6 x 4 B **B**

#### STEP 5


**(6)** 

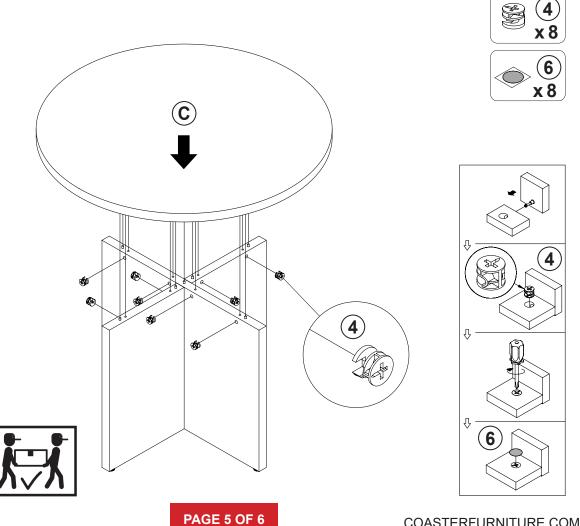

COASTERFURNITURE.COM

### ITEM: 183021



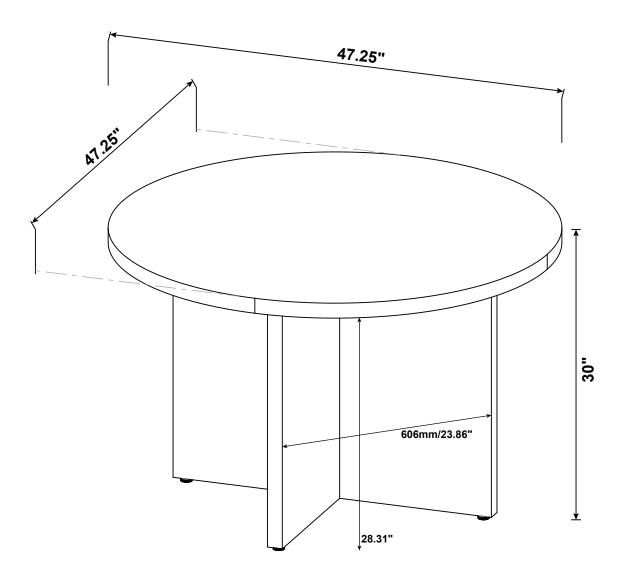

Note: Dimension tolerance ±5%