

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



107171 DINING TABLE

ITEM: 107171 (B1-B2)



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

10 MINUTES

PARTS IDENTIFICATION

B1 (BOX 1)

A TOP MARBLE



1PC

B2 (BOX 2)

B BASE



2PCS

ITEM:107171 (B1-B2)

ASSEMBLY INSTRUCTIONS



ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.


Z-HARDWARE IDENTIFICATION

Hardware pack is located in 107171 B2

ITEM:107171 (B1-B2)


ASSEMBLY INSTRUCTIONS

STEP 1

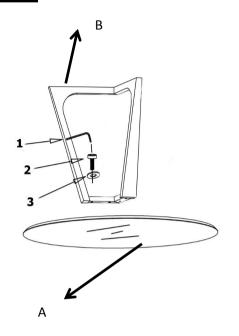



STEP 2

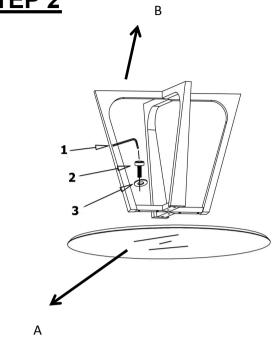

STEP 3






PAGE 4 OF 5

COASTERFURNITURE.COM

ITEM:107171 (B1-B2)



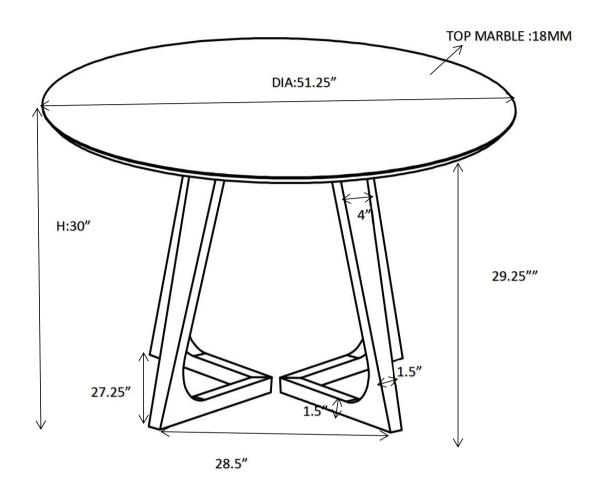

Note: Dimension tolerance ±5%