

ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE



Fine Furniture for every stage of life

709698
Coffee Table

ITEM: 709698



ASSEMBLY INSTRUCTIONS


ASSEMBLY TIPS :

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.

WARNING !




 
 
 
1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

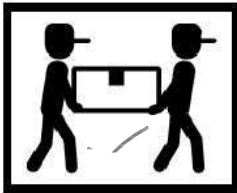


 



ASSEMBLY TIME

15 MINUTES

PARTS IDENTIFICATION

A	TOP & SHELF		2PCS
B	LEG		4PCS
C	UPPER CROSSBAR		2PCS
D	LOWER CROSSBAR		2PCS


HARDWARE IDENTIFICATION

1	ALLEN WRENCH (M4 x 110mm - BLK)		1PC
2	BOLT (M6 x 50mm - RBW)		24PCS
3	LOCK WASHER (1/4" - BLK)		24PCS
4	FLAT WASHER (M6 x 13mm - RBW)		24PCS
5	WOOD DOWEL (M8 x 30mm)		8PCS

ITEM: **709698**
ASSEMBLY INSTRUCTIONS




STEP 1

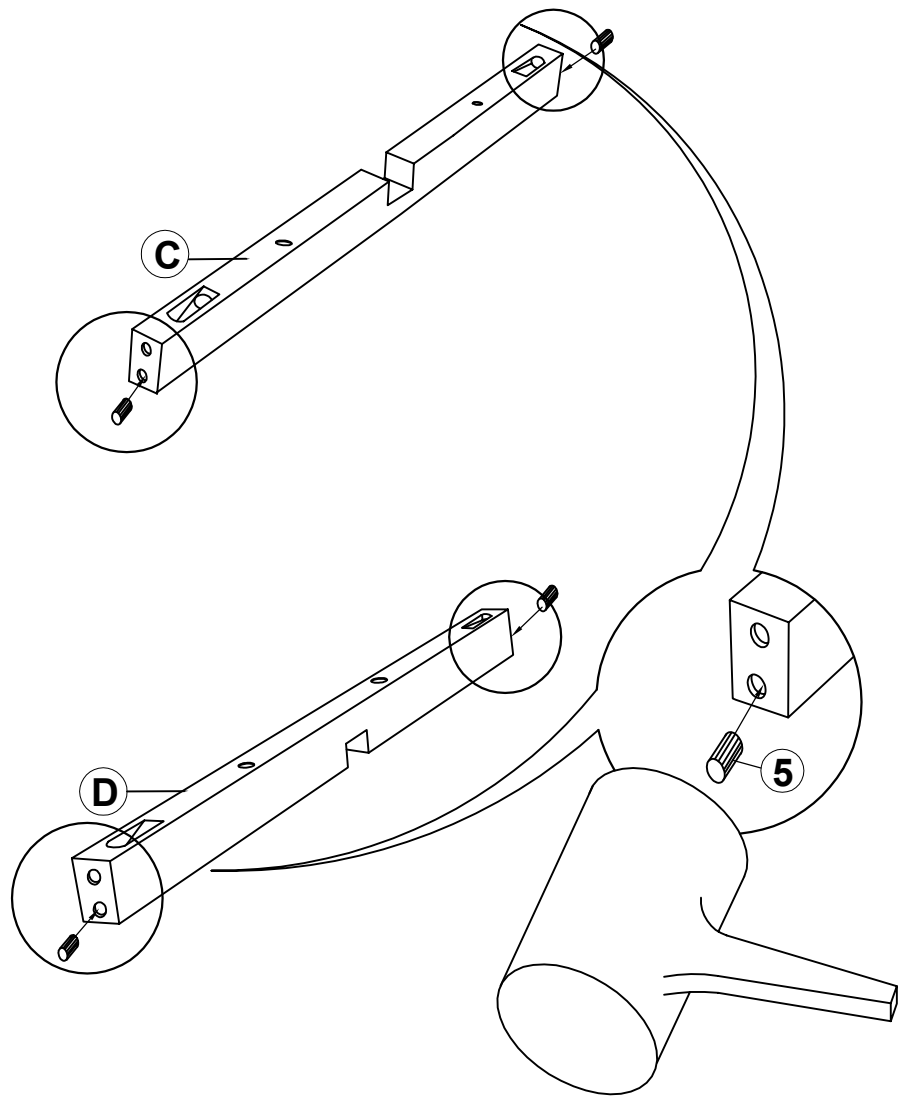


ITEM: **709698**
ASSEMBLY INSTRUCTIONS



STEP 2

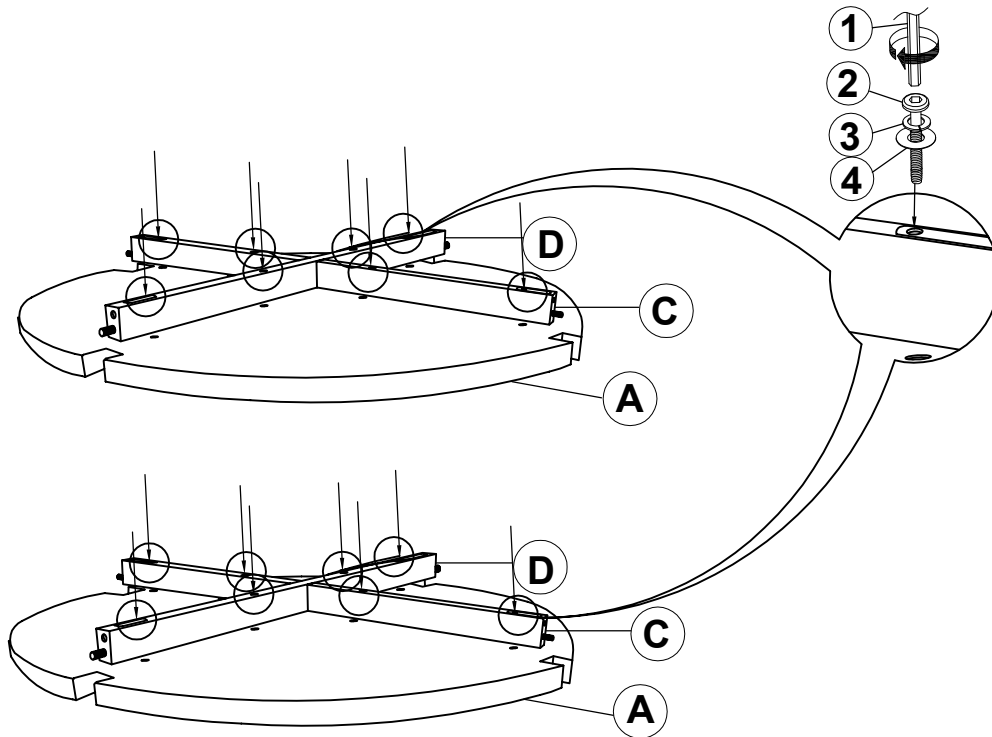


STEP 3

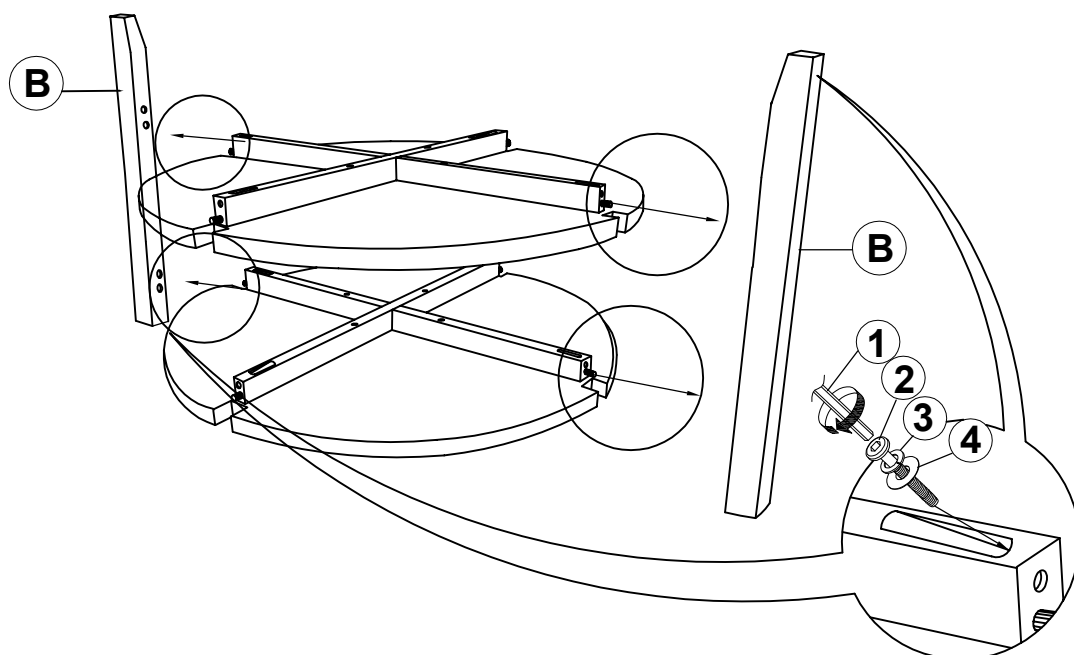



ITEM: **709698**
ASSEMBLY INSTRUCTIONS




STEP 4

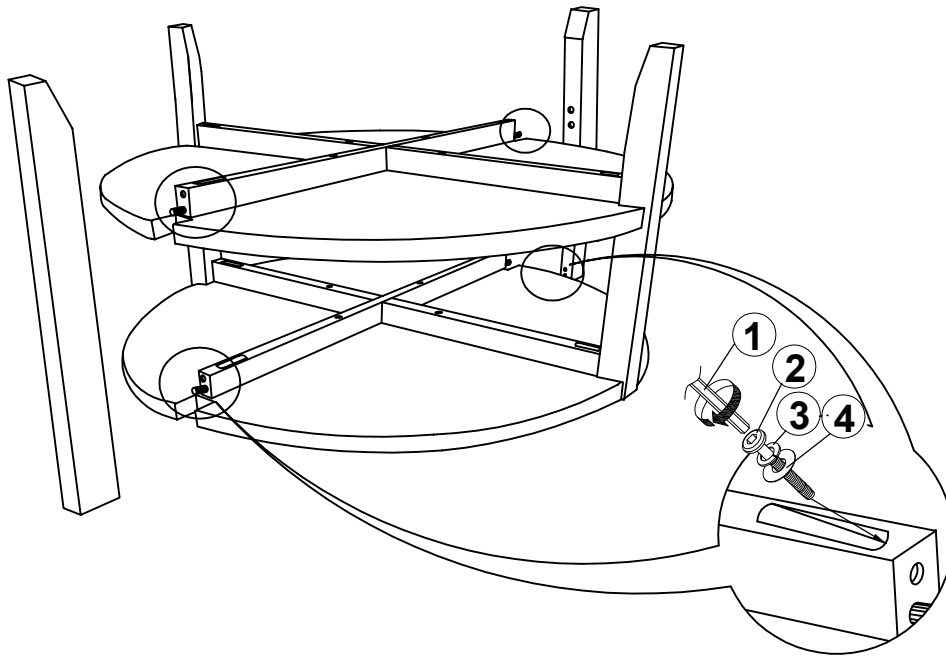

STEP 5
COMPLETE

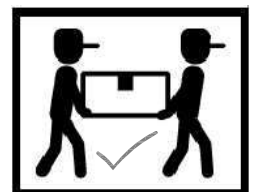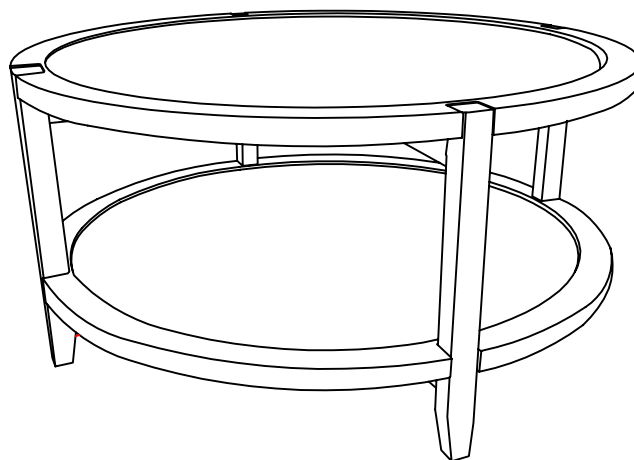

ITEM: 709698

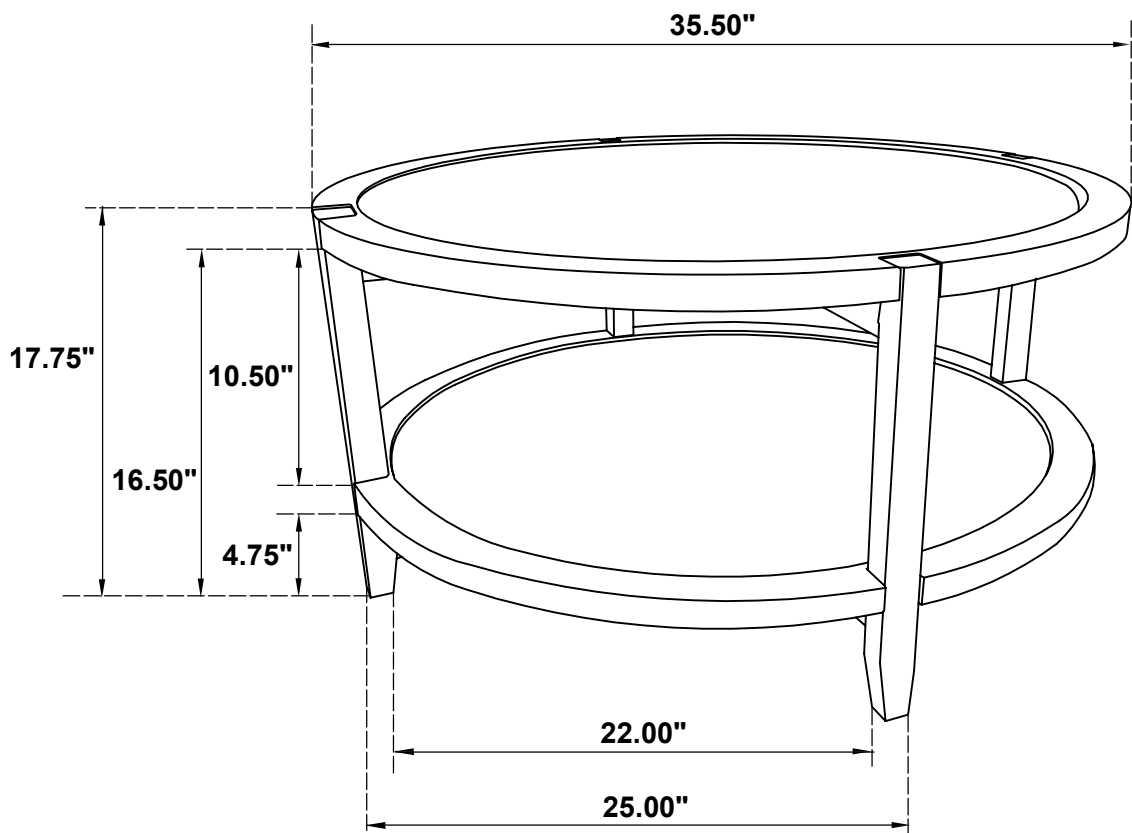

Note: Dimension tolerance $\pm 5\%$