



*ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE*



Fine Furniture for every stage of life

552081

ARMLESS CHAIR

ITEM: 552081

ASSEMBLY INSTRUCTIONS



 
ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

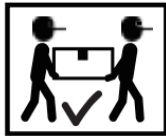

ASSEMBLY TIME



5 MINUTES

PARTS IDENTIFICATION

	PART NAME	FIGURE	QUANTITY
A	ARMLESS CHAIR		1PC
B	LEG		4PCS

ITEM: 552081

  ASSEMBLY INSTRUCTIONS

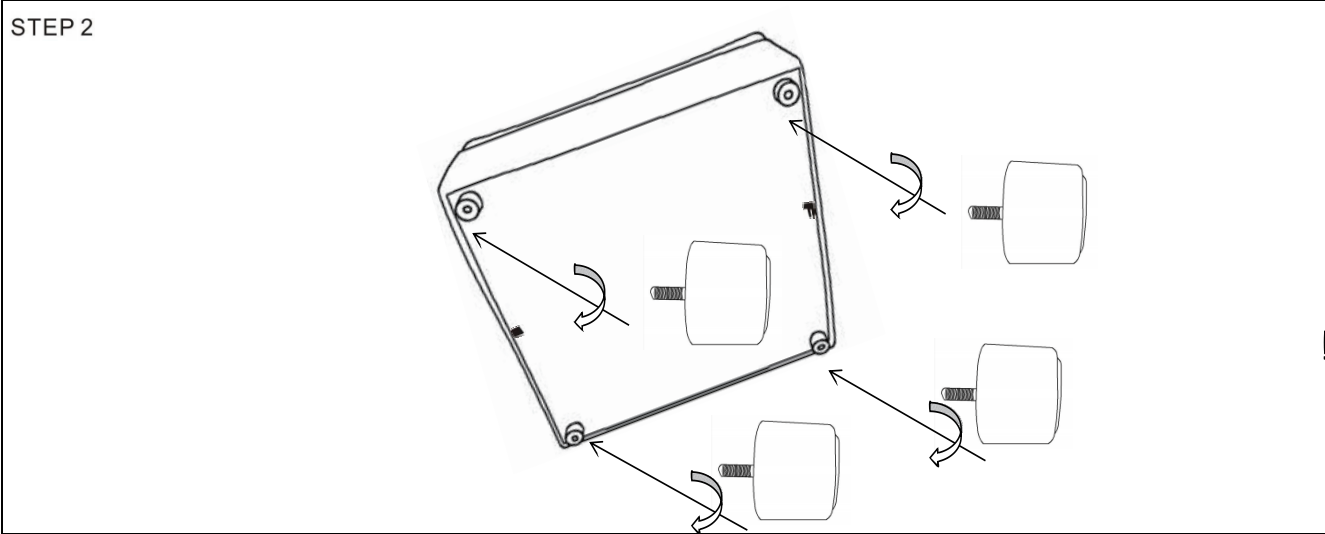
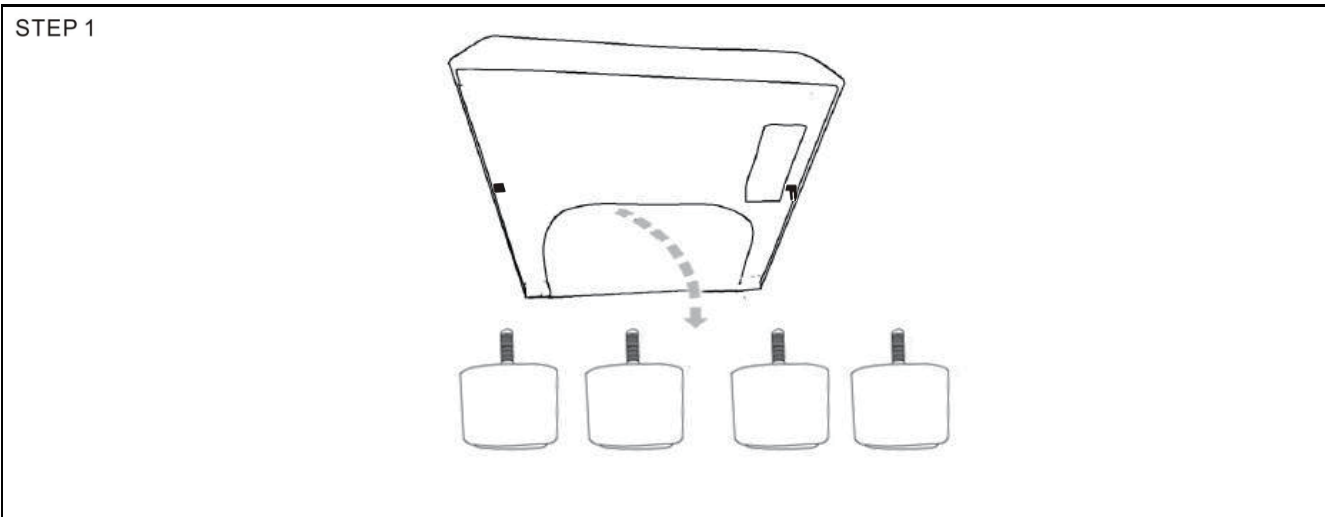


ITEM: 552081

ASSEMBLY INSTRUCTIONS




  STEP 1 Turn over the item and take out the legs from zippered pouch and install the legs as pictures show

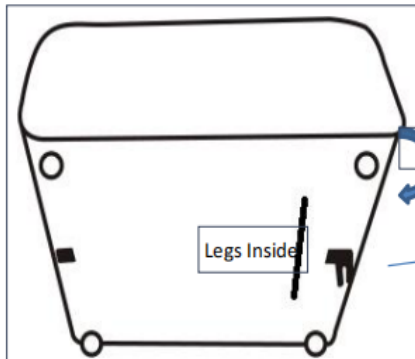



Do not use a hammer, pls remove the wood block with screwdriver

 STEP 2


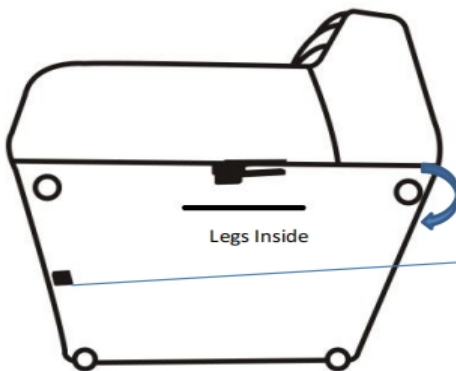


Do not use a hammer, pls remove the wood block with screwdriver

  STEP3: Insert the metal grooves to connect other units as pictures show

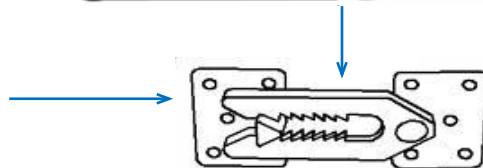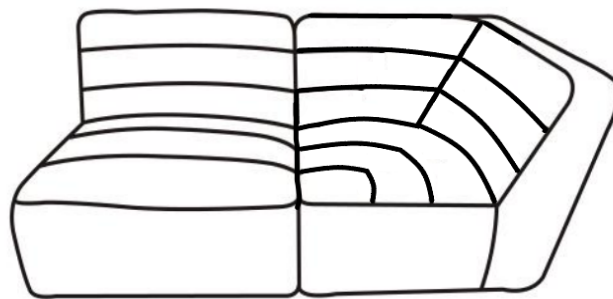

ITEM: 552081

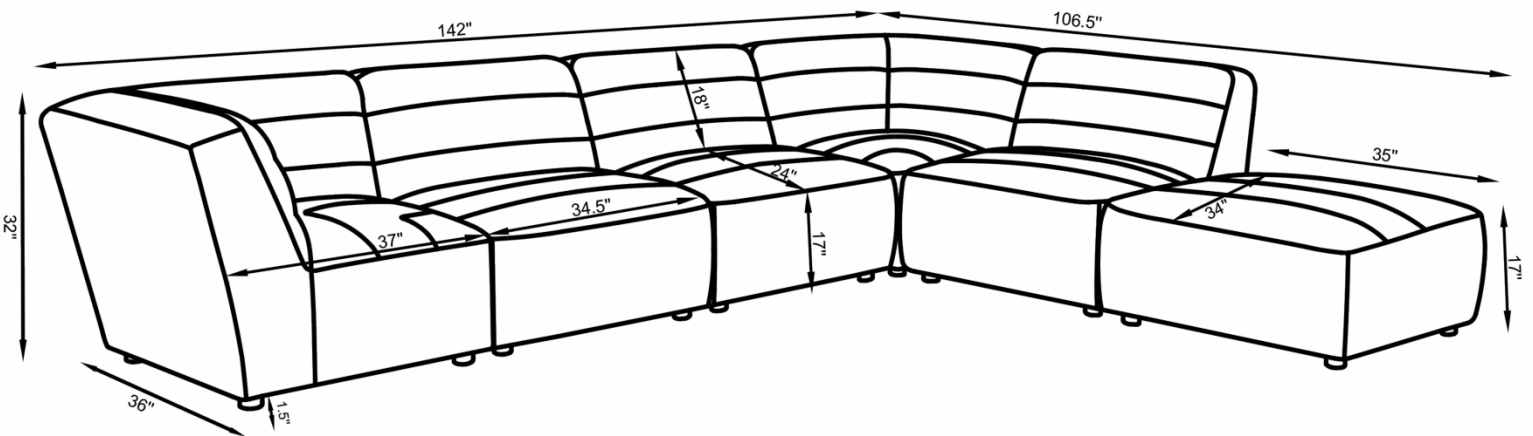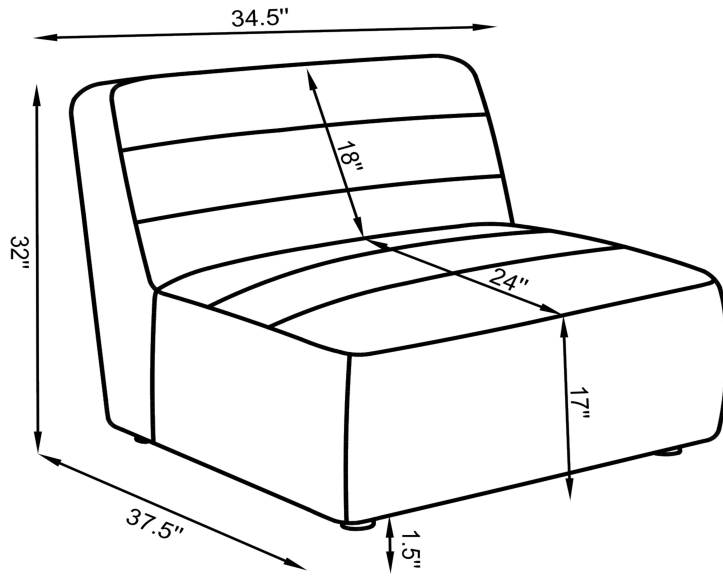  

Note: Dimension tolerance $\pm 5\%$





*ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE*



Fine Furniture for every stage of life

552082

CORNER

ITEM: 552082

ASSEMBLY INSTRUCTIONS



 
ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.

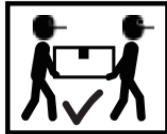

ASSEMBLY TIME 5 MINUTES

PARTS IDENTIFICATION


	PART NAME	FIGURE	QUANTITY
A	CORNER		1PC
B	LEG		4PCS

ITEM: 552082


ASSEMBLY INSTRUCTIONS



 
STEP 1

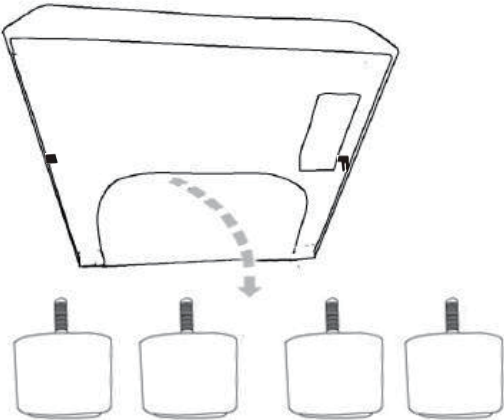

 STEP 2

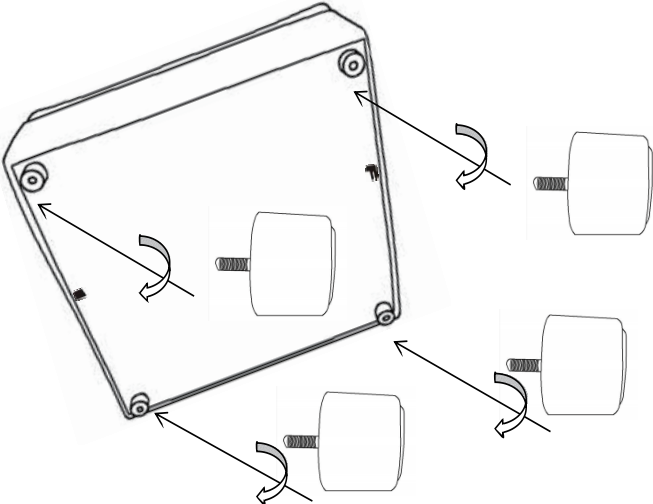

 STEP 3
COMPLETE

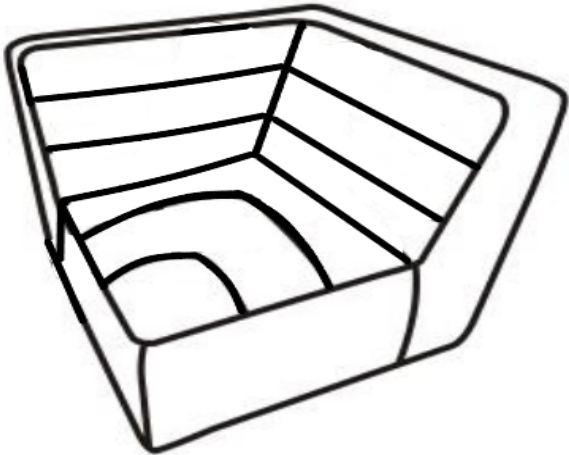


ITEM: 552082


ASSEMBLY INSTRUCTIONS



 
STEP 1 Turn over the item and take out the legs from zippered pouch and install the legs as pictures show

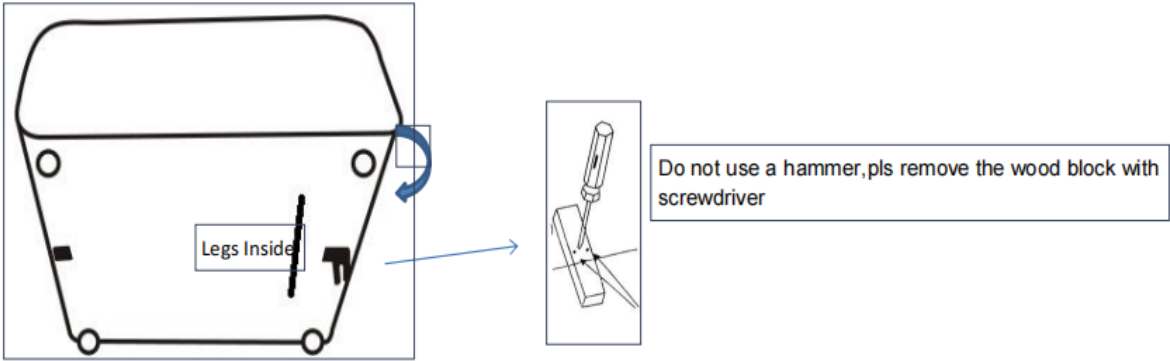


 
STEP 2

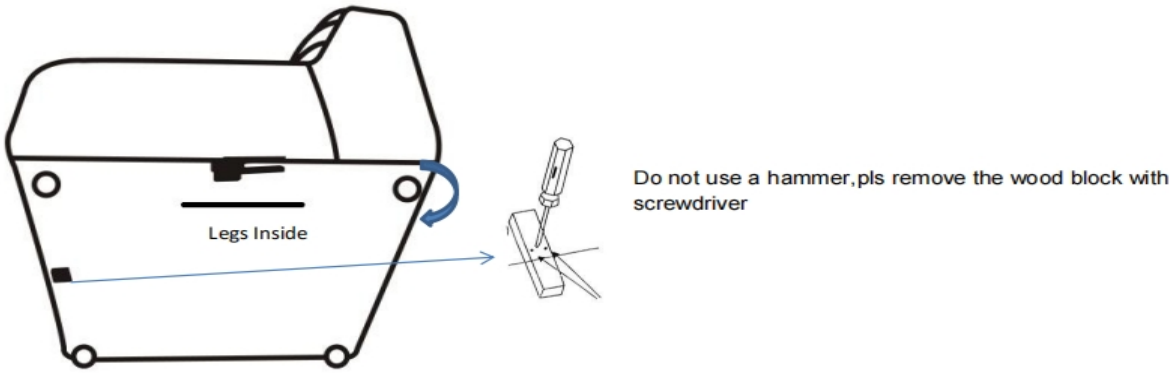

 STEP3: Insert the metal grooves to connect other units as pictures show

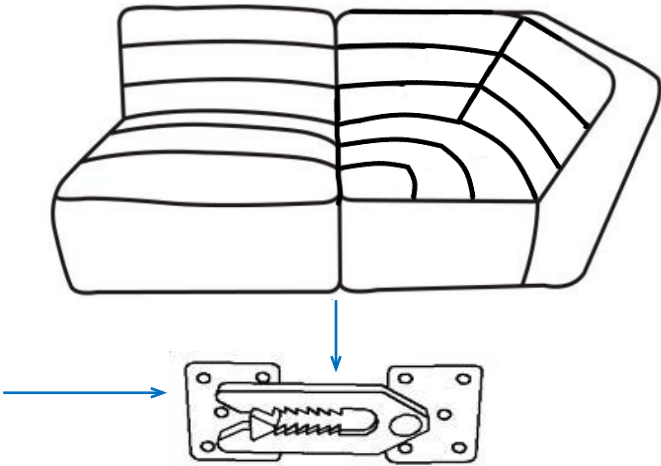

ITEM: 552082

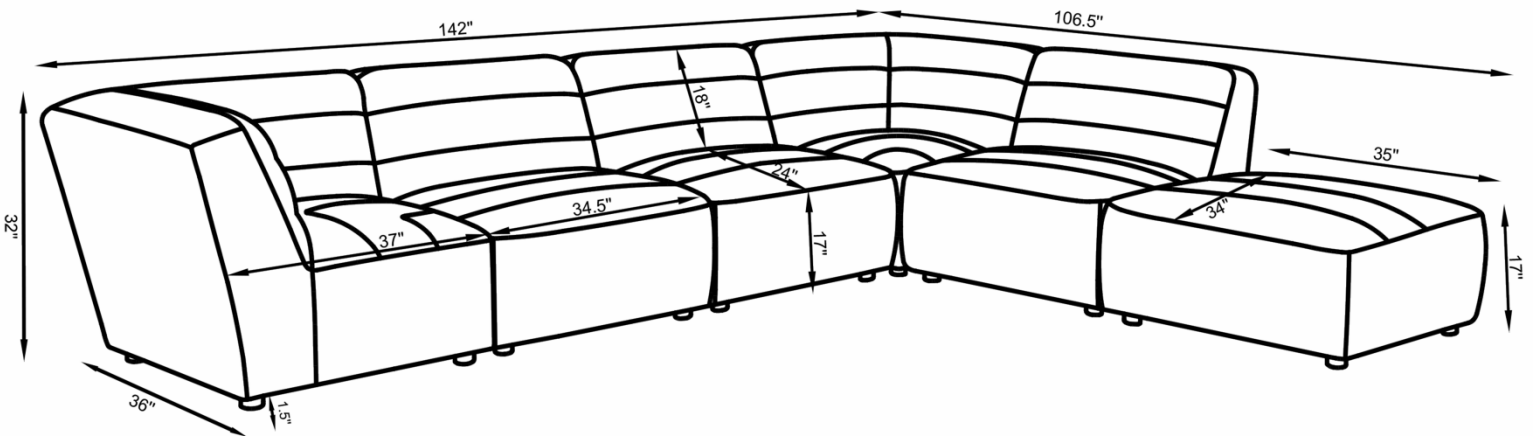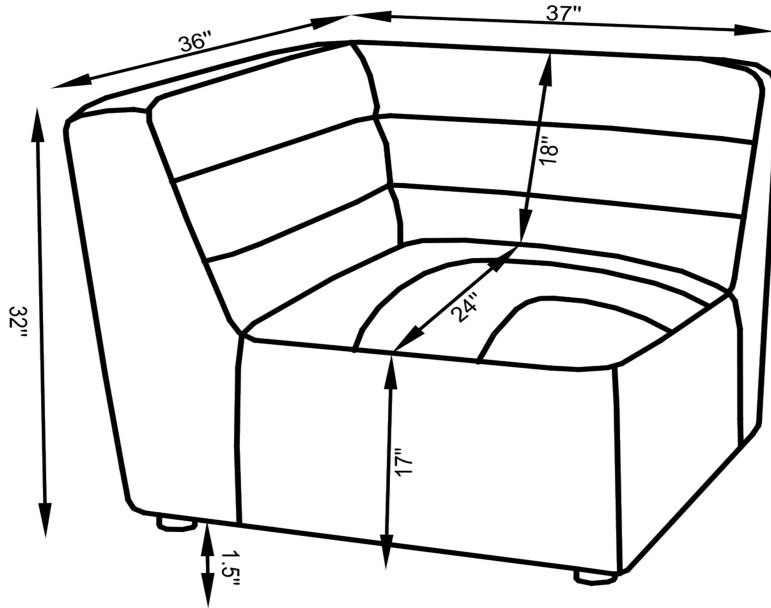  

Note: Dimension tolerance $\pm 5\%$





*ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE*



Fine Furniture for every stage of life

552083

OTTOMAN

ITEM: 552083

ASSEMBLY INSTRUCTIONS



ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME 5 MINUTES

PARTS IDENTIFICATION


	PART NAME	FIGURE	QUANTITY
A	OTTOMAN		1PC
B	LEG		4PCS

ITEM: 552083


ASSEMBLY INSTRUCTIONS



 
STEP 1

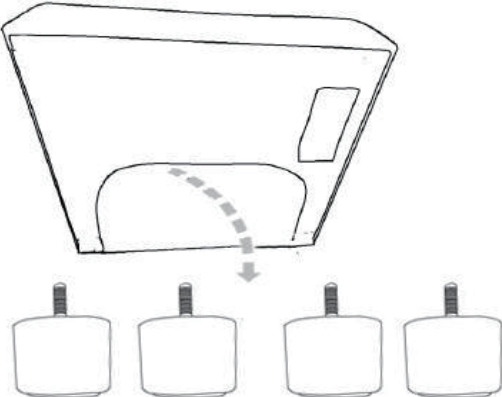


 
STEP 2

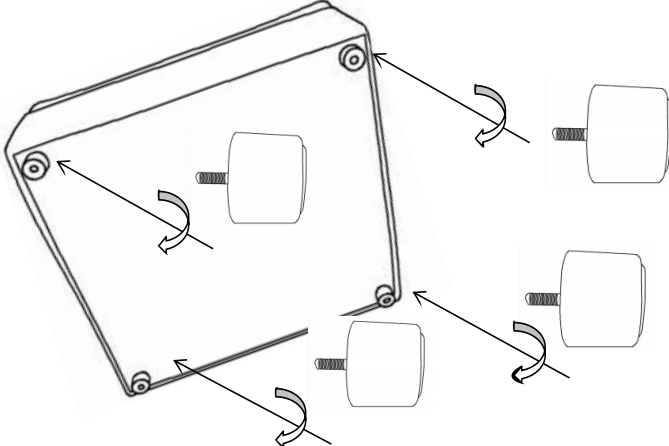

 STEP 3
COMPLETE

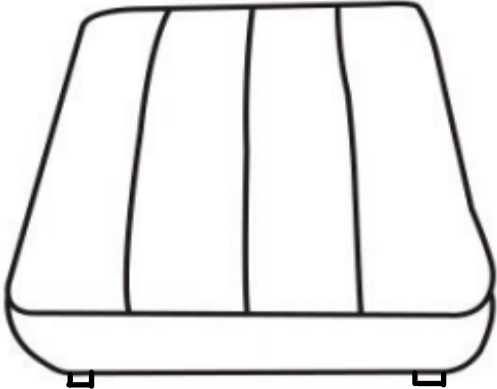

ITEM: 552083

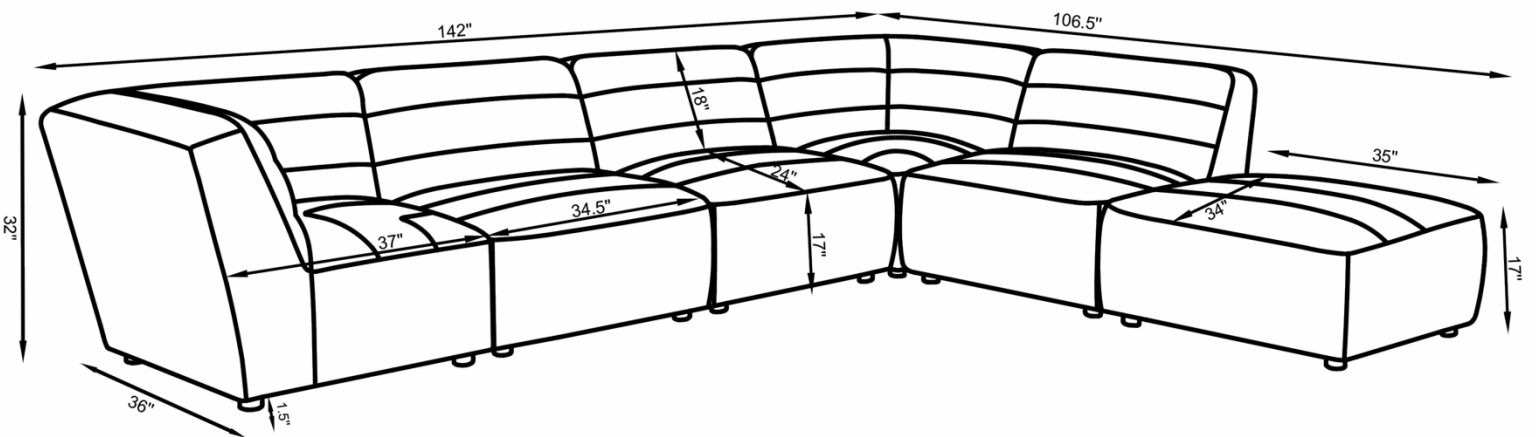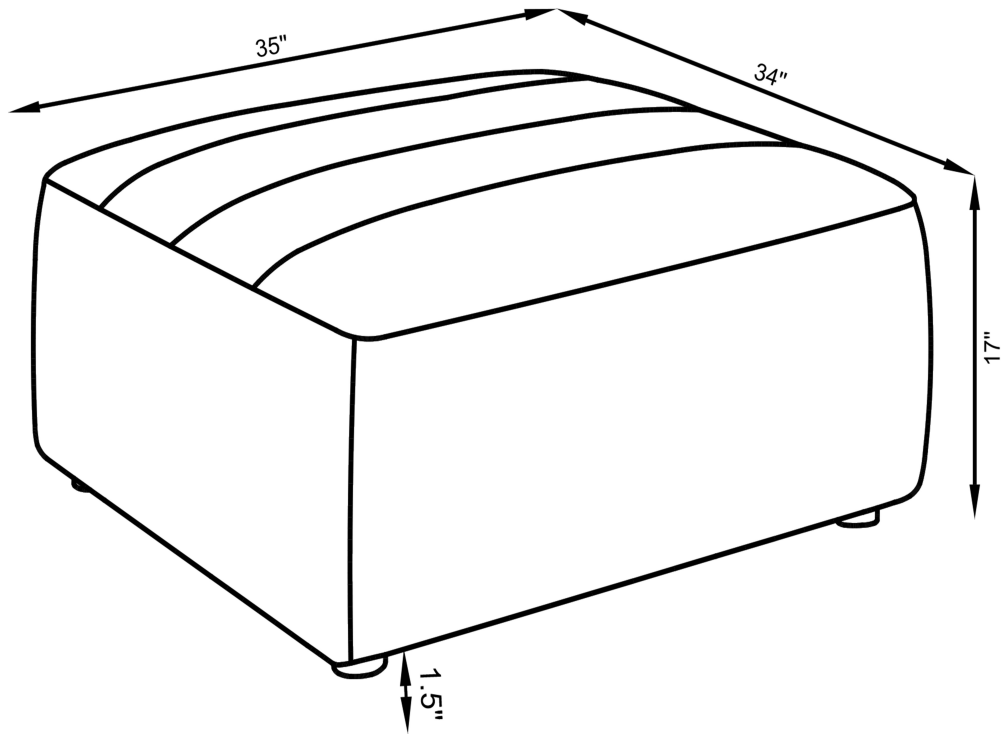  

Note: Dimension tolerance $\pm 5\%$

