


ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE

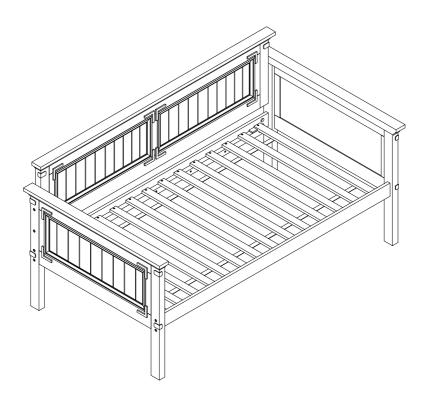

Fine Furniture for every stage of life

300675 (B1&B2) *Twin Daybed*

REVISION 0: 09/06/2017 REVISION 1: 11/08/2019

ITEM: 300675 (B1&B2)

ASSEMBLY INSTRUCTIONS

COASTER

ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

30 MINUTES

PARTS IDENTIFICATION

B1 (BOX 1)

A LEFT SIDE FRAME



1PC

C ROLL SLAT (13PCS)



1SET

B RIGHT SIDE FRAME



1PC

B2 (BOX 2)

D BED RAIL



2PCS

E BACK PANEL



1PC

HARDWARE IDENTIFICATION

Z-B2 (BOX2) - HARDWARE PACK IS LOCATED IN 300675 (B2)

1 LONG BOLT (1/4 x 90mm Φ 15 - BLK)



8PCS

FLAT HEAD SCREW
(4 x 35mm - BLK)



8PCS

2 HALF ROUND NUT



8PCS

5 WOOD DOWEL (8 x 30mm) **(100**)

8PCS

3 SHORT BOLT (1/4 x 70mm Ф 15 - BLK)



4PCS

ALLEN WRENCH



8PCS

NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM:300675 (B1&B2)

COASTER

ASSEMBLY INSTRUCTIONS

STEP 1

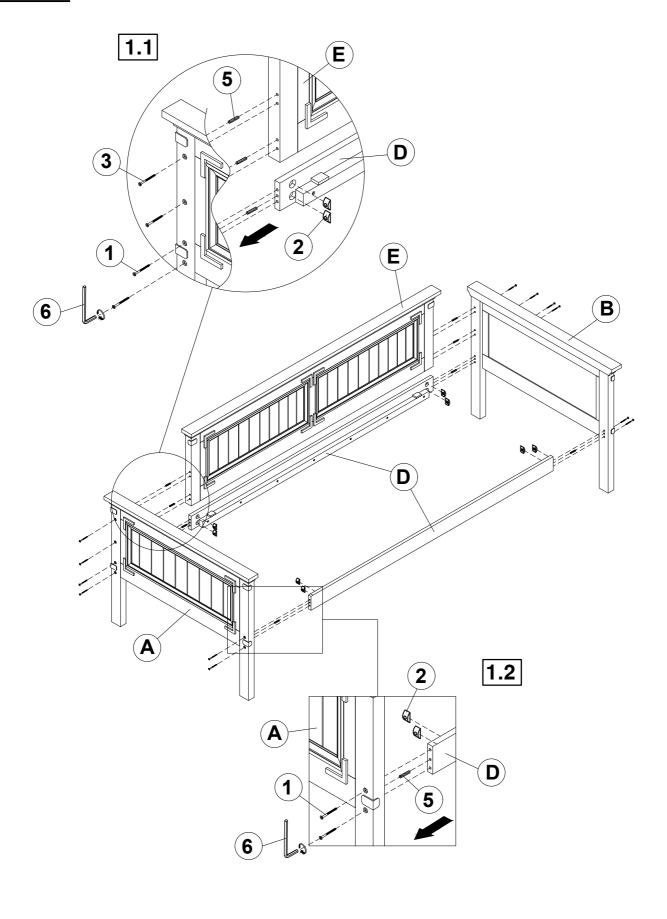

ITEM:300675 (B1&B2) **ASSEMBLY INSTRUCTIONS** STEP 2

STEP 3 COMPLETE






ITEM:300675 (B1&B2)



Inner Size: 76.50"W x 39.25"D

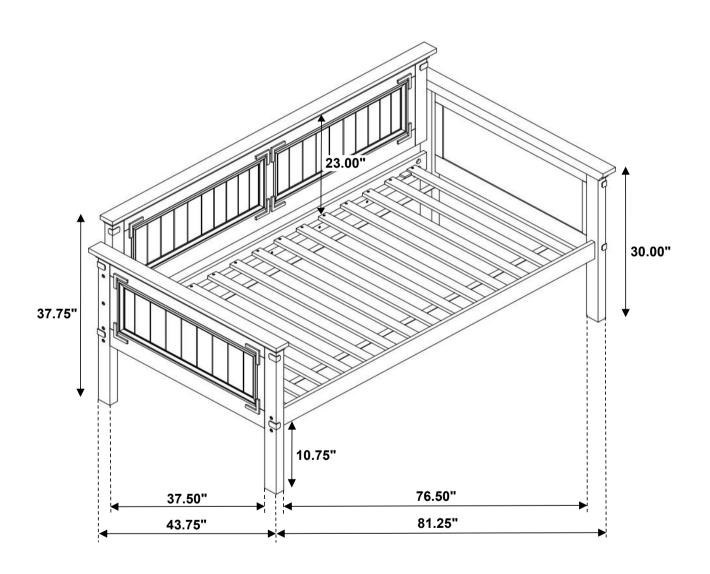

Note: Dimension tolerance ±5%