


ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE

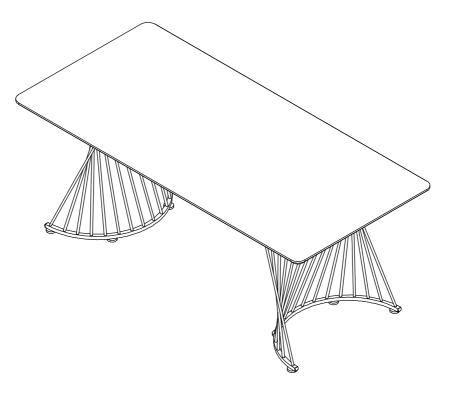

Fine Furniture for every stage of life

DINING TABLE

REVISION 0: 03/10/2021 REVISION 1: 08/24/2023

PAGE 1 OF 5



ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

 
- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.

ASSEMBLY TIME 35 MINUTES

PARTS IDENTIFICATION

B1: DINING TABLE TOP

A TABLE TOP




B CROSSBAR

2PCS

B2: DINING TABLE BASE

C SIDE FRAME

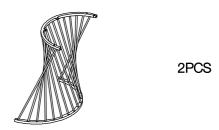

HARDWARE IDENTIFICATION

1 SHORT BOLT (1/4" x 12mm BLK)

8PCS

4 LEVELER (1/4" x 12mm BLK)

8PCS

2 LONG BOLT (1/4" x 32mm BLK)



10PCS

ALLEN KEY (4mm)



1PC

3 CAP (20 x 20mm BLK)



4PCS


Hardware pack is located in 193531B2

PAGE 2 OF 5




STEP 1

Do not tighten until each step is completed or instructed.

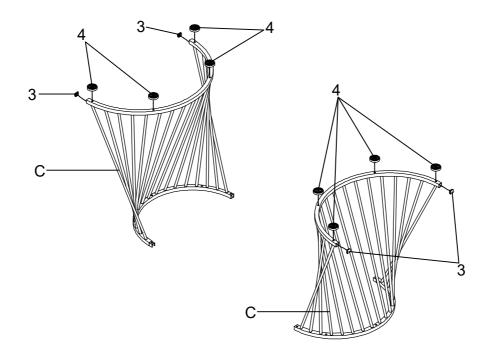


STEP 2

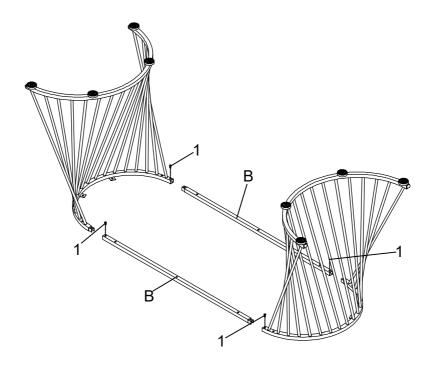


PAGE 3 OF 5



STEP 3

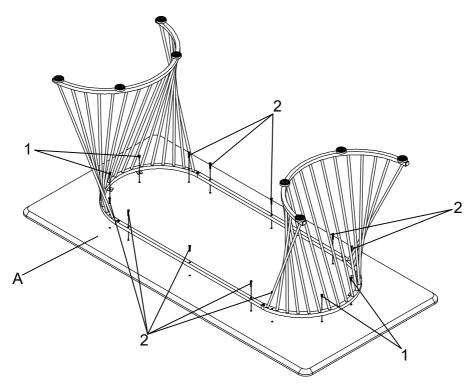

STEP 4 **COMPLETE**

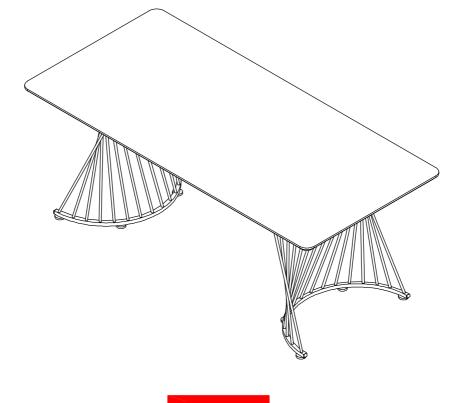


PAGE 4 OF 5



Product Size: 2032 X 946 X 781 H (MM)

Product Size: 80" X 37.25" X 30.75"

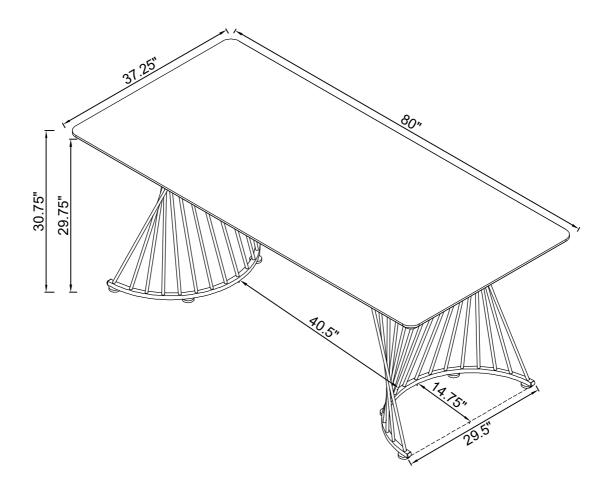

Note: Dimension tolerance ±5%