


## ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE

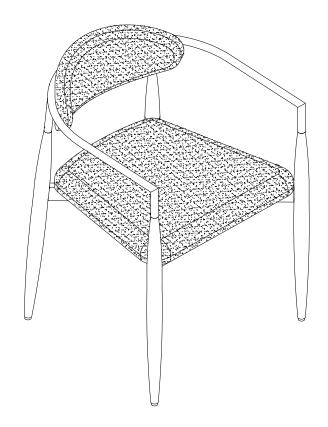

Fine Furniture for every stage of life

182682/182692 ARM CHAIR

REVISION 0: 03/19/2024

PAGE 01 OF 05

COASTERFURNITURE.COM

#### **ASSEMBLY INSTRUCTIONS**



#### **ASSEMBLY TIPS:**

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.




#### WARNING

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishment.

ASSEMBLY TIME

15 MINUTE

#### PARTS IDENTIFICATION

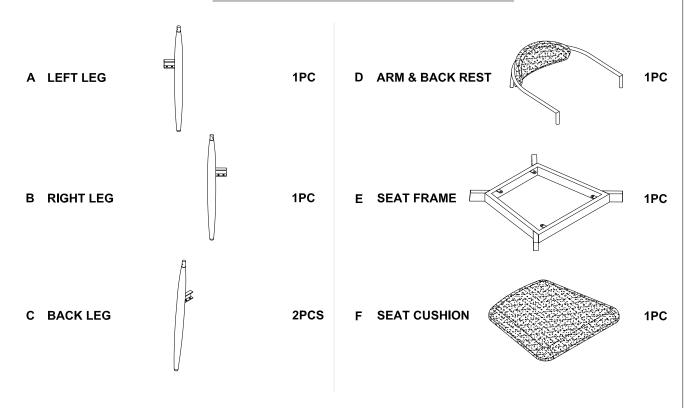

#### HARDWARE IDENTIFICATION

1	BOLT (1/4"x1/2" - BLK)		8PCS	4	WASHER (ø16mm - BLK)	8PCS
2	BOLT (5/32" x 3/8" - GLD)	<b></b>	4PCS	5	WASHER (ø12mm - BLK)	4PCS
3	SCREW (M4 x 15mm - BLK)		4PCS	6	ALLEN KEY (4x22X60mm - BLK)	1PC

#### NOTE:

Quantities shown are for one chair.

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

## **ASSEMBLY INSTRUCTIONS**

STEP 1:

#### **ASSEMBLY**

Do not fully tighten all bolts until assembly is complete.


This will help all parts to assemble properly.




Seat Cushion (F).

4PCS

4PCS

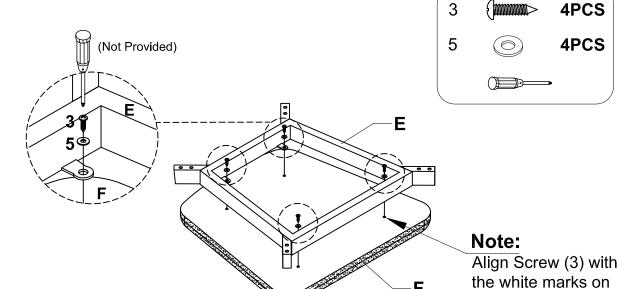


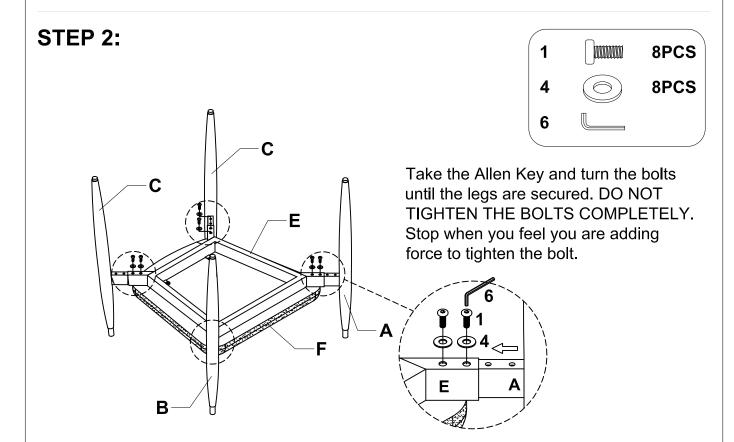


# COASTER


## ASSEMBLY INSTRUCTIONS

STEP 3:

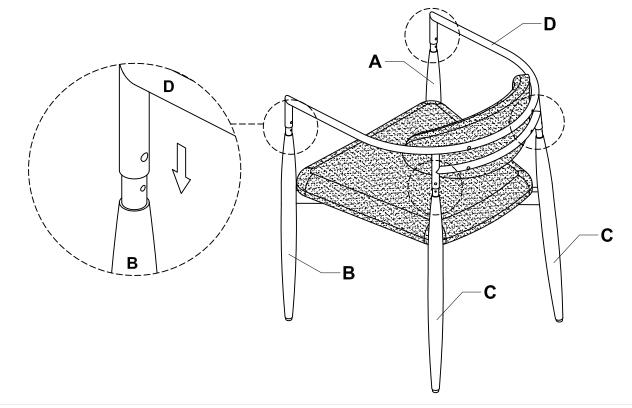

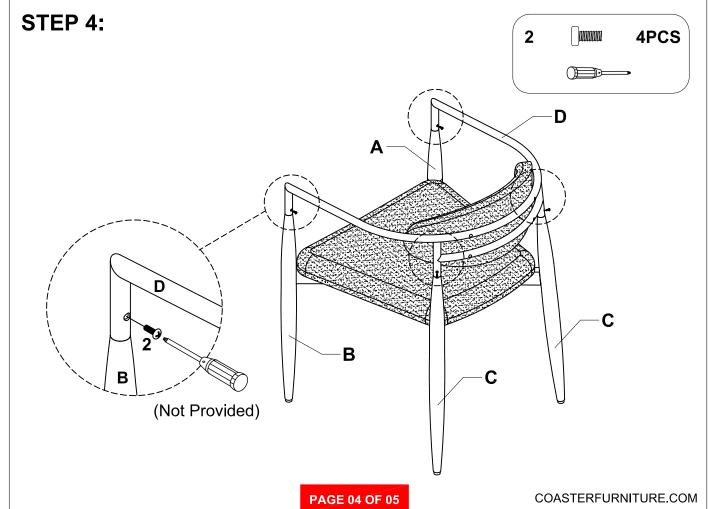



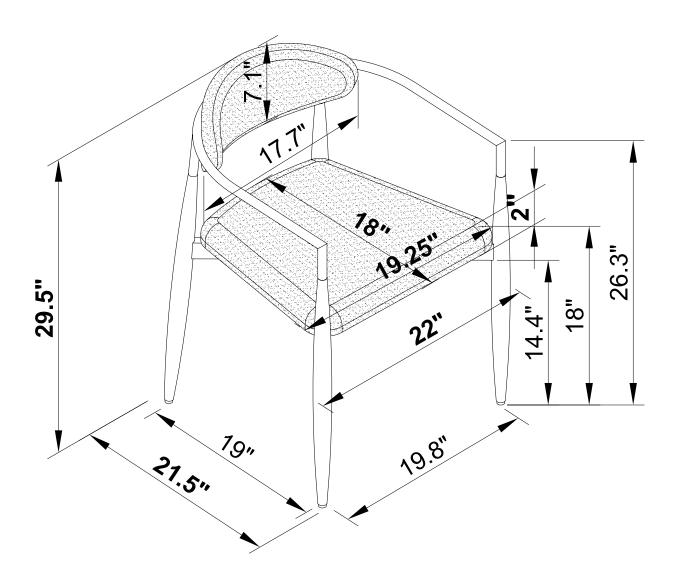

**Note:** Dimension tolerance ±5%