



ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE



Fine Furniture for every stage of life

REVISION 0 : 02/28/2024

107600
Dining Table

ITEM:107600



ASSEMBLY INSTRUCTIONS

 
ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!



1. Don't attempt to repair or modify parts that are broken or defective .Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishment.






ASSEMBLY TIME

5 MINUTES

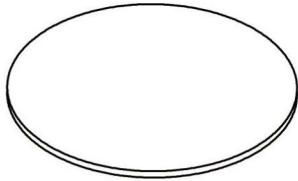PARTS IDENTIFICATION

B1 (BOX 1)	B2 (BOX 2)
A TOP  1PC	B BASE  1PC

HARDWARE IDENTIFICATION

Z	HARDWARE PACK	Hardware pack is located in 107600B2	
1	ALLEN WRENCH M8-SR		1PC
2	BOLT M8" *15MM-GD		4PCS
3	FLAT WASHER Ø18 *Ø 8-GD		4PCS

 

ITEM: 107600

ASSEMBLY INSTRUCTIONS



STEP 1



Adjustable

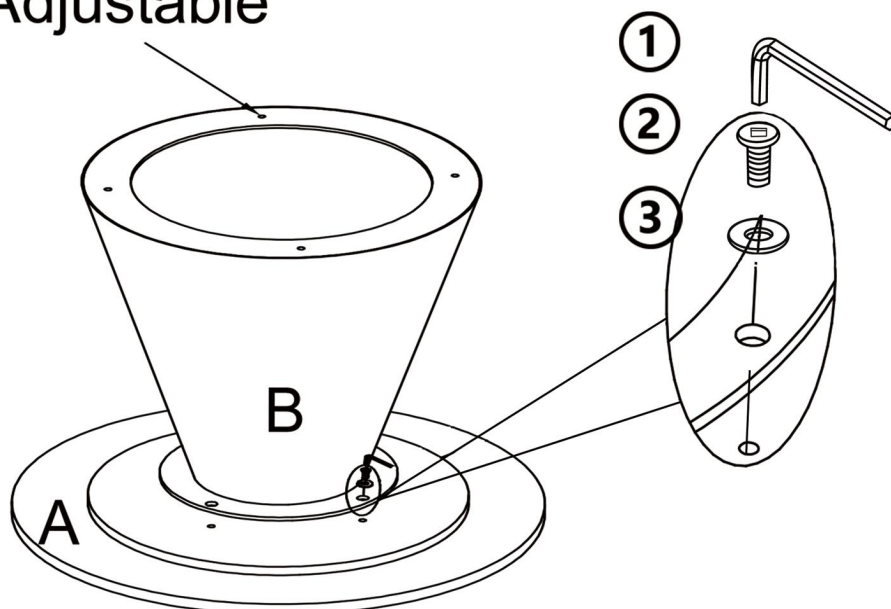


 STEP 2

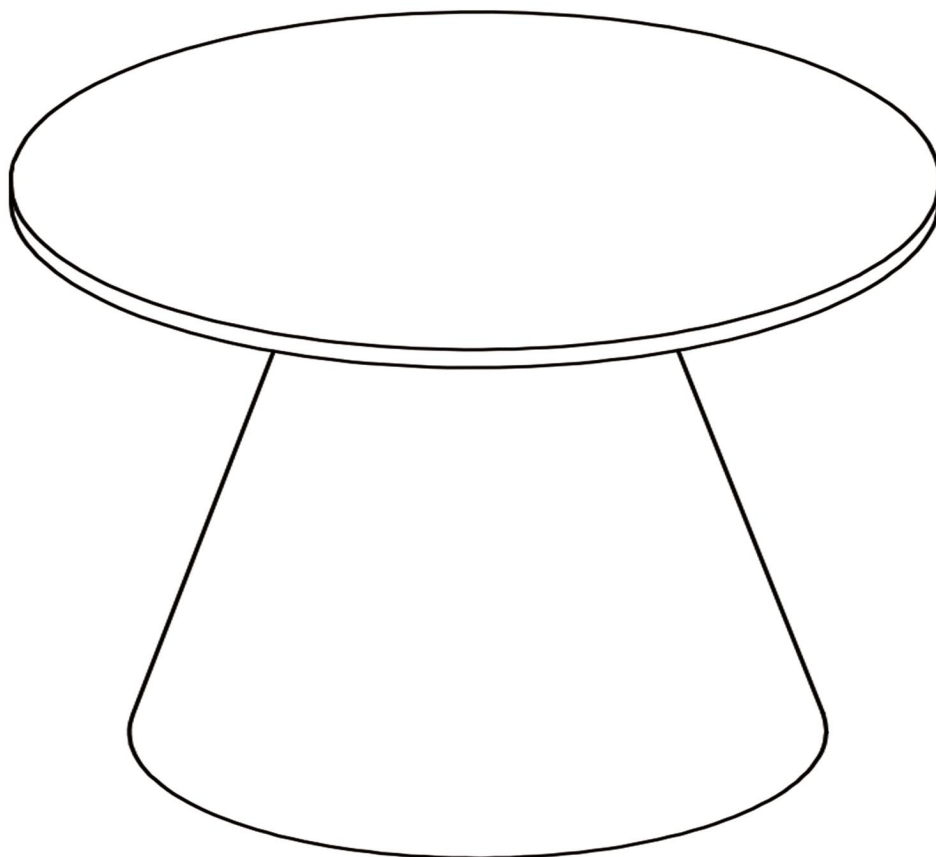

ITEM: 107600

ASSEMBLY INSTRUCTIONS

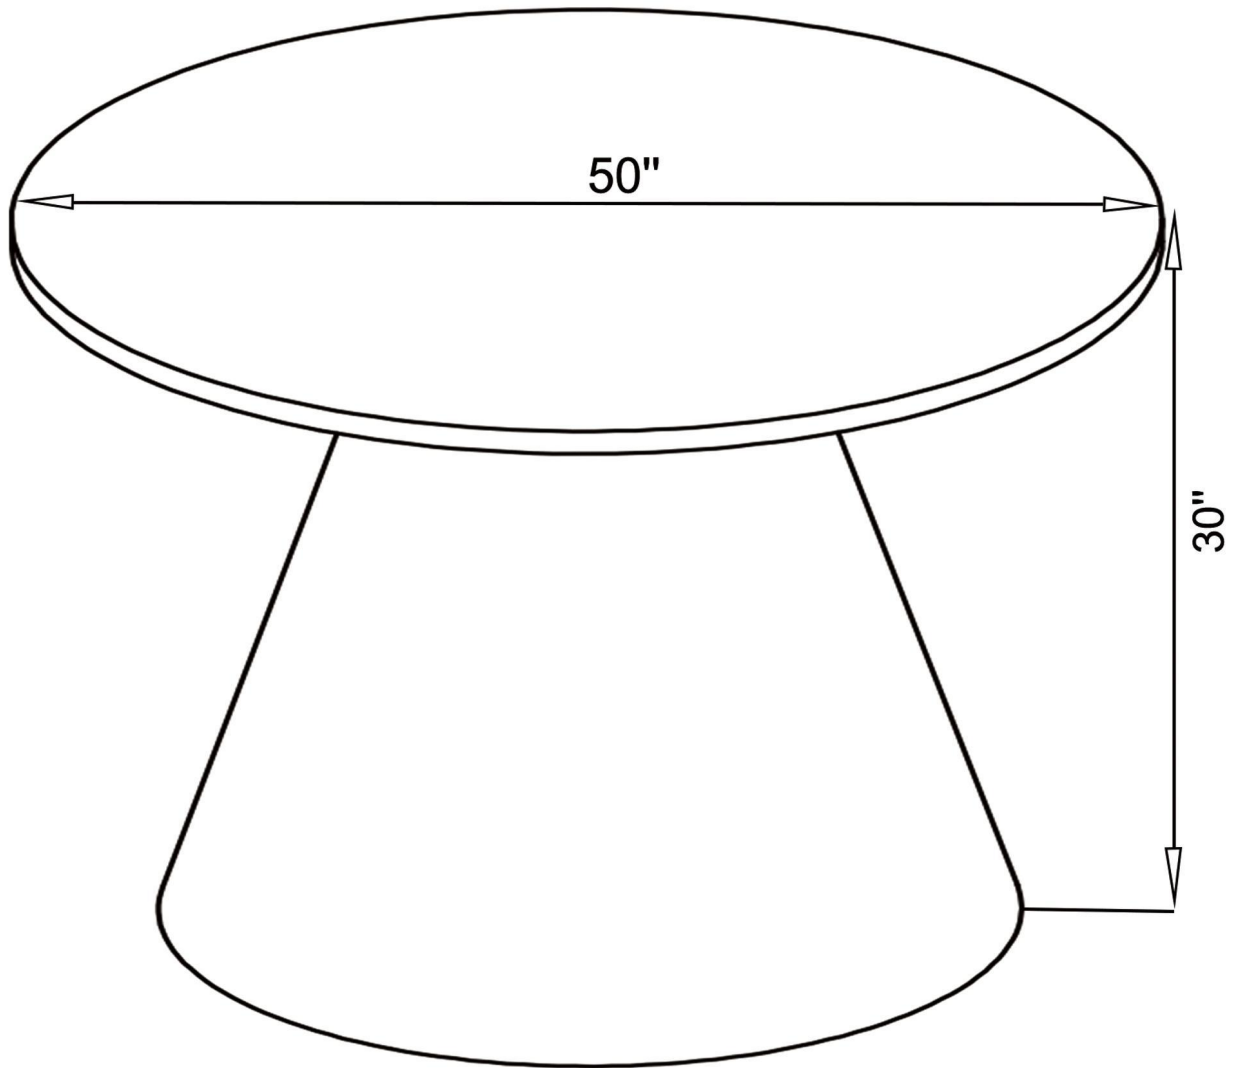

Note :Dimension tolerance $\pm 5\%$

